

480/482 Legend Series Configuration Menus

(Press Menu Key to enter, also available when Configuration switch is pressed)

AUDIT		TARE	UNITID	ACCUM	TIMDAT	SETPNT	SERIAL			ETHNET				USB		PFRMAT	VERS	MISC						
CALIB	CONFIG	Enter Tare	Enter ID	VIEW	TIME	BATCHG	SETPT1-8	COM-1	COM-2	STREAM	DHCP	IPADRS	NETMSK	DFTGWY	MAC	SERVER	CLIENT	DEVICE	TRIGGER	GFMT	FIRMLR	POWER	BKLGHT	BAT
CNT	CNT			TIME	DATE	OFF	USER	TRIGGER	TRIGGER	NONE	ON	Enter	Enter	Enter	View	TRIGGER	TRIGGER	HOSTPC	DEMAND	NFMT		MANUAL	OFF	BAT LEVEL
TIME	TIME			DATE	DATE	AUTO	VALUE	BAUD	BAUD	LOCAL	OFF	Value	Value	Value	Only	TIMEOUT	TIMEOUT	DRIVE	COMAND	ACCFMT		ON		
DATE	DATE			PRINT	CLR Y	MANUAL	ENABLE	BITS	BITS	REMOTE						TERMIN	TERMIN	PRINTR		SPFMT		AUTO		
				CLR Y				SBITS	SBITS							PORT	PORT							
								TERMIN	TERMIN							EOLDLY	RMOTIP							
								EOLDLY	EOLDLY							ECHO	EOLDLY							
								ECHO	ECHO								ECHO							
								PRNMSG	PRNMSG															
								STRUR	STRUR															

Shaded menus indicate lower level values, selections or settings are not shown.

(Press Configuration Switch to enter)

CONFIG	FORMAT	CALIBR	PROGRM	DIG IN	ALGOUT	PASWRD	USBMEM	TEST	MENU																					
						CNFG	USER	SAVE	LOAD	ADTEST	NWGMNT	WGMNST	DIGIN	DIGOUT	ALGOUT	DEFLT	See Menu Above													
						Enter	Enter			Raw A/D	TOTAL	999999	1-4	1-4	0	Press G/N														
						Value	Value			Counts	OVRCAP		VIEW	HI	25%															
														LOW	50%															
															100%															
						SOURCE	OFFSET	ERRACT	MIN	MAX	MINNEG	MAXNEG	TWZERO	TWSPAN	OUTPUT															
						GROSS	0%	FULLSC	Enter	Enter	NO	NO	Enter	Enter	CURRENT															
						NET	20%	HOLD	Value	Value	YES	YES	Value	Value	VOLTAGE															
						ZEROSC																								
						DIGIN1-4																								
						OFF	ZERO	TARE	NT-GRS	UNITS	DPSTAR	PRINT	CLRCN	KBDLOC	HOLD	CLRTAR	ACCUM	CLRACC	BATSTR	BATSTP	BATRES	BATPUS	BATRUN	NET	GROSS	PRI	SEC			
						PWRUPM	REGULA	CONSNU	CONSTU	ACCUM	RTZGRD	DATE	TIME	SLEEP	STDBY	WGTHRH	DDTHRH													
						GO	NTEP	0-	0-	OFF	Enter	DATFMT	DATSEP	NEVER	1 SEC	0-FS	0-													
						DELAY	OIML	999999	999999	ON	Value	MMDDYY	SLASH	1 MIN	2 SEC		999999													
							CANADA					DDMMYY	DASH	2 MIN	3SEC															
							NONE					YYMMDD	SEMI	5 MIN	5 SEC															
												YYDDMM		10 MIN	10 SEC															
														60 SEC																
														OFF																
						WZERO	WVAL	WSPAN	REZERO																					
						CAL	EDIT	Enter	CAL	EDIT	"ZERO"																			
						"ENTER"	Enter	Value	"ENTER"	Enter	Press																			
						Press	Value		Press	Value	Enter																			
						Enter			Enter																					
						PRIMAR	SECNDR																							
						DECPNT	DSPDIV	UNITS	DECPNT	DSPDIV	UNITS																			
						888888	1d	LB	888888	1d	LB																			
						8.88888	2d	KG	8.88888	2d	KG																			
						88.8888	5d	OZ	88.8888	5d	OZ																			
						888.888	10d	TN	888.888	10d	TN																			
						8888.88	20d	T	8888.88	20d	T																			
						88888.8	50d	G	88888.8	50d	G																			

Menu Navigation

Edit Numeric Values

0 0 0 0 0 0

When editing numeric values, press ◀ or ▶ to change the digit selected. Press ▲ or ▼ to increment or decrement the value of the selected digit. Press ⏪ to save the value entered and return to the level above.

Level Layout

Level 1

Level 2

Level 3

Level 4

All levels are scrolled through using ◀ or ▶. Level four is shown as a vertical list for illustration purpose only.



230 W. Coleman St. • Rice Lake, WI 54868 • USA
 U.S. 800-472-6703 • International 715-234-9171

www.ricelake.com

© Rice Lake Weighing Systems Specifications subject to change without notice.
 Rice Lake Weighing Systems is an ISO 9001 registered company.