



USER'S MANUAL



IMPORTANT

- Read this manual thoroughly, and do not perform installation, operation, maintenance, or inspection unless you fully understand all of the contents.
- Keep this manual in a safe place where you can refer to it easily while installing, operating, and carrying out maintenance or inspections.



TABLE OF CONTENTS

	ter 1 BEFORE USIN	G THE MACHINE1-1
1.1	Part Names and Functi	ons1-2
	1.1.1 Appearance	
1.2		1-4
1.3	•	1-5
1.4		1-7
1.5	Use of Cleaning Film	1-8
-		IU2-1
2.1		
2.2		play Fields2-3
2.3		ed Price Products2-6
2.4		e List2-7
2.5		2-11
		2-11
		hange 2-14
	-	nge2-14
	•	t
	2.5.8 Fixed Weight Print	
Chan		DD MENU
3.1		ry
-		
0.0	Addition	2-6
	Addition	
Chap	oter 4 TOTAL MENU	4-1
Chap 4.1	oter 4 TOTAL MENU Total Menu Entry	4-1 4-2
Chap 4.1	oter 4 TOTAL MENU Total Menu Entry Daily / Cumulative Tota	4-1 4-2 /s4-3
Chap 4.1	oter 4 TOTAL MENU Total Menu Entry Daily / Cumulative Tota 4.2.1 Total Production	
Chap 4.1	oter 4TOTAL MENUTotal Menu EntryDaily / Cumulative Tota4.2.1Total Production4.2.2Total Sales per Dep	4-1 4-2 Is4-3 wartment4-5
Chap 4.1	Diter 4 TOTAL MENU Total Menu Entry Daily / Cumulative Tota 4.2.1 Total Production 4.2.2 Total Sales per Dep 4.2.3 Total Sales per Gro	4-1 4-2 Is 4-3 4-4 partment
Chap 4.1	ActionActionActionTotalMenuEntryDaily/ CumulativeTotal4.2.1TotalProduction4.2.2TotalSales4.2.3TotalSales4.2.4TotalSalesbyPLU	4-1 4-2 1s 4-3 4-4 partment 4-5 up 4-6 4-7
Chap 4.1	ter 4TOTAL MENUTotal Menu EntryDaily / Cumulative Tota4.2.1Total Production4.2.2Total Sales per Dep4.2.3Total Sales per Gro4.2.4Total Sales by PLU4.2.5Total Gross Profit b	4-1 4-2 Is 4-3 4-4 partment
Chap 4.1	ActionActionActionTotalMenuEntryDaily/ CumulativeTotalA.2.1TotalProduction4.2.2TotalSales4.2.3TotalSales4.2.4TotalSales4.2.5TotalSales4.2.6TotalMarkdown	4-1 4-2 Is
Chap 4.1	ActionActionActionTotalMenuEntryDaily/ CumulativeTotalA.2.1TotalProduction4.2.2TotalSales per Dep4.2.3TotalSales per Gro4.2.4TotalSales per Gro4.2.5TotalSales by PLU4.2.6TotalGross4.2.7TotalDesignated	4-1 4-2 Is 4-3 4-4 partment 4-5 up 4-6 4-7 4-7 y PLU 4-8 m 4-9 LU 4-10
Chap 4.1	ActionActionActionTotalMenuEntryDaily/ CumulativeTotal4.2.1TotalProduction4.2.2TotalSales per Dep4.2.3TotalSales per Grown4.2.4TotalSales per Grown4.2.5TotalSales by PLU4.2.6TotalGross4.2.7TotalDesignated P4.2.8TotalDesignated P	4-1 4-2 Is 4-3 4-4 partment 4-5 up 4-6 4-7 4-7 y PLU 4-8 m 4-9 LU 4-10 4-11
Chap 4.1	ActionActionActionTotalMenuEntryDaily/ CumulativeTotalDaily/ CumulativeTotal4.2.1TotalProduction4.2.2TotalSales per Dep4.2.3TotalSales per Gro4.2.4TotalSales per Gro4.2.5TotalSales by PLU4.2.6TotalGross4.2.7TotalMarkdown4.2.8TotalDesignated P4.2.9DailyTotalHourlyAction	4-1 4-2 Is 4-3 4-4 partment 4-5 up 4-6 4-7 y PLU 4-8 m 4-9 LU 4-10 4-11 4-13
Chap 4.1 4.2	ActionActionActionActionActionActionActionActionActionActionActionActionActionActionActionActionActionActionActionActionActionActionActionActionActionActionActionActionActionActionActionActionActionActionActionActionActionAction	4-1 4-2 Is 4-3 4-4 partment 4-5 up 4-6 4-7 4-7 y PLU 4-8 m 4-9 LU 4-10 4-11 4-13 4-14
Chap 4.1 4.2	Atter 4TOTAL MENUTotal Menu EntryDaily / Cumulative Tota4.2.1Total Production4.2.2Total Sales per Deg4.2.3Total Sales per Gro4.2.4Total Sales per Gro4.2.5Total Sales by PLU4.2.6Total Gross Profit b4.2.7Total Designated P4.2.8Total PLU Analysis4.2.9Daily Total Hourly A4.2.10ACCWeekly Total	4-1 4-2 Is 4-3 4-4 partment 4-5 up 4-6 4-7 y PLU 4-8 m 4-9 LU 4-10
Chap 4.1 4.2	ActionActionActionActionActionActionActionActionActionActionActionActionActionActionActionActionActionActionActionActionActionActionActionActionActionActionActionActionActionActionActionActionActionActionActionActionActionActionActionActionActionActionActionActionActionActionActionActionActionActionActionActionActionActionActionActionActionActionActionActionActionActionActionActionActionActionActionActionActionActionActionActionActionActionActionActionActionActionActionActionActionActionActionActionActionActionActionActionActionActionActionActionActionActionActionActionActionActionActionActionActionActionActionActionActionActionActionActionActionActionActionActionActionAc	4-1 4-2 Is 4-3 4-4 partment 4-5 up 4-6 4-7 4-7 y PLU 4-8 m 4-9 LU 4-10 4-11 4-13 4-14

4.4	All Totals	4-18
4.5	Non-Movement PLU	4-20
4.6	Preset Report	4-22
	Total Clear	
4.8	Total Label Print Count	4-26

Chap	oter 5	PROGRAM MENU	5-1
-		am Menu Entry	
5.2	-	Pata Registration	
		Changing Unit / Fixed/Markdown Prices	
	5.2.2	Registering Product Data	
5.3	Produ	ct Name Registration	5-16
5.4		lient Name Registration	
5.5	-	lessage Registration	
5.6		Name/Address Registration	
		Store Name Registration	
	5.6.2	Store Address Registration	5-27
	5.6.3	Cassette Link Registration	5-29
	5.6.4	Your Store Registration	5-30
5.7	Print 1	Filtle Registration	5-31
		Print Title Registration	
5.8		on Registration	
5.9		lessage 1 – 5 Registration	

Chap	oter 6	SETUP MENU	6-1
		o Menu Entry	
6.2	Data /	/ Time Setting	6-3
6.3	Expir	y Date Setting	6-4
6.4	Passv	word Setting	6-6
6.5	Prese	et Key Setting	6-7
	6.5.1	Creating New Preset Page	
	6.5.2	Changing Preset Page	
	6.5.3	Setting Function Page	
	6.5.4	Setting Preset Keys	
	6.5.5	Coloring Preset Keys	6-17
	6.5.6	Copying Preset Key Page	6-19
	6.5.7	Deleting Preset Page	6-21
	6.5.8	Changing Preset Key Size	6-23
	6.5.9	Linking Preset Page with Cassette	6-24
6.6	Refer	ence Data Setting	6-25
6.7		Setting	
6.8		et Report Setting	
6.9	Casse	ette Link Setting	6-30

Appendix Text Editing	A-1
Function Keys	A-1
Shift ON / OFF	A-2
Text Editing Example:	A-3
Emphasizing Characters	A-5
Erasing Entire Text	A-8
Back Spacing	A-9
Deleting a Character	A-10
Inserting a Character	A-11
Copying Original Text to Designated Field	A-12

IMPORTANT NOTICES

No patent liability is assumed with respect to the use of the information contained herein. Moreover, because ISHIDA is constantly striving to improve its high-quality products, the information contained in this manual is subject to change without notice. Every precaution has been taken in the preparation of this manual. Nevertheless, ISHIDA assumes no responsibility for errors or omissions. Neither is any liability assumed for damages resulting from the use of the information contained in this publication.

ISHIDA assumes no responsibility for special, indirect, or consequential damages, loss of profits or commercial loss in any way connected with the machine, whether such claim is based on contract, warranty, negligence, or strict liability.

ISHIDA shall assume responsibility for problems with the machine or the system based on an individual maintenance contract. However, ISHIDA shall not be responsible for secondary problems.

ISHIDA assumes no responsibility for the user's programming of this machine, or any consequence thereof.

In no event shall ISHIDA be responsible for warranty, repair, or other claims regarding the machine unless ISHIDA's analysis confirms that the machines were properly handled, stored, installed, and maintained and not subject to contamination, abuse, misuse, or inappropriate modification or repair.

Those who handle the machine must be aware of the hazards involved. These dangers may not be obvious, so it is imperative to follow the instructions detailed in this manual when installing, operating, inspecting, or servicing the machine. Therefore, we recommend that you thoroughly read and understand this manual before installing, operating, inspecting, or servicing the machine. ISHIDA is not liable for any damage, loss or injury that results from incorrect operation, insufficient

caution, unauthorized modifications to the machine, or failure to follow the instructions contained in this manual.

In the recent weighing industry, the latent hazards involved with handling the machine have increased due to new materials, new processing methods, and higher processing speeds, and it is impossible to predict all of the possible dangers.

Likewise, there are far too many operations that cannot or should not be performed to fully describe all of them in the manual. Please assume that any operation not specifically described in this manual should never be performed.

Safety countermeasures should be carefully considered and implemented before performing any installation, operation, inspection, or maintenance procedure not specifically described in this manual or indicated on the machine itself.

Machine specifications and accessories may be changed at any time due to improvements or other reasons. Consult with your ISHIDA representative at any time to confirm the actual specifications of the purchased machine.

The information in this manual has been carefully checked and is believed to be accurate; however, no responsibility is assumed for clerical, typographical or proofreading errors, or omissions.

CAUTIONARY NOTICES


This machine is manufactured for use according to proper procedures by a qualified person and only for the purposes described in this manual. The following symbols are used in this manual. Always heed the information provided in this manual. Failure to heed precautions can result in personal injury or property damage.

Indicates a potentially hazardous situation which, if not avoid result in serious injury or death. Additionally, there may be sign property damage.	
	Indicates a potentially hazardous situation where, if not avoided, may result in minor or moderate injury or in property damage.

NOTE	Indicates a reminder or emphasis of information.	
Indicates reference information for operation.		
REFER	Indicates the referred page for operation.	

PRECAUTIONS FOR SAFE USE

Heed the following precautions information provided in this manual for your safety.

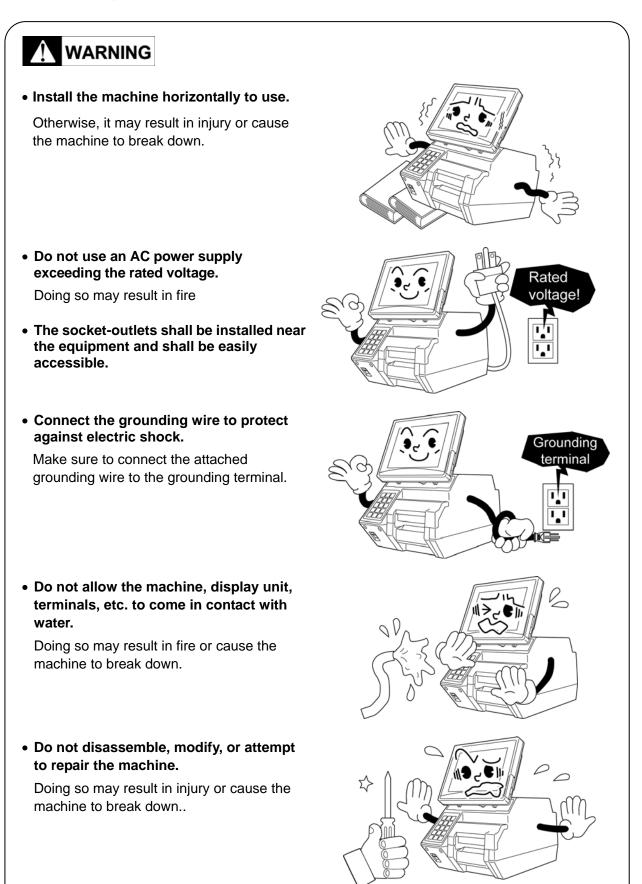


• Do not hold the display when carrying the machine.

Dropping the machine may result in injury or cause the machine to break down.


• Handle with care so as not to squeeze your finger in the machine.

Careless handling may result in injury or cause the machine to break down.



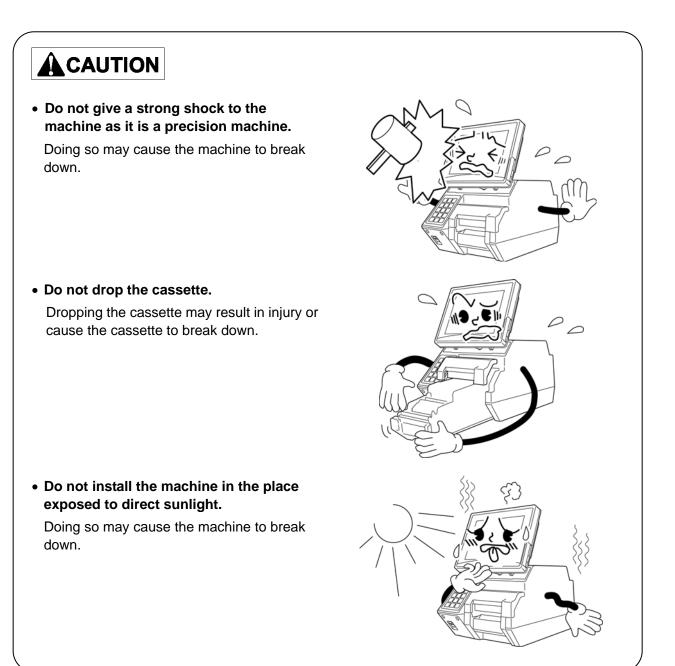

- Use a soft cloth or the neutral detergent when cleaning this machine.
- Do not use thinner, benzene, etc.
- Do not use cleaning fluid near a fire as the fluid is flammable.
- Do not use cleaning fluid in a poorly ventilated area. Always provide adequate ventilation when cleaning.

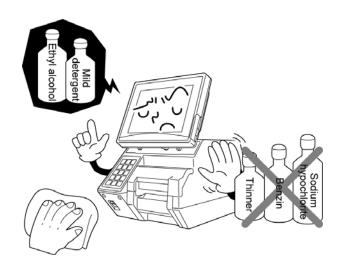

Take the following actions in the event of an accident:

➤ If the fluid gets in your eye

- Immediately wash your eye(s) with water for at least 15 minutes, and consult your doctor.
- If you wear contact lenses, remove and wash them.

> If the fluid comes into contact with your skin

- Immediately rinse the area of contact with water, and then wash with soap.
- If you notice any skin abnormalities at the area of contact, or if any pain persists, consult your doctor.

➢ If the fumes of the fluid are inhaled

- Immediately move the victim to an area where fresh air is available, and have the victim lie down and keep warm.
- If breathing becomes difficult or stops, provide artificial respiration and seek medical attention immediately.

➤ If the fluid is swallowed

- Do not try to induce vomiting.
- Do not give the victim anything to drink, and do not rinse the mouth.
- If vomiting occurs naturally, have the victim lean forward to reduce risk of aspiration.
- Keep the victim warm and seek medical attention.


Chapter 1

BEFORE USING THE MACHINE

1.1 PART NAMES AND FUNCTIONS

1.1.1 APPEARANCE

Front Face

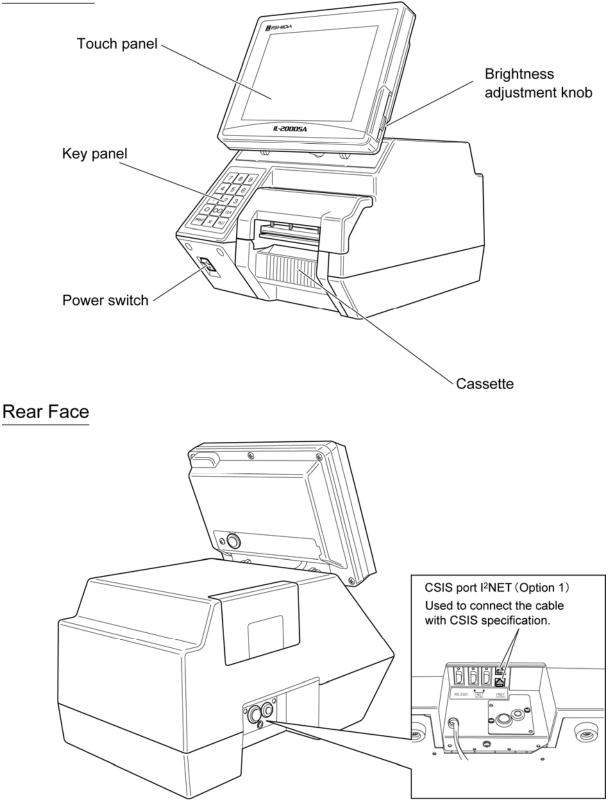

1.1.2 KEYPAD


7	8	9
4	5	6
1	2	3
Ο	00	CLR
PRINT	×	PLU

NUMERIC Used to enter numeric values (0 - 9, 00).
CLR Used to delete the entered numeric value or release an error condition.
PRINT Used to issue labels or receipt.
× Used to sell multiple quantities of the same fixed price item.
PLU Used to call up a PLU data registered in the PLU master file.

1.2 POWER ON




Socket-outlets shall be installed near the equipment and shall be easily accessible. **1.** Confirm that the power switch is turned off, and insert the power plug into the electrical outlet.

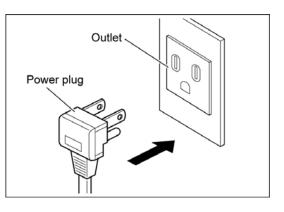




When you cannot see the display clearly, adjust the display angle and screen brightness by using the adjustment knob. 2. Push the "I" side of the power switch to turn on the power.


The opening screen appears. After a short while, the initial screen will appear.

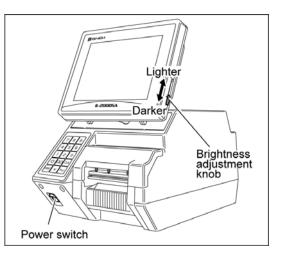


1.3 LABEL ROLL SETTING

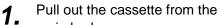

main body.

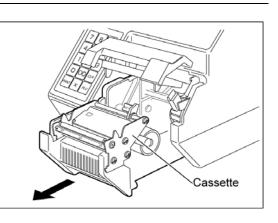


2. Insert a label roll into the roll holder.

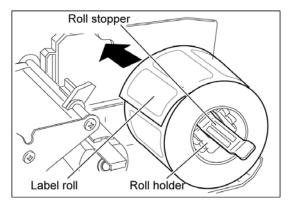

<u>NOTE</u>

Confirm that the label roll can be rotated and the gap between the roll and the roll stopper is within 0.5 - 2.0mm range.

3. Slide the roll stopper in or out according to the roll width, and raise the stopper lever to fix the roll.

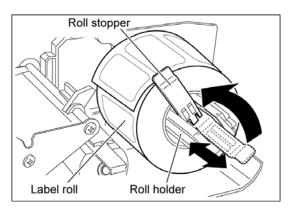






little.

For smoother


threading, fold the paper end a **4.** Thread the end of the roll paper ① through ⑤ as shown in the figure.

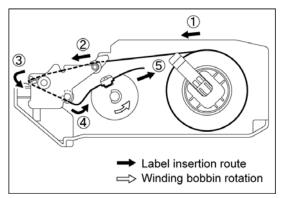

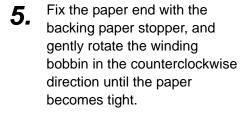

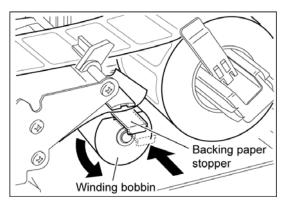


6. Slide the label guide to fit the backing paper width. In this case, confirm that the paper passes under the protruding portion of the label guide.

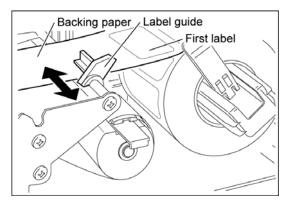




the cassette so as not to get your finger caught between the cassette and the main body. **7.** Insert the cassette straight into the main body.

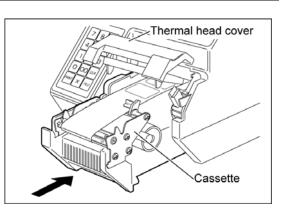

8. Press the [FEED] button on the screen.




A label is issued and stops at the peeling position.

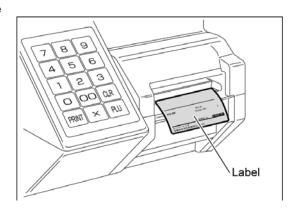


1.4 PRINTER PARTS CLEANING

This section explains about cleaning the thermal head, print roller, label sensor, and prism. Daily cleaning is recommended for securing better printing quality and normal label issue.


1. Pull out the cassette from the main body.

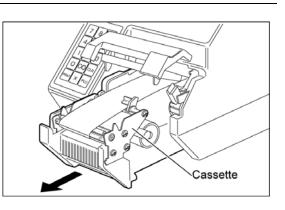

NOTE Make sure to use the attached cleaning fluid. 2. Apply the cleaning fluid to the attached cleaning pen, and wipe to clean the thermal head with the pen.

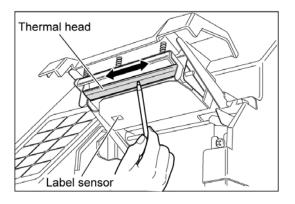



3. Wipe to clean the print roller and the prism with the cleaning pen.

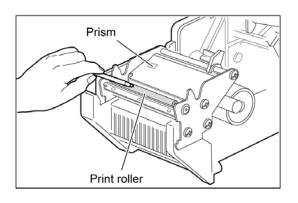




Carefully insert the cassette so as not to get your finger caught between the cassette and the main body.

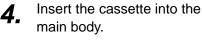

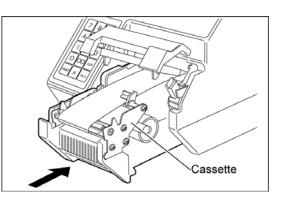


USE OF CLEANING FILM 1.5

When you cannot remove the stain of the head, use the attached cleaning film.

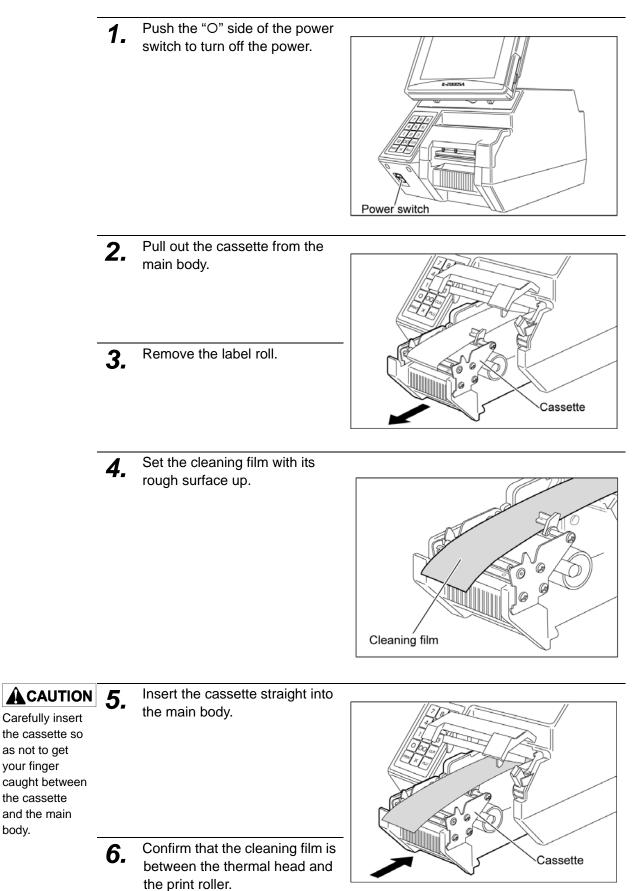


your finger

body.

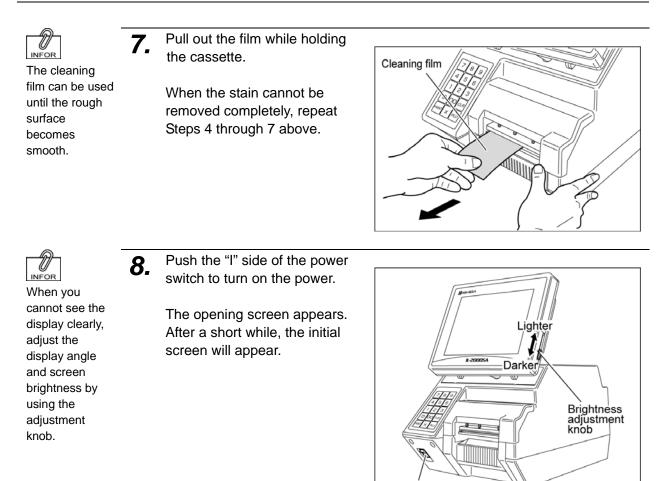


Power switch

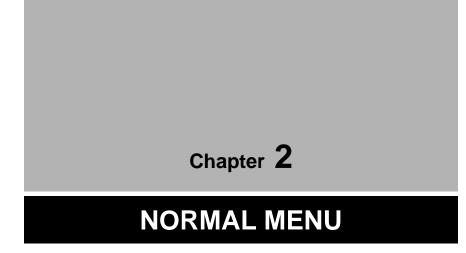

2.1 NORMAL MENU ENTRY


Normal Menu is used to perform daily operations. The initial screen appears on the display when the machine is turned on. To access the initial screen from the Main Menu screen, press the [NORMAL] button on the Main Menu.

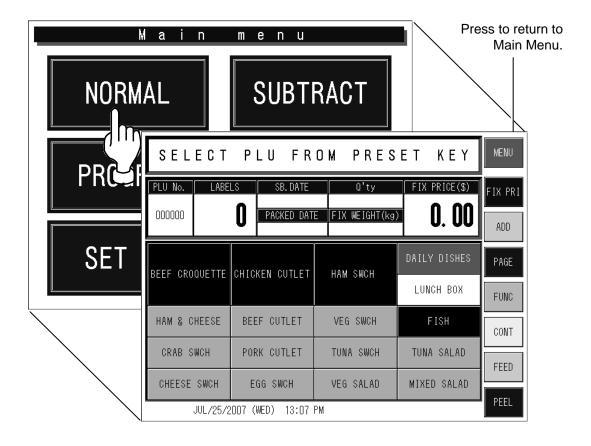


2.2 TOUCH BUTTONS AND DISPLAY FIELDS

2.2.1 TOUCH BUTTONS

Fixed Price Screen

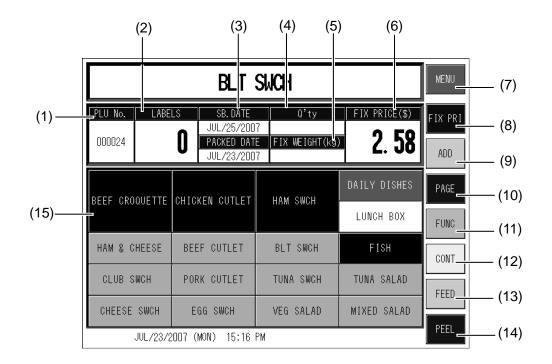


Unit Price Screen

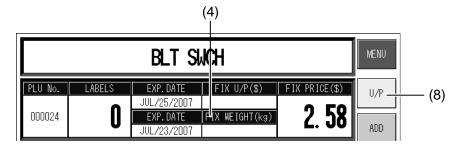


- (1) Used to call up a product list.
- (2) Used to display the number of labels.
- (3) Used to change the date. Date change screen appears when pressed directly.
- (4) Used to change the number of pieces for a fixed price product.
- (5) Used to enter or change the weight of a product.
- (6) Used to change the fixed price of a product.
- (7) Used to display the main menu screen.
- (8) Used to change from a fixed price sale to a unit price sale.[FIXED PRICE] Used to sell a product at the fixed price.[UNIT PRICE] Used to sell a product at the unit price.
- (9) Used to select one of the following modes:[ADD] Used to add the production data to totals.[NO PRN] Used not to print labels.
 - [NO ADD] Used not to add the production data to totals.
- (10) Used to change the page.
- (11) Used to display the function page.
- (12) Used to select continuous label issue or single label issue.
- (13) Used to feed labels to adjust the print position.
- (14) Used to select label issuing method, either labels are peeled off or issued with backing paper.
- (15) Preset keys used when a product is selected.

2.2.2 DISPLAY FIELDS


Fixed Price Screen

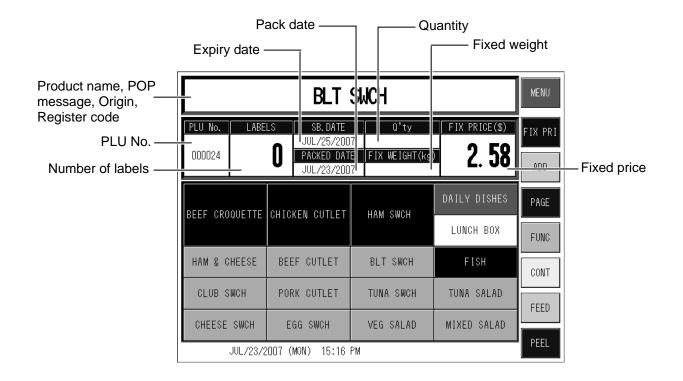

Unit Price Screen

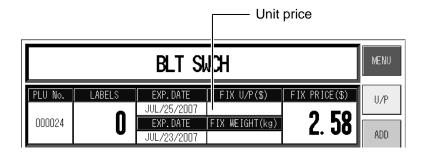

2.3 DAILY OPERATION FOR FIXED PRICE PRODUCTS

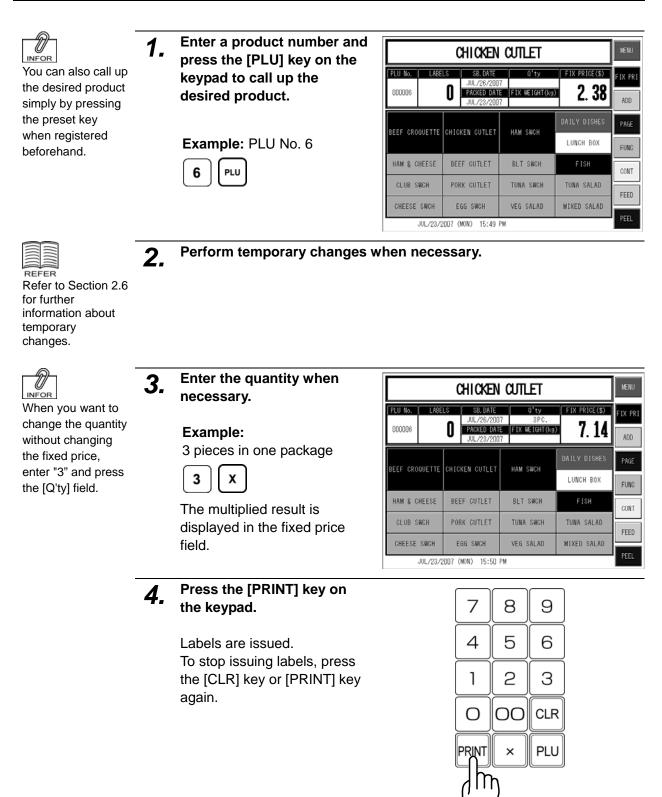

2.4 PRODUCT CALL-UP FROM THE LIST

When you do not clearly remember the PLU number, you can display the product list with products around the input number and press to select the desired product on the screen.

Г	—— Pr	ess to displays the	e product list.			
SE_	ECT	PLU FROM	PRESET	KEY		
PLV No.	LABELS	DISPLAY PRO		X PRICE(\$) FIX PRI (28) RETURN	<u>\</u> ∎∣	
		DISPLAT PRO	DOCI LISI	(28)		Press to returns to the
	000001	Roast Beef	000015	CHICKEN CUTLET		initial screen.
BEEF CR	000002	BEEF CROQUETTE	000016	Ham Such		
	000003	BEEF STEW	000017	DAILY DISHES		
	000004	gouda cheese	000018	LUNCH BOX		
HAM &	000005	GRUYERE CHEESE	000019	FISH		
	000006	CHICKEN CUTLET	000020	TUNA SALAD		
CRAB	000007	PORK LOIN	0000E1	Mixed Salad		
	000008	PORK BACK RIBS	000022	Ham & Cheese		
CHEESE	000009	PORK CUTLET	000023	BEEF CUTLET		
Off line	000010	MIXED SALAD	000024	BLT SUCH		
	000011	INDIAN SALAD SALMON SALAD	000101	Club Swch Tuna Swch		
	000012	COOKED SALAD	000102	CHEESE SWCH		
	000013	BEAN SALAD	000103	EGG SWCH		
\setminus			,		_	
Press to c ▲ Previou ▼ Followin	is page	; ;		Press to change to be displayed o the product list page ered PLU number.		Imber of products list.



When you enter a PLU number you think it might be somewhere around this number and press the [PLU No.] field on the screen, the product list will appear with products centering on the input number.



When you can not find the desired product on the current page, change the page using the [▲] and [▼] buttons.



You can call up the desired product by entering the PLU number and pressing the [PLU] key on the keypad.

1. Press the [PLU No.] field on the screen.

The product list screen appears.

SELECT	PLU FR	OM PRES	ЕТ КЕҮ	MENU
	SB. DATE	O'ty E FIX WEIGHT(kg)	FIX PRICE(S)	FIX PR
BEEF	CHICKEN CUTLET	HAM SWCH	DAILY DISHES Lunch Box	PAGE
HAM & CHEESE	BEEF CUTLET	VEG SWCH	FISH	CONT
CRAB SWCH	PORK CUTLET	TUNA SWCH	TUNA SALAD	FEED
CHEESE SWCH	EGG SWCH 007 (WED) 13:07	VEG SALAD	MIXED SALAD	PEEL

2. Press to select the desired product on the list.

Example: PLU No.9

The product screen appears.

000001	Roast Beef	000015	CHICKEN CUTLET
000002	BEEF CROQUETTE	000016	Ham Such
000003	BEEF STEN	000017	DAILY DISHES
000004	gouda cheese	000018	LUNCH BOX
000005	GRUYERE CHEESE	000019	FISH
000006	CHICKEN CUTLET	000020	tuna salad
000007	PORK LOIN	000021	MIXED SALAD
800000	Pork Back RIBS	000022	Ham & Cheese
000009	PORK CUTLET	000023	BEEF CUTLET
000010	Hixed Salad	000024	BLT SUCH
000011	INDIAN SALAD	000101	CLUB SUCH
000012	Salmon Salad	000102	Tuna Such
000013	Cooked Salad	000103	CHEESE SUCH
000014	Bean Salad	000104	EGG SWCH



PORK CUTLET						
PLU No. 000009	LABE	LS ()	SB. DATE JUL/26/200 PACKED DAT JUL/23/200	E FIX WEIGHT(ks	FIX PRICE(\$)	FIX PRI Add
BEEF CRO	QUETTE	CHIC	KEN CUTLET	HAM SWCH	DAILY DISHES LUNCH BOX	PAGE
HAM & C	HEESE	BEE	F CUTLET	BLT SWCH	FISH	CONT
CLUB S	WCH	POF	RK GUTLET	TUNA SWCH	TUNA SALAD	FEED
CHEESE	SWCH	E	GG SWCH	VEG SALAD	MIXED SALAD	
	JUL/23/2	2007 (MON) 15:53	PM		PEEL

TEMPORARY CHANGES 2.5

You can perform temporary changes during operation when necessary. These changes will not be reflected on the registered product.

AMOUNT DISCOUNT 2.5.1

1.	Confirm that the desired product screen is displayed and press the [FUNCTION]	PLU
	button.	UUU

The function list appears on the screen.

Enter the discount amount

PORK CUTLET							
PLU No. 000009	LABE		SB. DATE JUL/26/200 PACKED DAT JUL/23/200	E FIX WEIGHT(kg	FIX PRICE(\$)	FIX PRI ADD	
BEEF CRO	OVETTE	сніск	EN CUTLET	HAM SUCH	DAILY DISHES	PAGE	
HAM & C	HEESE	BEEI	F CUTLET	BLT SWCH	FISH		
CLUB S	WCH	PORI	K CUTLET	TUNA SWCH	TUNA SALAD	HIL	
CHEESE	SWCH	EG	ig SWCH	VEG SALAD	MIXED SALAD		
	JUL/23/2	2007 (M	NN) 15:53	PM			

Ű INFOR Amount discount (-\$) button must be registered on the function page beforehand.

2.	Enter the discount amour and press the [-\$] button.
	Example:
	Discount amount \$0.50



PORK CUTLET						
PLU No. 000009	LABEI	LS SB. DATE JUL/26/20 PACKED DA JUL/23/20	TE FIX WEIGHT(kg	FIX PRICE(\$)	FIX PRI ADD	
- 9	6	-%	MARKDWN	DATE		
RE	100	P O P 000	origin 000	TOTAL	CATEGRY	
	T)	Keep OO	Comment 00	VOID	CONT	
	\$				FEED	
	JUL/23/2	007 (MON) 16:02	PM		PEEL	

INFOR

Percent discount (-%) button must be


registered on the function page

beforehand.

2.5.2 PERCENT DISCOUNT


1. Confirm that the desired product screen is displayed and press the [FUNCTION] button.

The function list appears on the screen.

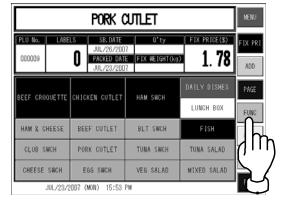

2. Enter the discount rate and press the [-%] button.

Example: Discount rate 10%

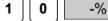

PORK CUTLET						
PLU No. DDDDDD9	LABELS	SB. DATE JUL/26/200 PACKED DATE JUL/23/200	E FIX WEIGHT(kg)	FIX PRICE(\$)	FIX PRI ADD	
- \$		-%	MARKDWN	DATE		
REG OO	10 F		origin 000	TOTAL	CATEGRY	
Temp 00		(חווק	Comment 00	VOID	CONT	
		\sum			FEED	
		$\mathbf{\nabla}$				
JUL	/23/2007(MON) 16:01 0	PM		PEEL	


2.5.3 MARKDOWN PRICE

1. Confirm that the desired product screen is displayed and press the [FUNCTION] button.

The function list appears on the screen.


PORK CUTLET								MENU
PLU No. 000009	LABE	0	SB. DATE JUL/26/200 PACKED DAT JUL/23/200	E FIX WEIGH		fix price	_	FIX PRI ADD
BEEF CRO	OVETTE	CHIC	KEN CUTLET	HAM SWCH		DAILY DIS LUNCH BO		
HAM & C	HEESE	BEE	F CUTLET	BLT SWC	н	FISH		រዀ
CLUB S	WCH	POR	K CUTLET	TUNA SWC	н	TUNA SAL	AD	Ľ
CHEESE	SWCH	E	GG SWCH	VEG SALA	D	MIXED SAL	.AD	\mathbf{r}
	JUL/23/2	007 (MON) 15:53	PM				


Markdown button must be registered on the function page beforehand.

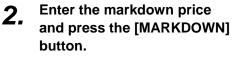

Example:

Markdown price \$1.20

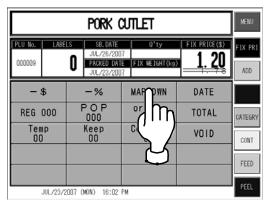

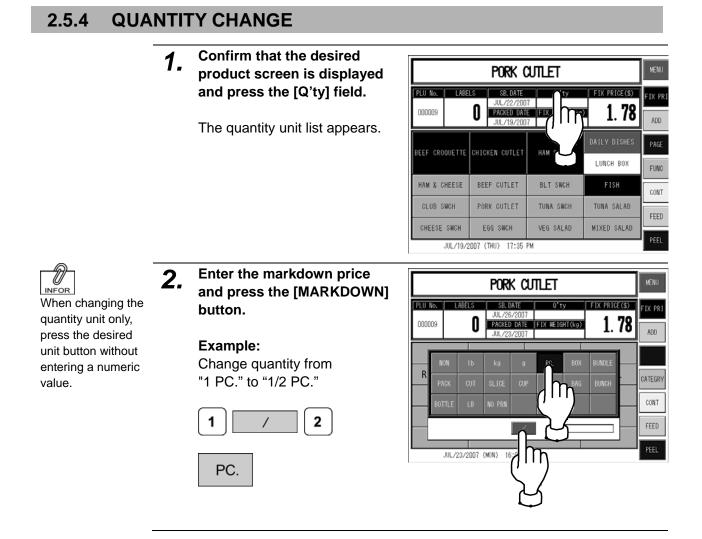

INFOR

Enter 8 digits when

changing month,

day, and year,

4 digits when

changing month


and day, or 2 digits

when changing day.

2.5.5 **SB./PACKED DATE CHANGE**

Press the [SB. DATE] or 1. [PACKED DATE] field.

> The date change screen appears.

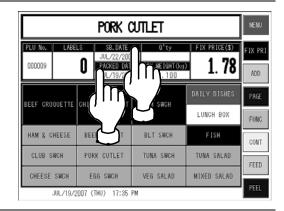


Change the date and press 2. the [SB DATE] field.

Example:

Change the expiry (sell-by) date from July 22, 2007 to July 21, 2007.

() ()	1
<u> </u>	Ŀ

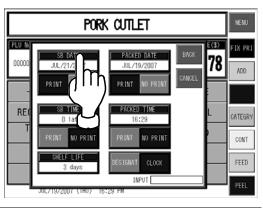

2.5.6 **REGISTER CODE CHANGE**

Confirm that the desired Û 1. INFOR product screen is displayed Register code and press the [FUNCTION] button must be button. registered on the function page The function list appears. beforehand. Change the data and press 2. the [REG] field.

Example:

3

Change the register code from "1" to "3".





PORK CUTLET


FIX PRICE(\$)

SB. DATE

1

PLU No.

PLU No. LABE	LS SB. DATE JUL/21/200 PACKED DAT JUL/19/200	E FIX WEIGHT(kg	FIX PRICE(\$)
PEEE OPAQUETTE	CHICKEN CUTLET	HAM SWCH	DAILY DISHES
	ONTOKEN COTEET	118# 3#01	LUNCH BOX
HAM & CHEESE	BEEF CUTLET	BLT SWCH	
CLUB SWCH	PORK CUTLET	TUNA SWCH	TUNA SALAD
CHEESE SWCH	EGG SWCH	VEG SALAD	MIXED SALAD
JUL/19/2	007 (THU) 16:59	PM	

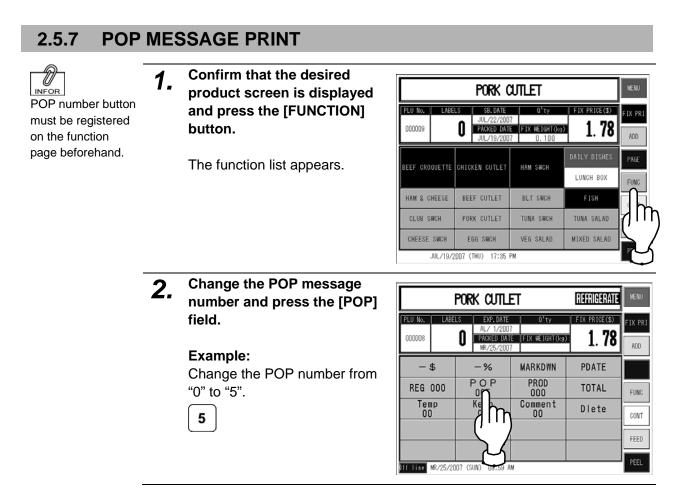

2.5.8 FIXED WEIGHT PRINT

- 1. Check that the desired
- product screen is displayed.


PORK CUTLET						
PLU No. LABE	LS EXP. DATE AL/ 1/200 PACKED DAT MR/25/200	E FIX WEIGHT(kg)	1. 78	FIX PRI ADD		
BEEF CROQUETTE	CHICHEN CUTLET	HAM SWCH	Daily dishes Lunch Box	PAGE		
HAM & CHEESE	BEEF CUTLET	VEG SWCH	FISH	CONT		
CRAB SWCH CHEESE SWCH	PORK CUTLET EGG SWCH	TUNA SWCH VEG SALAD	TUNA SALAD MIX SALAD	FEED		
Off line MR/25/20	107 (SUN) 10:10 A	M		PEEL		

2. Enter the weight and press the [FIX WEIGHT] field.

Example:

Print the fixed weight "100g" on labels.

	PC	RK	CUTLET			RE(COMMENDED	MENU
PLU No. 000009	LABE	0	SB. DATE JUL/21/200 PACKED DAT JUL/19/200	E FI	O'ty X WEIG	(g)	FIX PRICE(\$)	FIX PRI ADD
	\$		-%		ARKI		DATE	
REG	000		P O P 007	0	rigi. 000)	TOTAL	CATEGRY
Ten OC			Keep OO	Co	ommen. 00	Ĭ	VOID	CONT
								FEED
								055
	JUL/19/2	007 (THU) 16:36	PM				PEEL

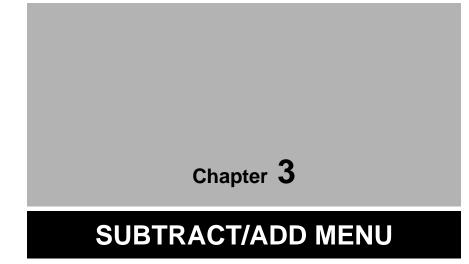

3.1 SUBTRACT/ADD MENU ENTRY

Subtract/Add Menu is used to subtract or add product data from or to production totals. Press the [MENU] button on the initial screen and press the [SUBTRACT] button on the Main Menu to enter Subtract/Add Menu.


MENU SELECT ΡLU FROM PRESET KEY Press to return to Main Menu. PLU No. FIX PRICE(\$) LABELS EXP. DATE Q'ty 0 0.00 000000 PACKED DATE FIX WEIGHT(kg) a i n М m е n u BEEF CROQUETTE CHIC NORMAL SUBTRACT HAM & CHEESE BEE POF CRAB SWCH m IT ADD/SUB TOTAL ADJU CHEESE SWCH Ε PROGF 0ff line FE/16/2007 (F NUMBER ADD ACC1 NUM ADD SET ACC2 NUM ADD ACC3 NUM ADD

IL-2000SA User's Manual


Note: When a password is programmed for accessing Subtract/Add Menu, enter the 6-digit password number using the keypad before pressing the [SUBTRACT] button. See section 6-4 "Password Setting".


3.2 SUBTRACTION

This function is to subtract quantity, weight, and price of a returned product from totals memorized in the machine.

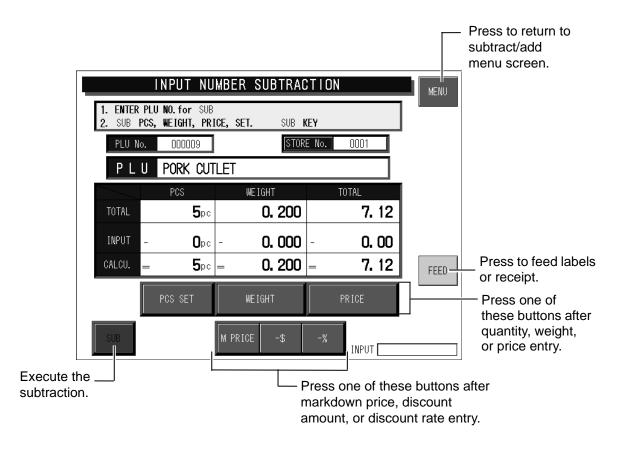

Example: Subtract one piece of "Pork Cutlet" at the price of \$1.00. (NUMBER SUB is used in this example.)

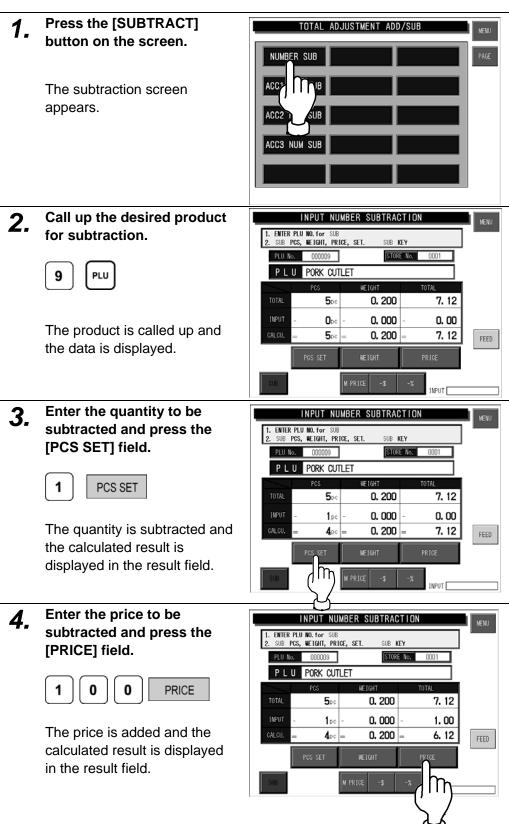


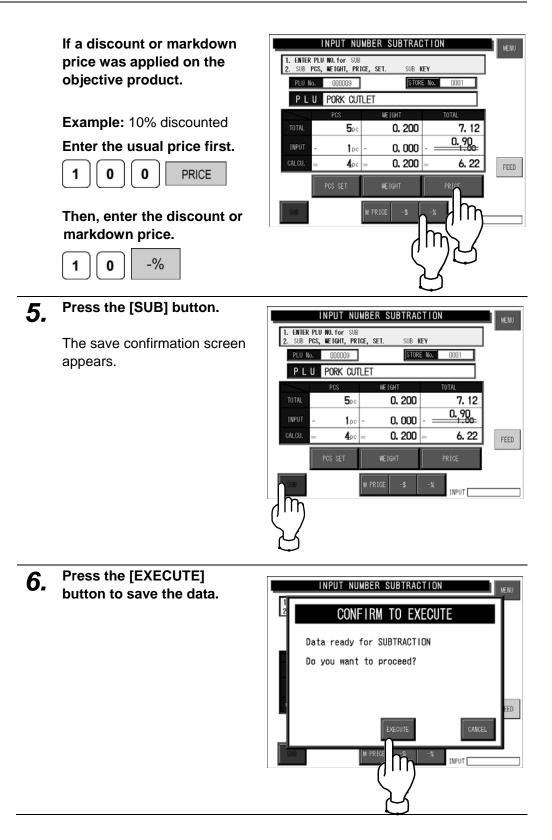

3.3 ADDITION

This function is to add quantity, weight, and price of a product to totals memorized in the machine.

Example: Add five pieces of "Pork Cutlet" at the total price of \$5.00. (NUMBER ADD is used in this example.)

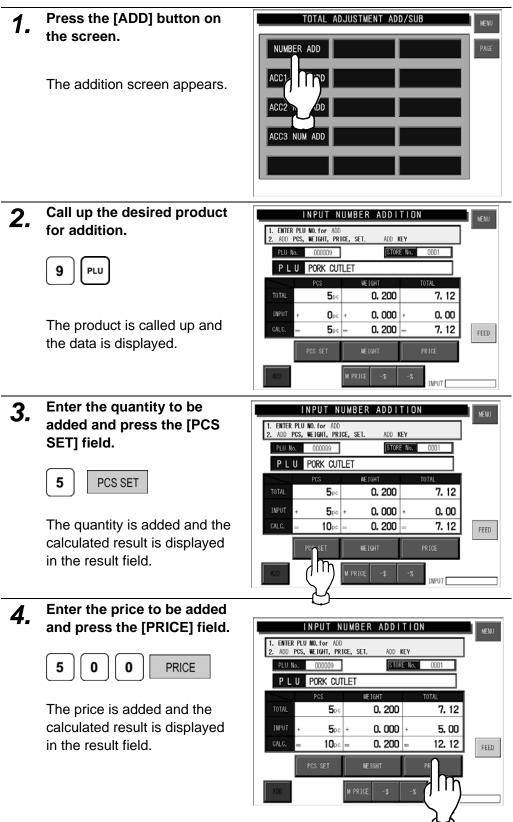


If a discount or markdown price was applied on the objective product.

Example:

Markdown price \$4.00

Enter the usual price first.

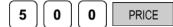


Then, enter the discount or markdown price.


4	0][0]	PRICE





Press the [ADD] button.

The save confirmation screen appears.

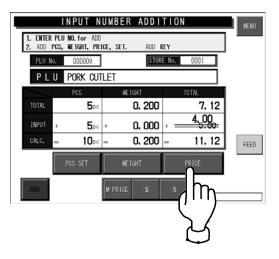

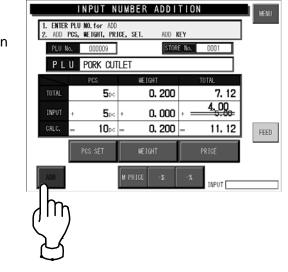

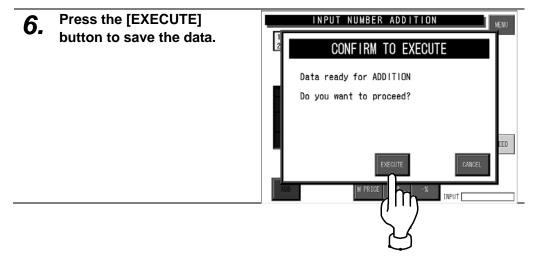


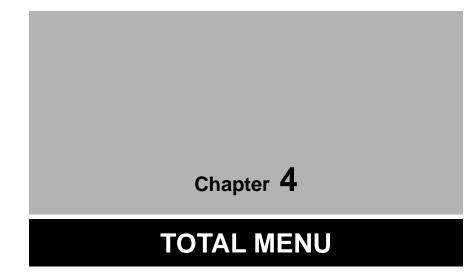

4.1 TOTAL MENU ENTRY


Various transaction totals can be obtained in Total Menu. Press the [MENU] button on the initial screen and press the [TOTAL] button on the Main Menu to enter Total Menu.

Note: When a password is programmed for accessing Total Menu, enter the 6-digit password number using the keypad before pressing the [TOTAL] button. See section 6-4 "Password Setting".

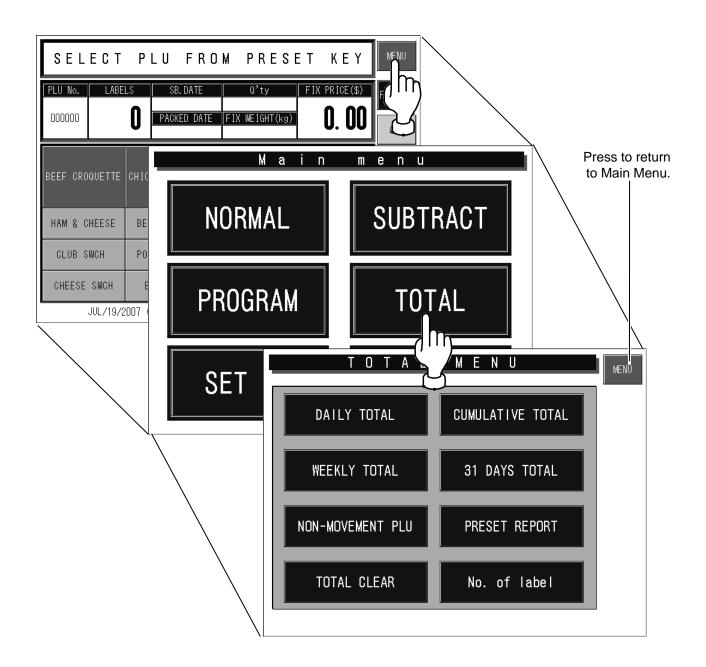

4.2 DAILY / CUMULATIVE TOTALS

Totals of various transactions performed on that day or for a certain period of time can be obtained. Press the [DAILY TOTAL] or [CUMULATIVE TOTAL] button on the Total Menu screen to display either Daily Total Menu or Cumulative Total Menu.

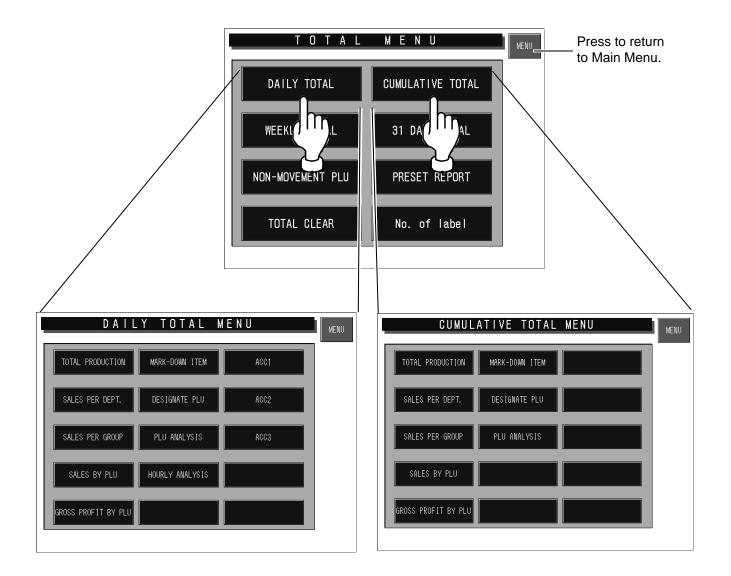

4.2.1 TOTAL PRODUCTION

<u>мемо</u> To print f


To print the total data, press the [PRINT] key on the keypad.



Press the [TOTAL PRODUCTION] button.

"Total Production" screen appears (Daily Total Menu is used in this example).


DAIL	Y TOTAL	MENU	MENU
TOTAL PRODUCTION	MARK-DOWN ITEM		
	DESIGNATE PLU		
SALES PE	PLU ANALYSIS		
SALES BY PLU	HOURLY ANALYSIS		
GROSS PROFIT BY PLU			

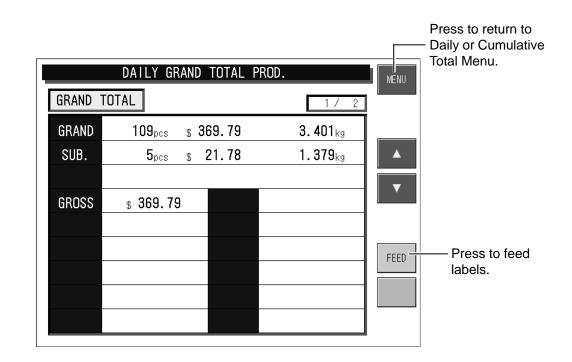

4.2.2 SALES PER DEPARTMENT




To print the total data, press the [PRINT] key on the keypad.

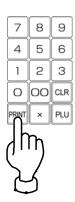

Press the [TOTAL SALES PER DEPT] button.

"Total Sales per Department" screen appears (Daily Total Menu is used in this example).

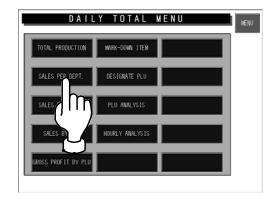

D/	AILY TOTAL SAL	ES PE	ER DEPT	•	MENU	Press to return to Daily or Cumulative Total Menu.
GRAND TTL AVERAGE	748 pcs 95 1.277 kg/pcs	5.120 ko 3	3 \$ 2 .20 \$/pcs	2397.29		Press to change the previous page
CATEGORY	DEPARTMENT NAME	PCS	WEIGHT(kg)	PRICE(\$)		Press to scroll
1	DEPT. 1	120	153.774	385.97		up the line.
2	DEPT. 2	119	151.863	381.17	▼⊥	Press to scroll
3	DEPT. 3	144	184.337	462.68		down the line.
4	DEPT. 4	80	102.200	256.51		Press to change
5	DEPT. 5	152	194.846	489.32		the next page
6	DEPT. 6	132	168.100	421.91	FEED	
						Press to feed
						labels
		1				


4.2.3 TOTAL SALES PER GROUP




Press the [SALES PER GROUP] button.

"Total Sales per Group" screen appears (Daily Total Menu is used in this example).

To print the total data, press the [PRINT] key on the keypad.

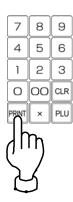

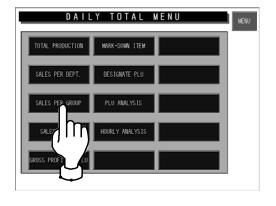

DA	ILY TOTAL SALE	ES PE	R GROU	P	MENU	Daily or Cumulative Total Menu.
GRAND TTL AVERAGE	748 pcs 95 1.277 kg/pcs	55.120 kg 3	g \$ 2 .20 \$/pcs	2397.29		Press to change the previous pag
CATEGORY	GROUP NAME	PCS	WEIGHT(kg)	PRICE(\$)		Press to scroll
1	GROUP 1	63	79.430	199.42		up the line.
2	GROUP 2	68	78.455	194.33	▼ ⊥	Press to scroll
3	GROUP 3	75	95.233	239.05		down the line.
4	GROUP 4	41	52.804	131.52	││ ¥ ⊥	Press to change
5	GROUP 5	49	100.667	252.16		the next page
6	GROUP 6	65	86.850	217.98	FEED	
7	GROUP 7	42	95.111	231.05		Press to feed
8	GROUP 8	39	50.998	230.90		labels
9	GROUP 9	80	99.101	131.16		
10	GROUP 10	61	88.208	215.98		

IL-2000SA User's Manual

4.2.4 TOTAL SALES BY PLU




To print the total data, press the [PRINT] key on the keypad.



Press the [SALES BY PLU] button.

"Total Sales by PLU" screen appears (Daily Total Menu is used in this example).

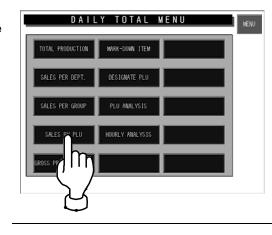

	DAILY TOTA	LBY	۶LU		MENU	Press to return to Daily or Cumulative Total Menu.
GRAND TTL	748 pcs	955.120 k	g \$	2397.29		Press to change the previous page
PLU No.	PRODUCT NAME	PCS	WEIGHT(kg)	PRICE(\$)		Press to scroll
1	PLU 1	13	9.430	99.42		up the line.
2	PLU 2	21	8.455	94.33		Press to scroll
3	PLU 3	12	5.233	39.05		down the line.
4	PLU 4	26	2.804	31.52	▼	Press to change
5	PLU 5	40	10.667	52.16		the next page
6	PLU 6	32	6.850	17.98	FEED	
7	PLU 7	18	5.111	31.05		Press to feed
8	PLU 8	25	10.998	30.90		labels
9	PLU 9	33	9.101	31.16		
10	PLU 10	19	8.208	15.98		

4.2.5 TOTAL GROSS PROFIT BY PLU




Press the [GROSS PROFIT BY PLU] button.

"Total Gross Profit by PLU" screen appears (Daily Total Menu is used in this example).

To print the total data, press the [PRINT] key on the keypad.



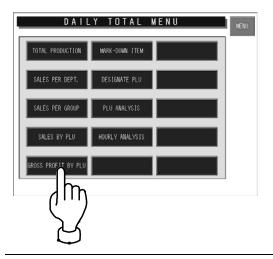

C	AILY TOTAL G	ROSS I	BY PLU		MENU	- Press to return to Daily or Cumulative Total Menu.
GRAND TTL	\$ 344372.65 TOTAL GRO	SS \$47523.	43 GROSS	RATE 13.8%		Press to change the previous page
PLU No.	PRODUCT NAME	GROSS%	GROSS(\$)	PRICE(\$)		Press to scroll
1	PLU 1	19.8	1974.29	9971.15		up the line.
2	PLU 2	12.6	1575.17	12501.31	▼	Press to scroll
3	PLU 3	14.0	24.24	173.13		down the line.
4	PLU 4	10.3	51.78	502.72	¥ +	Press to change
5	PLU 5	12.4	1536.46	12390.84		the next page
6	PLU 6	18.8	862.03	4585.26	FEED	_
7	PLU 7	10.7	1324.24	12376.07		Press to feed
8	PLU 8	16.6	394.70	2377.73		labels
9	PLU 9	19.1	301.15	1577.73		
10	PLU 10	17.9	2222.92	12418.56		

4.2.6 TOTAL MARKDOWN ITEM




To print the total data, press the [PRINT] key on the keypad.



Press the [MARKDOWN ITEM] button.

"Total Markdown Item" screen appears (Daily Total Menu is used in this example).

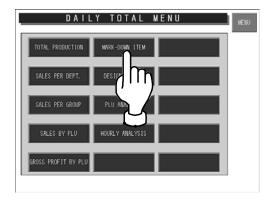



DA	AILY TOTAL M	ARKDO	WN ITEM		MENU	Press to return to Daily or Cumulative Total Menu.
GRAND TTL	255 pcs	46.611 k	g \$	514.11		Press to change the previous pag
PLU No.	PRODUCT NAME	PCS	WEIGHT(kg)	PRICE(\$)		Press to scroll
15	PLU 15	62	4.320	152.30		up the line.
21	PLU 21	90	19.151	175.45		Press to scroll
28	PLU 28	103	23.140	186.36		down the line.
					¥	Press to change the next page
					FEED	Press to feed labels

4.2.7 TOTAL DESIGNATED PLU

1. Press the [DESIGNATE PLU] button.

"Total Designated PLU" screen appears (Daily Total Menu is used in this example).

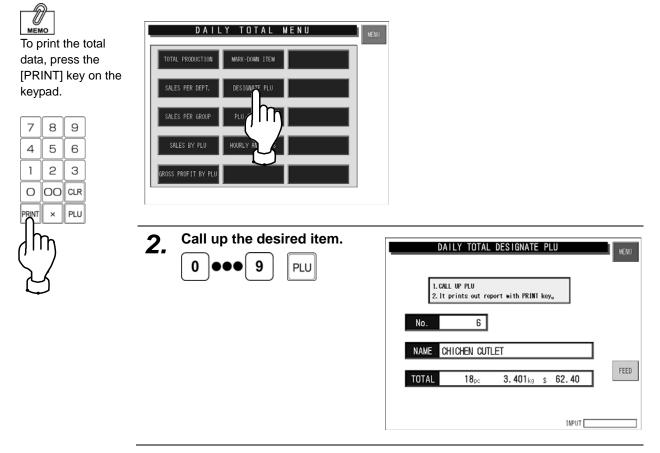


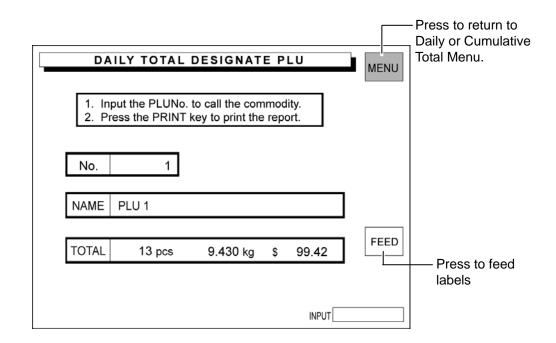



4.2.8 TOTAL PLU ANALYSIS

1. Press the [PLU ANALYSIS] button.


 "Daily Total PLU Analysis" screen appears (Daily Total Menu is used in this example).

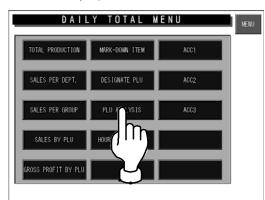

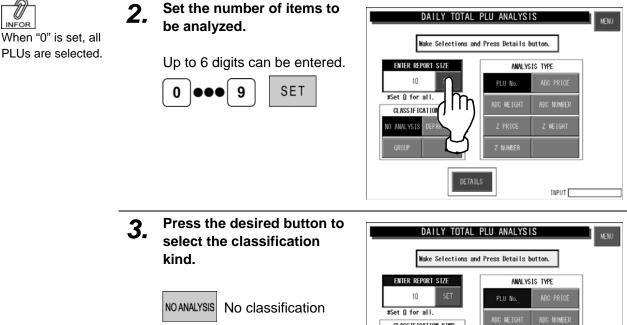

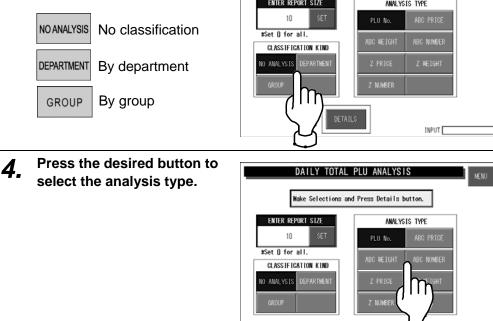

INPUT [

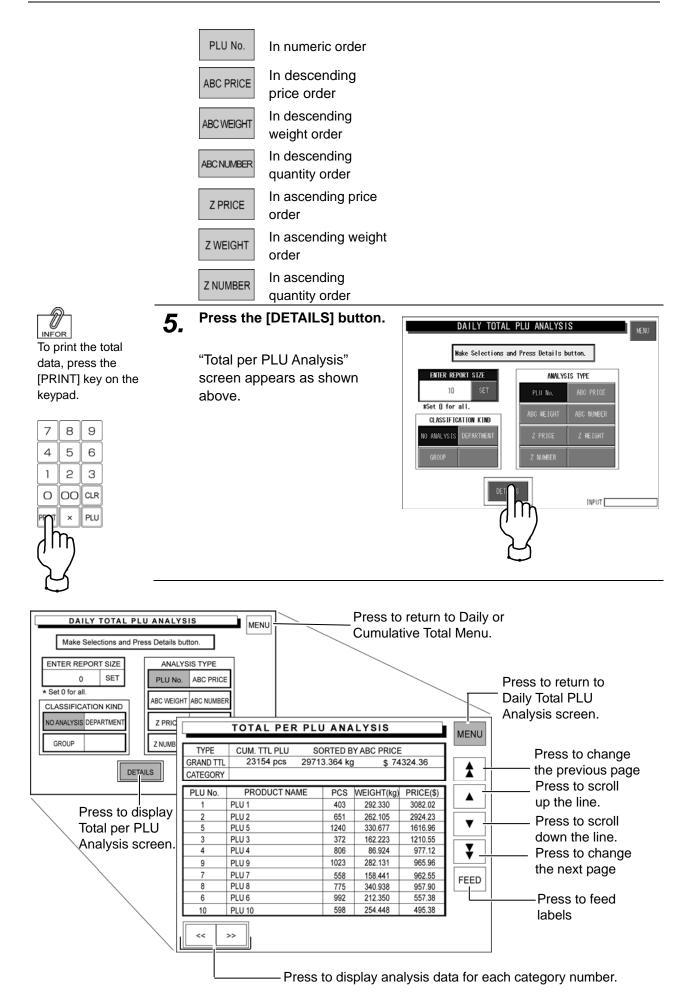



4.2.9 DAILY TOTAL HOURLY ANALYSIS




Press the [HOURLY ANALYSIS] button.

To print the total data, press the [PRINT] key on the keypad.

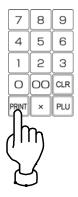

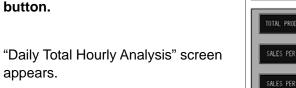


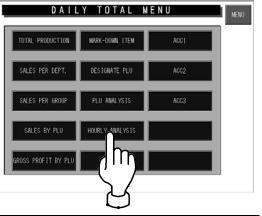

DAIL	Y TOTAL	HOURLY A	NALYSIS	Press to return to Daily Menu.
GRAND TTL	748 pcs PCS	955.120 kg	\$ 2397.29 50 100%	Press to change the previous page
9H - 10H 10H - 11H 11H - 12H	28 39 55	3.8 5.2 7.3 ■		Press to scroll Press to scroll Press to scroll
12H - 13H 13H - 14H 14H - 15H	50 64 78	6.7 8.6 10.4		down the line. Press to change the next page
15H - 16H 16H - 17H 17H - 18H 18H - 19H	123 131 92 88	16.5 17.5 12.3 11.7		FEED Press to feed labels
PCS PRIC				2


Press to select either "pieces" or "prices".

4.2.10 ACC

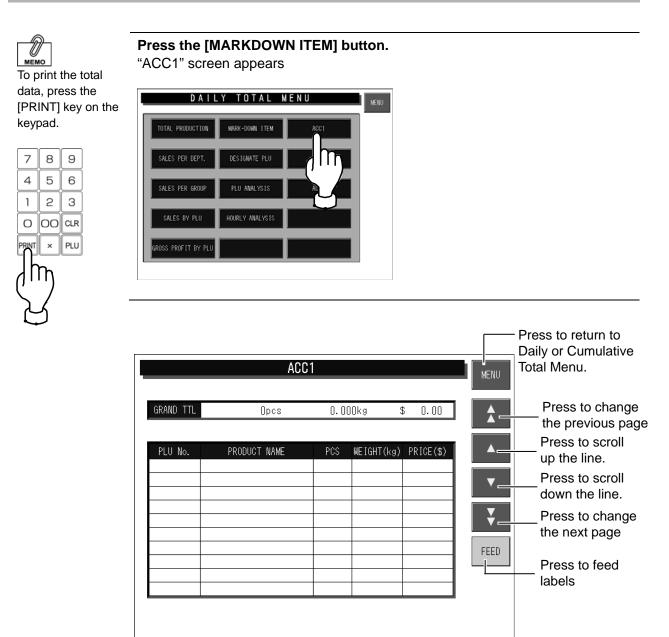

4.3 WEEKLY TOTAL

Totals of various transactions performed for a week can be obtained. Press the [Weekly] button on the Total Menu screen to display Weekly Total Menu.

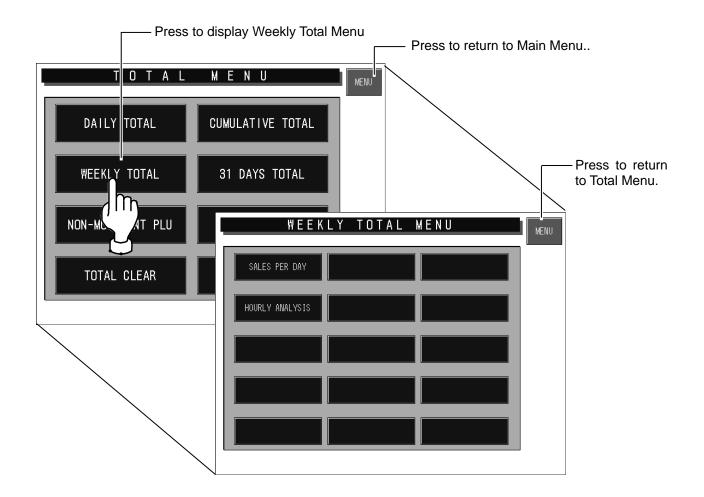

4.3.1 SALES PER DAYS OF THE WEEK




Press the [SALES PER DAY] button.

To print the total data, press the [PRINT] key on the keypad.

7 8 9 4 5 6 1 2 3 0 00 CLR PRINT × PLU


"Sales per Days of the Week" screen appears as shown above.

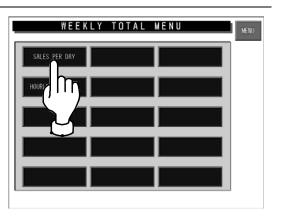


SA	5482 pcs 674	OF T		K 9831.45	MENU	Press to return to Weekly Total Menu.
No.	DAY	PCS	WEIGHT(kg)	PRICE(\$)		
1	SUNDAY	748	955.120	2397.29		
2	MONDAY	652	832.010	2036.64		
3	TUESDAY	684	816.205	2014.74		
4	WEDNESDAY	712	875.365	2635.80		
5	THURSDAY	813	975.654	3126.45		
6	FRIDAY	932	1045.789	3655.33		Press to feed
7	SATURDAY	941	1246.854	3965.20	FEED	the receipt.

4.3.2 HOURLY ANALYSIS OF THE WEEK

A day is delimited every hour, and the daily sales data either in price or quantity is displayed for each hourly zone in graphs.

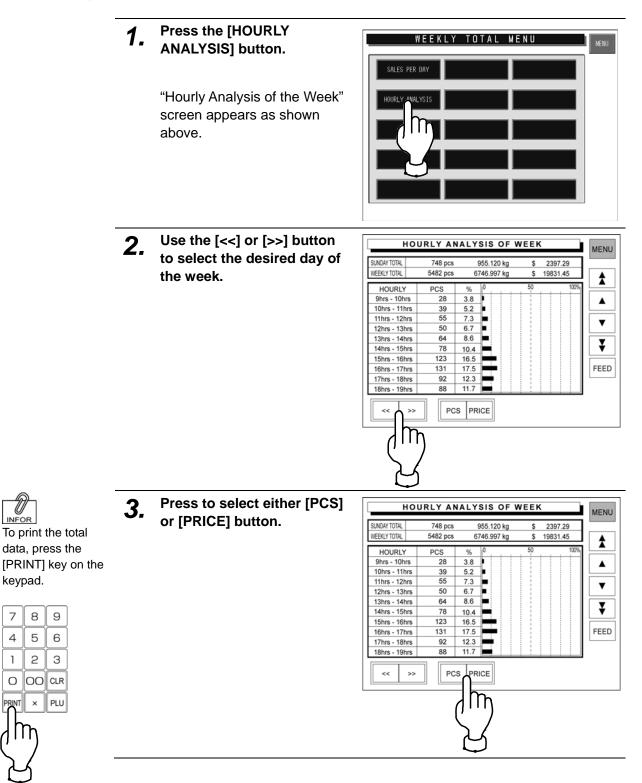


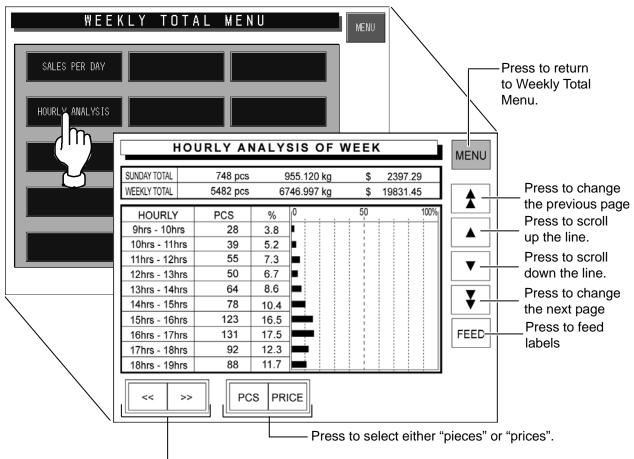


Press to change the day of the week.

4.4 31 DAYS TOTAL


Totals of transactions performed for a month period can be obtained. Press the [31 DAYS TOTAL] button on the Total Menu screen.

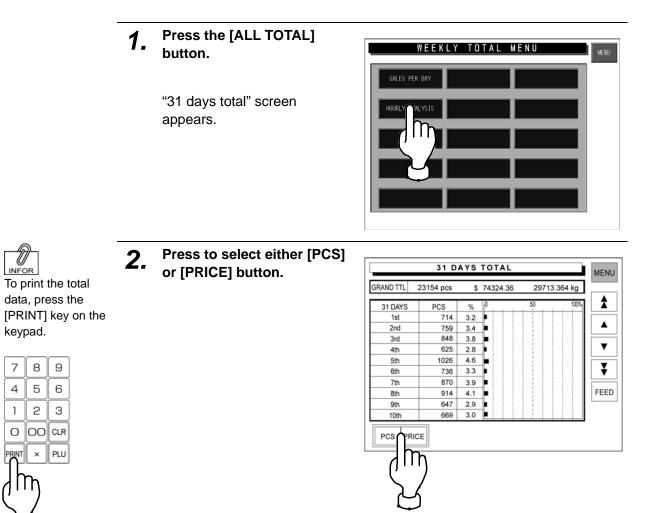


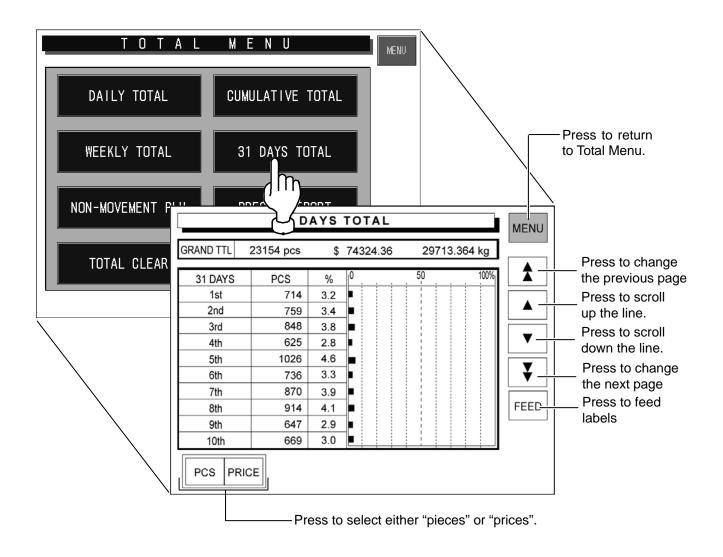

4.5 NON-MOVEMENT PLU

The list of PLU data that has not been moved for the specified period can be obtained. Press the [Non sales] button on the Total Menu screen to display Non-Movement PLU screen.

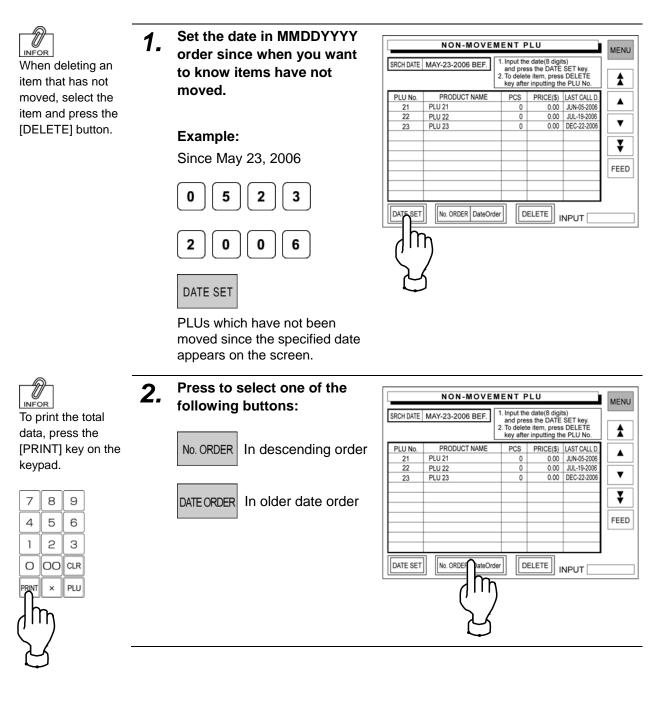

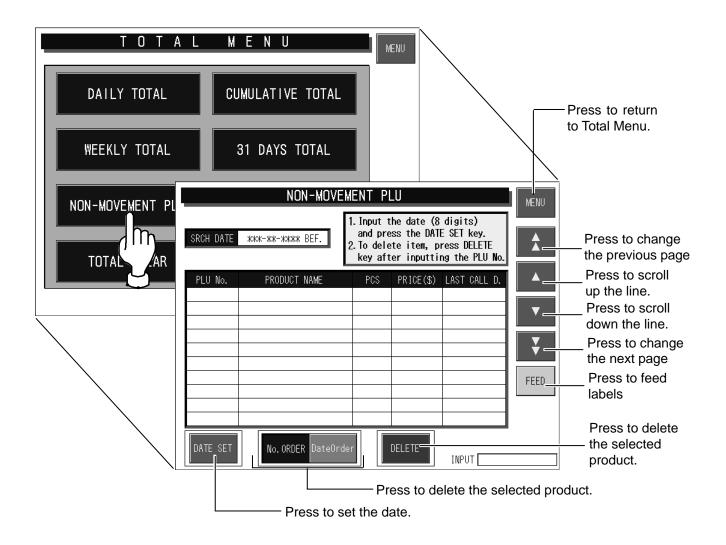


4.6 PRESET REPORT

This function is to combine desired totals and issue combined total reports.

Preset report is available for Daily and Cumulative totals.

Press the [Report print] button on the Total Menu screen to display Preset Report screen.

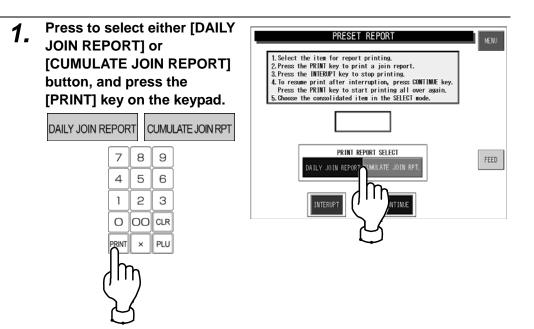

• To interrupt report printing, press the [INTERRUPT] button.




• To resume report printing, press the [CONTINUE] button.



• To start report printing from the beginning, press the [PRINT] key.




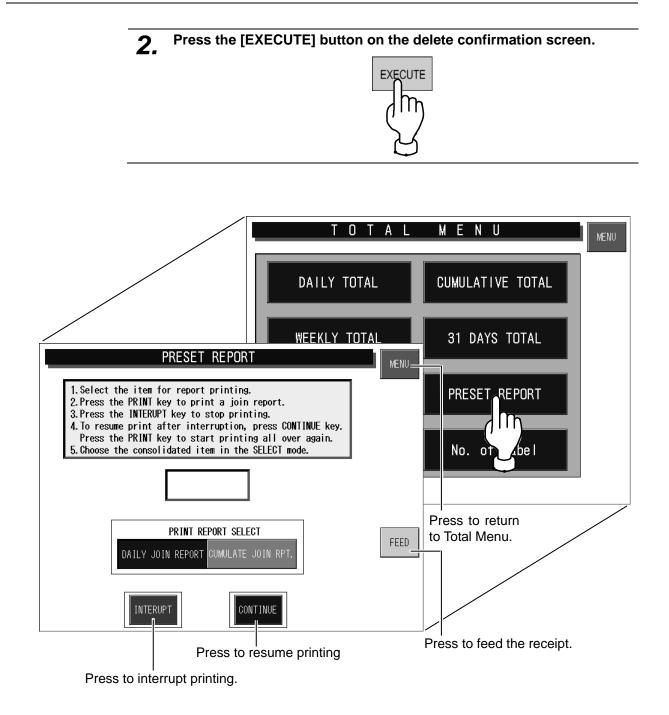


4.7 TOTAL CLEAR


This function is to clear the specified total data.

Press the [Total clear] button on the Total Menu screen to display Total Clear screen.

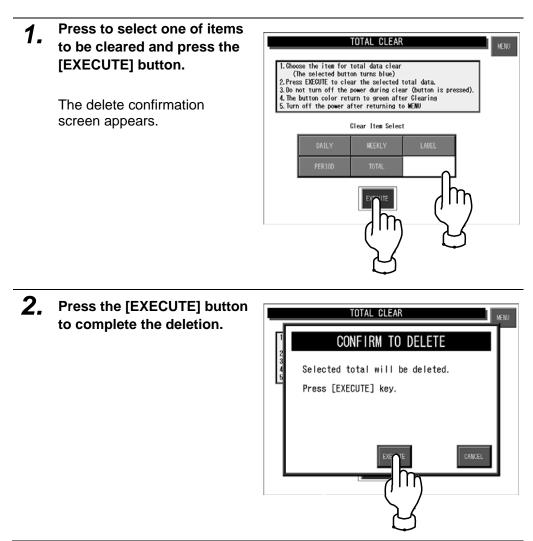

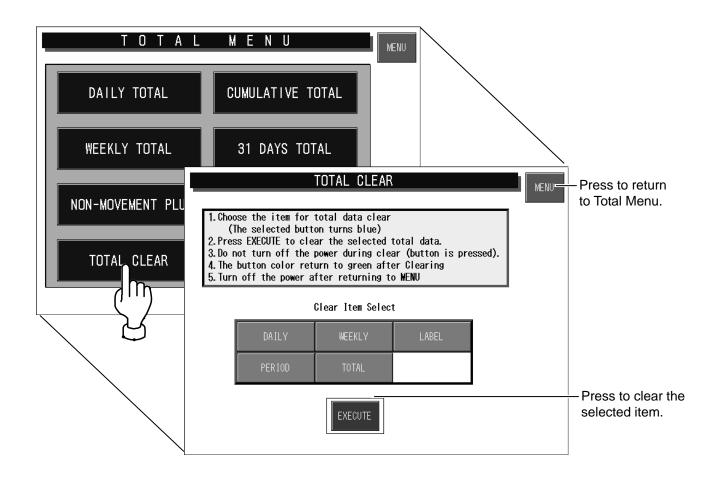


4.8 NUMBER OF LABELS

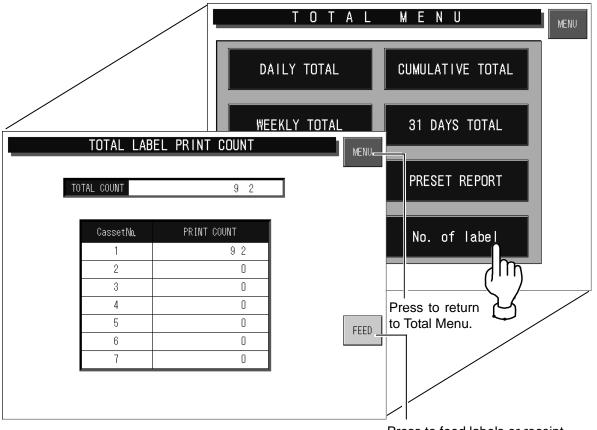

Press to feed labels or receipt.

This function checks and prints the number of issued labels.

Press the [No. of label] button on the Total Menu screen to display Total Label Print Count screen.

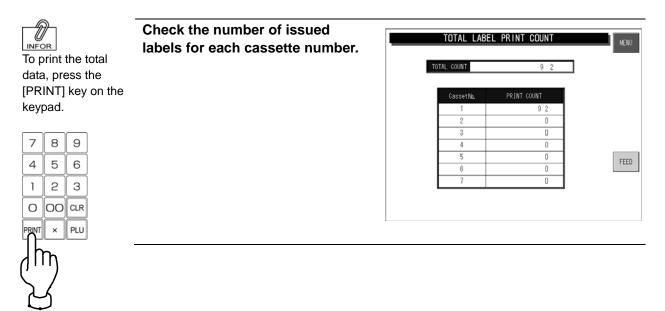


Chapter 5

PROGRAM MENU

5.1 PROGRAM MENU ENTRY

Program Menu is used to register various preset data required for daily operations. Press the [MENU] button on the initial screen and press the [PROGRAM] button on the Main Menu to enter Program Menu.

See section 6-4 "Password Setting".

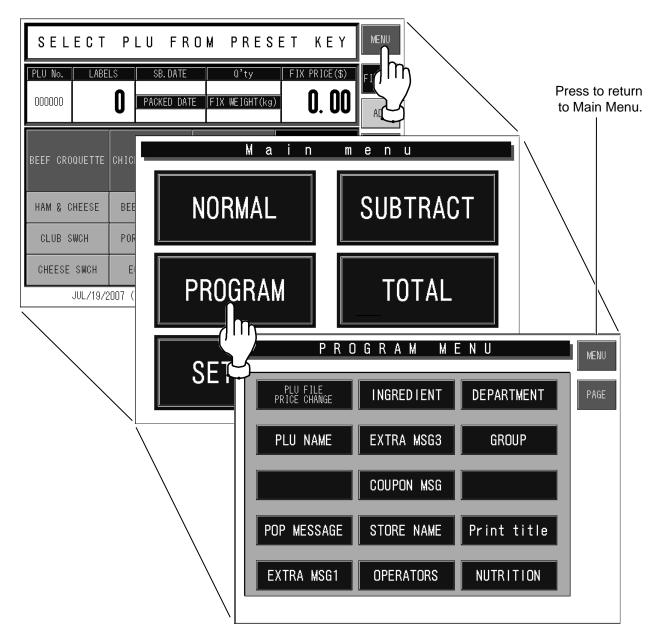


Note: When a password is programmed for accessing Program Menu, enter the 6-digit password number using the keypad before pressing the [PROGRAM] button.

5.2 ITEM DATA REGISTRATION

Product names and the associated data can be registered.

5.2.1 CHANGING UNIT/FIXED/MARKDOWN PRICES

You can change the unit price, fixed price, and special price. When the product data is not registered, register the data according to 5.2.2 "Registering Product Data".

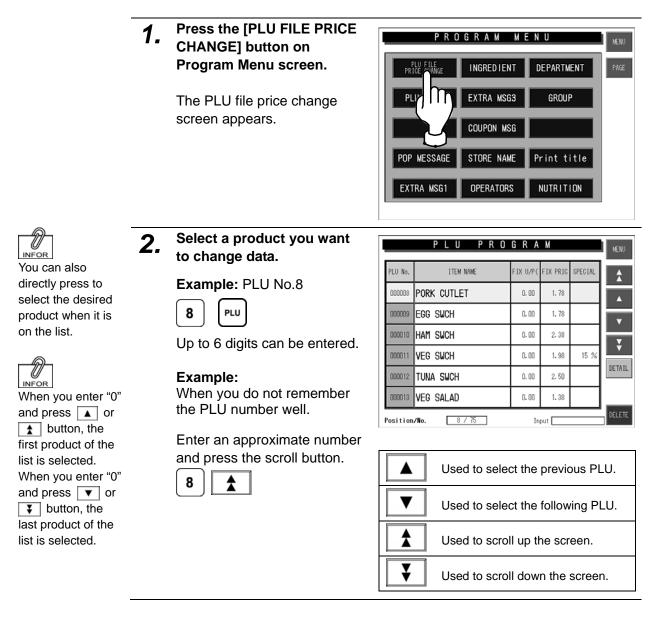



When you set the unit price, the fixed price will become "0", and when you set the fixed price, the unit price will become "0".



To release the special price setting, enter "0" and press the [SPECIAL] column.

3. Enter a price you want to change and press the corresponding field.

Example:

Change the fixed unit price to \$1.00.




Example:


Change the fixed price to \$3.00.



Example: Change the special price to \$2.00.



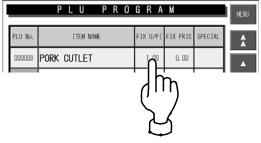


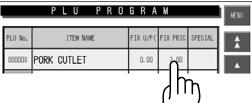

PLU PROGRAM							
PLU No.	ITEM NAME	FIX U/P(FIX PRIC	SPECIAL			
800000	PORK CUTLET	0. 00	3.00	2,00 \$			
		•		٦Ŀ	Ŋ		
				\sum	{		

4. Press the [MENU] button on the screen to finish settings of the unit price, fixed price and special price.


PLU No. ITEM NAME	FIX U/P(FIX PRIC	SPECIAL
BEEF CROQUETTE	0.00	7.58	1.23 -
000002 CROQUETTE	0.00	3. 58	
000003 HAM & CHEESE	0.00	3.98	
000004 CRAB SWCH	0.00	3.68	
000005 CHEESE SWCH	0.00	2.58	
000006 CHICHEN CUTLET	0.00	2.38	

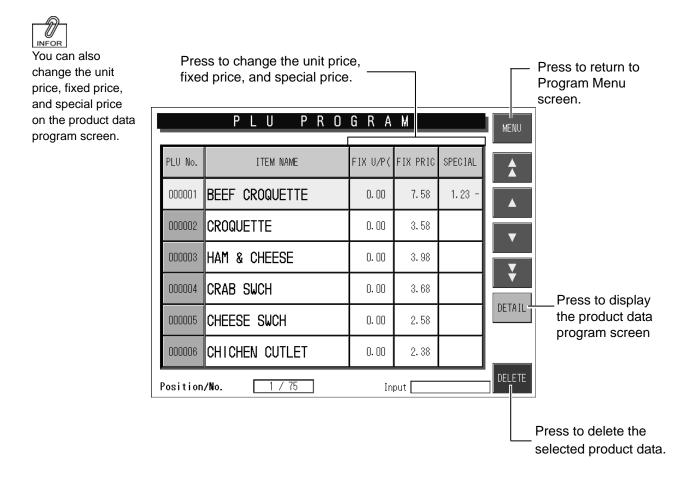

5.2.2 REGISTERING PRODUCT DATA

- 1. Press the [PLU FILE PRICE
 - CHANGE] button on Program Menu screen.

The PLU file price change screen appears.

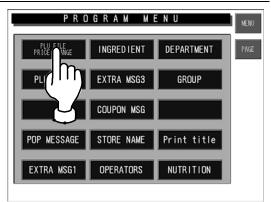

2. Enter a PLU number.

Up to 6 digits can be entered.

	PLU PROGRAM MENU										
PLU No.	ITEM NAME	FIX U/P(FIX PRIC	SPECIAL	*						
000001	BEEF CROQUETTE	0.00	7.58	1.23 -							
000002	CROQUETTE	0.00	3.58		Ţ						
000003	HAM & CHEESE	0.00	3.98								
000004	CRAB SWCH	0.00	3.68		•						
000005	CHEESE SWCH	0.00	2.58		DETAIL						
000006	CHICHEN CUTLET	0.00	2.38								
Positio	Position/No. 1/75 Input DELETE										

Example:

Create a new product data.

Enter the PLU number and press the [PLU] key on the keypad.



The item data registration screen appears.

Example:

Change a product data that has been already registered.

Enter the PLU number and press the [PLU] key on the keypad.



Confirm that the product is selected on the screen, and press the [DETAIL] button.

DETAIL

The item data registration screen appears.

II	Ţ	ΕM	1	N .	A M	Ε				RETURN
_										ERASE
PLU No. 000001 TOTAL CHAR 000	Q	U	E	R	٠	Y	U		0	P
LINE 001	A	S		F	G	H	J	K		
REMAINING 1022 STYLE N/N	¢	Z	X	C		B	N	M		
FONTSIZE # 7	Ñ	\$	7.	&	Ō	?		$\overline{\Sigma}$		
COPY LINE DELETE	SP	ē	ē	*	Ø	ê	Ō	Ō		
SHIFT FONT OFF # 7	STYLE	1	DELET	E	1	BKSP/	ACE	NEWL I	NE	SET
INSERT	STYLE	2	-	D	Ļ	-		INPUT		

	PLU PRO	GRA	М		MENU
PLU No.	ITEM NAME	FIX U/P(FIX PRIC	SPECIAL	
000001	BEEF CROQUETTE	0.00	7.58	1.23 -	
000002	CROQUETTE	0.00	3.58		Ţ
000003	HAM & CHEESE	0.00	3.98		Ţ
000004	CRAB SWCH	0.00	3.68		
000005	CHEESE SWCH	0.00	2.58		DETAIL
000006	CHICHEN CUTLET	0.00	2.38		/ IT
Position	/No. 5 / 75	In	put 🦳		





See "Item Data Registration Screens 1/3 - 3/3" on the following pages for more information. 3.

Register necessary items for the selected product.

000005	CHEESE SWCH									
FIX U/P	1.20	CODE	0:REF	POPN.	0	1				
FIX PRICE	0.00	FLAG REF	O:SYSTEM	ORIGIN No.	0	لم ا				
M PRICE M	1:M PRICE	POS FLAG	02	INGRE No.	0					
M PRICE	0.95	POS CODE	0000000000	COMMENT No.	0					
SYMBOLE	():NONE	ITEM CODE	00000000	TEMPN0.	0					
PCS	0	EXP. PERIOD	5 days	TEMPNo.	0					
BACKPRTSEL	0:REF	REG CODE	0	NUTRITION No.	0	1				




	ΙT	ΕM	DA	ΤA		BACK
000005	1	CHEESE	SWCH		EDIT	
EXP. DATE	0:REF	PRINT MODE	1:PRNT	U/P MODE	2:%mode	יייק
EXP TIME	0:REF	TOTAL COR	O:NON	U/P	0.00	$\sum $
EXP. SELECT	0:REF	PRTSELCT	0:REF	FIX WEIGHT	0.000	
EXP. TIME	:	BAR PRNT	1:YES	TAX No.	0	
EXP.DATE P	0:REF	FORMAT NO.	0	STORE No.	0	
EXP TIME P	0:REF	IMAGE	0			
EXP. TIME	OH later					
PAGE 2	2 / 3			INPUT		DELETE

PAGE

4. Finish the data registration.


BACK

The data save confirmation screen appears.

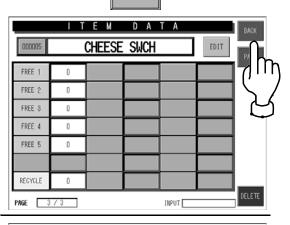

5. Press the [EXECUTE] button to save the data.

The data is saved and the display returns to the PLU program screen.

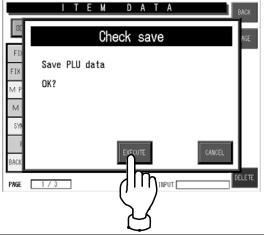

6.	Press the [MENU] button to complete the data		PLU PRO	GRA	М	
	registration.	PLU No.	ITEM NAME	FIX U/P(FIX PRIC	SPECIAL
	-	000001	BEEF CROQUETTE	0.00	7.58	1.23 -
		000002	CROQUETTE	0.00	3. 58	
	The display returns to	000003	HAM & CHEESE	0.00	3.98	
	Program Menu screen.	000004	CRAB SWCH	0.00	3.68	
		000005	CHEESE SWCH	0.00	2.58	
		000006	CHICHEN CUTLET	0.00	2.38	
		Position	n/No. 5775	Ir	iput	

■ Item Data Registration Screen 1/3

Input examples are summarized in the following table.

Product name is d Press to call up								display the ame edit
	000005		e m Cheese	d a SWCH	T A	EDIT	BACK -	Press to return to the PLU program screen. Press to change to the
	FIX U/P	1.20	CODE	0:REF	POP№.	D		next screen.
	FIX PRICE	0.00	FLAG REF	O:SYSTEM	ORIGIN No.	O		
	M PRICE M	1:M PRICE	POS FLAG	02	INGRE No.	O		
	M PRICE	0.95	POS CODE	0000000000	COMMENT No.	O		
	SYMBOLE	O:NONE	ITEM CODE	00000000	TEMPNo.	O		
	PCS	0	EXP. PERIOD	5 days	TEMPNo.	O		
	BACKPRTSEL	0:REF	REG CODE	0	NUTRITION No.	O		
	PAGE 1	/ 3			INPUT		DELETE	


Data	Example	Operation
Product Name	Register a product name.	 Press the [EDIT] button to display the product name edit screen. Enter the product name. See Appendix "Text Editing" for more information. To return to the item data registration screen, press the [RETURN] button.
FIX U/P Fixed Unit Price	Register the fixed unit price "\$5.00".	Up to 5 digits can be entered. 5 00 FIX U/P When the unit price is input, the fixed price is calculated by the unit price multiplied by the fixed weight.
FIX PRICE Fixed Price	Register the fixed price "\$8.00".	Up to 5 digits can be entered. 8 00 FIX PRICE
M PRICE MODE Markdown Price Mode	Select the markdown method.	When the [M PRICE MODE] field is pressed, the selection screen will appear. NO No markdown MPRICE Special price -\$ Amount discount (-\$) -% Percent discount (-%)
M PRICE Markdown Price	Register the special price "\$7.20" for the product with its usual price "\$8.00". * The markdown method must have been selected.	When "NONE" is selected in the markdown price mode, you can not enter a numeric value. Special price (Max. 5 digits) 7 2 0 M PRICE Amount minus (-\$)(Max. 5 digits) 8 0 M PRICE Percent minus (-%) (Max. 2 digits) 1 0 M PRICE
SYMBOL Symbol	Select "PC."	Press the [SYMBOL] field to display the selection screen and press to select the [PC.] field.

Data	Example	Operation
	Register "3 pieces" for the fixed price product.	Quantity can be entered up to 4 digits. 3 PCS When the quantity print is not required. 0 PCS
PCS Pieces	Register "1/2" for the fixed price product.	Press the [PCS] field to display the fraction input screen. Numeric value 1-9 can be entered for each denominator and numerator. 1 2 PCS
BACKPTRSEL Back Printer Selection	Select the bottom label printing.	When the [BACK PRINTER SELECT] field is pressed, the selection screen will appear. REF Refer to set data NO No bottom label issue BARCODE Barcode print INGRE Ingredient print ING+BAR Ingredient & barcode print ALL All print except barcode ALL+BAR All print including barcode
CODE Code System	Select the barcode system.	When the [CODE] field is pressed, the selection screen will appear. REF Refer to set data. Non-PLU13 Non-PLU 13 digits Non-PLU8 Non-PLU 8 digits PLU13 PLU 13 digits PLU8 PLU 8 digits

Data	Example	Operation
		When the [FLAG REF] field is pressed, the selection screen will appear.
FLAG REF Flag Reference	Select the flag reference.	SYSTEM Refer to system.
		TEMPROG Refer to product registration
POS FLAG POS Flag	Register the POS flag "2".	Up to 2 digits can be entered. 2 POS FLAG
POS CODE POS Code	Register the POS code "1234567890".	Up to 10 digits can be entered. 1 2 3 4 5 6 7 8 9 0 POS CODE
ITEM CODE Item Code	Register the POS code "12345678".	Up to 8 digits can be entered. 1 2 3 4 5 6 7 8 ITEM CODE
EXP. PERIOD Expiry Period	Register the expiry period "2 days".	Up to 4 digits can be entered. 2 EXP. PERIOD
REG. CODE Register Code	Register the register code "12".	Up to 3 digits can be entered. 1 2 REG. CODE
POP NO. POP Number	Register the POP number "450".	Up to 3 digits can be entered. 4 5 0 POP NO.
ORIGIN NO. Origin Number	Register the origin number "635".	Up to 3 digits can be entered. 6 3 5 ORIGIN NO. * Origin names must have been registered.
INGRE NO. Ingredient Number	Register the ingredient number "1621".	Up to 4 digits can be entered. 1 6 2 1 INGRE NO. * Ingredient names must have been registered.
COMMENT NO. Comment Number	Register the comment number "53".	Up to 2 digits can be entered. 5 3 COMMENT NO. * Comments must have been registered.
TEMP NO. Temperature Number	Register the storage temperature number "94".	Up to 2 digits can be entered. 9 4 TEMP NO. * Storage temperatures must have been registered.
STORAGE Storage Method	Register the storage method number "29".	Up to 2 digits can be entered. 2 9 STORAGE * Storage methods must have been registered.
NUTRITION NO. Nutrition Number	Register the nutrition number "29".	Up to 2 digits can be entered. 2 9 NUTRITION NO. * Nutrition messages must have been registered.

■ Item Data Registration Screen 2/3

Input examples are summarized in the following table.

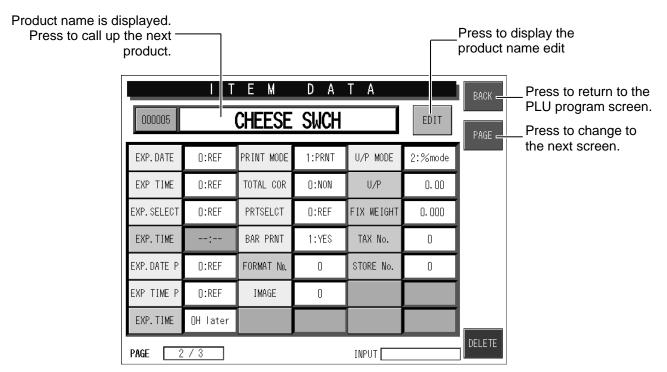

Data	Example	Operation				
		When the [PACK DATE PRINT] field is pressed, the selection screen will appear.				
PACK DATE P	Select whether or not to	REF Refer to set data.				
Pack Date Print	print the date on each label.	YES Print the date on each label.				
		NO No date print				
		When the [PACK TIME PRINT] field is pressed, the selection screen will appear.				
PACK TIME P	Select whether or not to print the time on each label.	REF Refer to set data.				
Pack Time Print		YES Print the time on each label.				
		NO No time print				
		When the [PACK TIME SELECT] field is pressed, the selection screen will appear.				
PTME SELECT Pack Time Select	Select the pack time.	REF Refer to set data.				
		REF Use the set time.				
		DESIG Use the internal clock.				

Data	Example	Operation					
	Set the pack time "13:00".	Use a round-the-clock time (4 digits).					
PACK TIME Pack Time Set	* The time can be entered only when "Designate" is selected.	1 3 00 PACK TIME * Nutrition messages must have been registered.					
		When the [EXPIRY DATE PRINT] field is pressed, the selection screen will appear.					
EXP. DATE P	Select whether or not to print the date on each	REF Refer to set data.					
Expiry Date Print	label.	YES Print the date on each label.					
		NO No date print					
		When the [EXPIRY TIME PRINT] field is pressed, the selection screen will appear.					
EXP. TIME P Expiry Time Print	Select whether or not to print the time on each	REF Refer to set data.					
	label.	YES Print the time on each label.					
		NO No time print					
	Set the expiry time "5 hours" later than the	Up to 4 digits can be entered.					
EXP. TIME	pack time.	5 EXP. TIME					
Expiry Time	* Time can be entered only when "Designate" is selected.						
		When the [PRINT MODE] field is pressed, the selection screen will appear.					
PRINT MODE	Select the print mode	PRINT Issue labels are issue.					
Print Mode	Select the print mode.	NO Label issue is prohibited.					
		NO ADD Issue labels but not add the data to totals.					
	Select whether or not to collect totals.	When the [TOTAL COLLECTION] field is pressed, the selection screen will appear.					
TOTALCOL Total Collection	* Used in on-line	NO Not collect totals.					
	specification.	YES Collect totals					
		When the [PRINT SELECT] field is pressed, the selection screen will appear.					
PRTSELECT	Select whether or not to	REF Refer to set data.					
Print Select	print top labels.	PRINT Issue top labels.					
		NO Prohibit to issue top labels.					

Data	Example	Operation				
BAR PRINT Barcode Print	Select whether or not to print barcode labels on top labels.	When the [BAR PRINT] field is pressed, the selection screen will appear. NO No print YES Print				
FORMAT No. Format Number	Register the format number "72".	Up to 2 digits can be entered. 7 2 FORMAT No.				
IMAGE Image Number	Input the image number "10".	Up to 2 digits can be entered. 1 0 IMAGE When the [IMAGE No.] field is pressed, the detailed image screen will appear.				
U/P MODE Cost Unit Price Mode	Select the cost unit price mode.	When the [U/P MODE] field is pressed, the selection screen will appear. 1: \$MODE Amount mode 2: %MODE Percent mode				
U/P Cost Unit Price	Register the cost unit price "\$1.50" for the "\$3.00" selling price product. * The cost unit price mode must have been selected.	When the [U/P] field is pressed, the selection screen will appear. Amount (\$) mode (max. 5 digits) 1 5 0 U/P Percent (%) mode (max. 2 digits) 5 0 U/P				
FIX WEIGHT Fix Weight	Register the fixed weight "160g".	Up to 5 digits can be entered. 1 6 0 FIX WEIGHT				
TAX No. Tax Number	Register the tax number "1".	The numeric value 0 – 9 can be entered. 1 TAX No. * Tax rates must have been registered.				
STORE No. Store Number	Register the store number "20".	Up to 4 digits can be entered. 2 0 STORE No. * Store information must have been registered.				

■ Item Data Registration Screen 3/3

Input examples are summarized in the following table.

Product name is disp Press to call up the r product.								display the name edit
	000005		t e m Cheese	d a SWCH	T A	EDIT	BACK PAGE	Press to return to the PLU program screen. Press to change to
	FREE 1	0						the next screen.
	FREE 2	0						
	FREE 3	0						
	FREE 4	0						
	FREE 5	0						
	RECYCLE	0						
	PAGE 3	/ 3			INPUT		DELETE	


Proc	luct	Example	Operation
FREE Free me	essage	Register the free message number "20".	Up to 2 digits can be entered. 2 0 FREE 1-5 * Free messages must have been registered.


5.3 PRODUCT NAME REGISTRATION

This section explains the product name registration procedure.

You can register a product name when registering each product, and also register product names collectively.


Example: Register "Beef Cutlet Special" in PLU No.7.

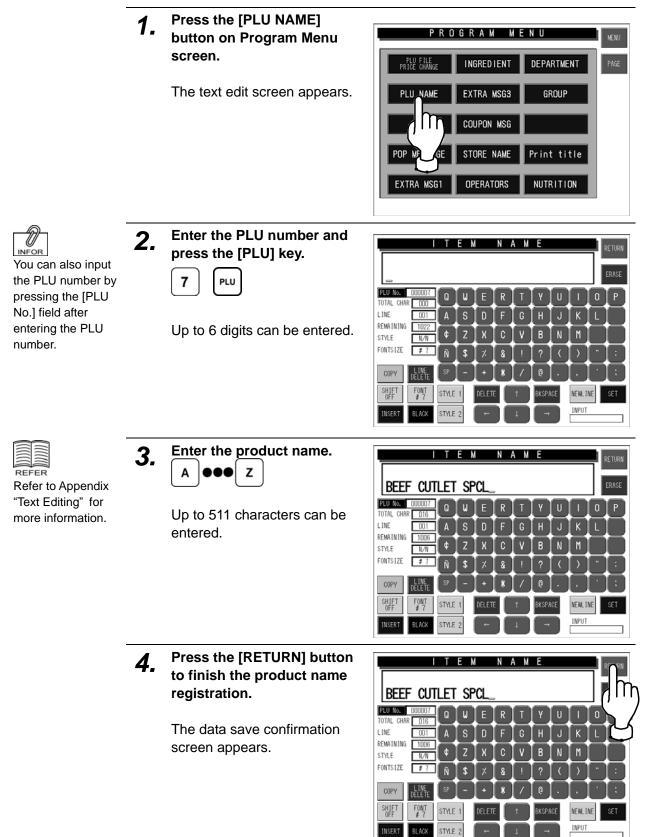

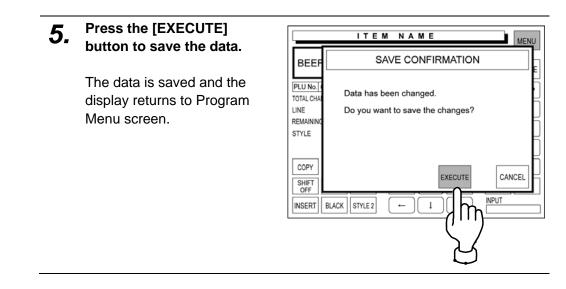

INGREDIENT NAME REGISTRATION 5.4

This section explains the ingredient name registration procedure.

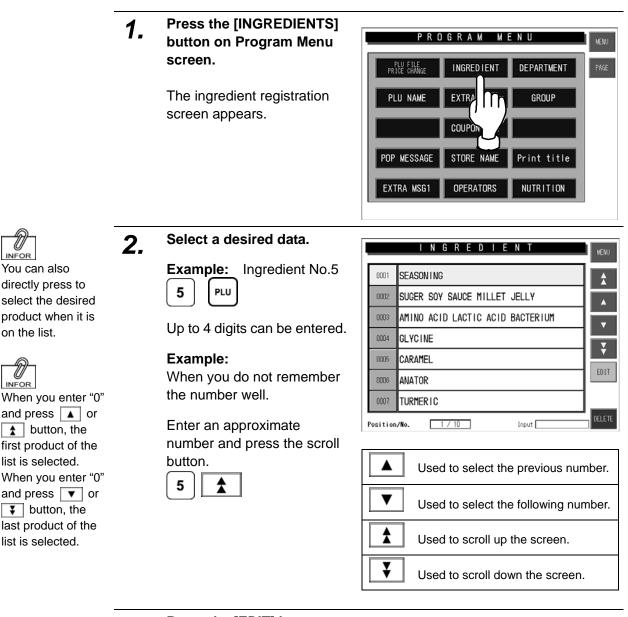

Press the [EDIT] button on 3. the screen.


The text edit screen appears.

ļ		INGREDIENT	MENU
	0001	SEASONING	Å
	0002	SUGER SOY SAUCE MILLET JELLY	
	0003	AMINO ACID LACTIC ACID BACTERIUM	Ţ
	0004	GLYCINE	
	0005	CARAMEL	Ť.
	0006	ANATOR	
	0007	TURMERIC	Min
F	Position	n/No. 1 / 10 Input	
			\mathbf{r}

INFOR When you enter "0" and press **A** or button, the first product of the list is selected. When you enter "0" and press **v** or 😲 button, the last product of the list is selected.

INFOR

on the list.

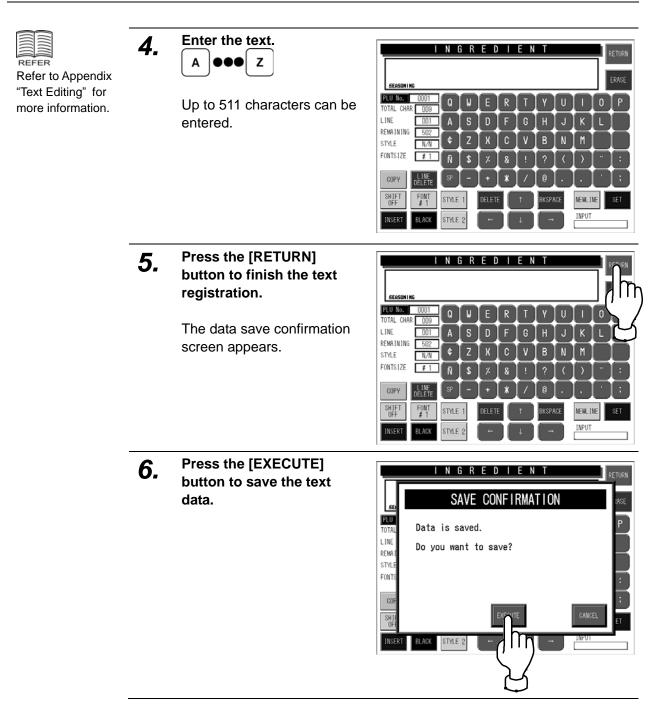

			Press to return to Program Menu screen.
	INGREDIENT	MENU	
0001	SEASONING		
0002	SUGER SOY SAUCE MILLET JELLY		
0003	AMINO ACID LACTIC ACID BACTERIUM		
0004	GLYCINE		
0005	CARAMEL		Press to display the
0006	ANATOR		text edit screen.
0007	TURMERIC	1	
Positio	n/No. 1 / 10 Input	DELETE	Press to delete the selected data.


5.5 POP MESSAGE REGISTRATION

POP message can be registered within the range from message numbers 7 through 999. Message numbers 1 through 6 are default settings as follows:

	DISPLAY POP LIST (28)						
	SPECIAL !						
002	ON SALE						
003	DISCOUNTED						
004	ADVERTISED						
005	REFRIGERATE						
006	GOOD BUY						
▲ ▼ 14 ITEM 28 ITEM INPUT							

1. Press the [POP MESSAGE] button on Program Menu screen.

The POP message registration screen appears.

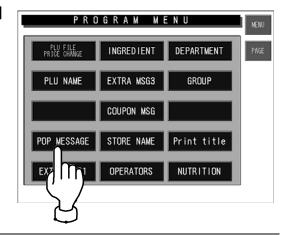

2. Enter the message number and press the [PLU] key on the keypad.

Example: Message No.7



	POP REGISTRATION	RETURN
		ERASE
PLU No. 007 TOTAL CHAR 000	QWERTYUI	0 P
LINE 001	ASDFGHJK	L
REMAINING 079 STYLE N/N	€ Z X C V B N M	
	Ñ \$ % & ! ? < >	<u> </u>
COPY	SP - + * / @ . ,	';
SHIFT OFF #3	STYLE 1 DELETE 1 BKSPACE NEWLIN	FIX
INSERT BLACK	STYLE 2 ← ↓ → INPUT	

3.



Refer to Appendix "Text Editing" for more information.


Enter the text.						
Α	•••	Z				

Up to 75 characters can be entered.


Press the [RETURN] button to finish the text edit.

	POF	RE	GIS	rra'	пон	١			RE	
RECOMM	END	ED_]	ļħ
PLU No. 007 TOTAL CHAR 011 LINE 001 REMAINING 068 STYLE N/N	Q A €	W S Z	E D X	R F C	T G V	Y H B	U J N	Г К		
COPY SHIFT FONT OFF #3 INSERT BLACK	N SP STYLE	4	(%) (+) (+) (+) (+)	& * [[! [/ ↑	?)@)BKSPA) →	< <tr> . CE</tr>	, NEWLI		: ; FIX

4. Press the [EXECUTE] button to save the data.

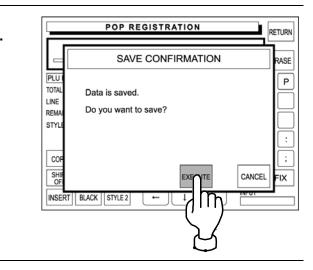

The same procedure can be applied for the following registrations.

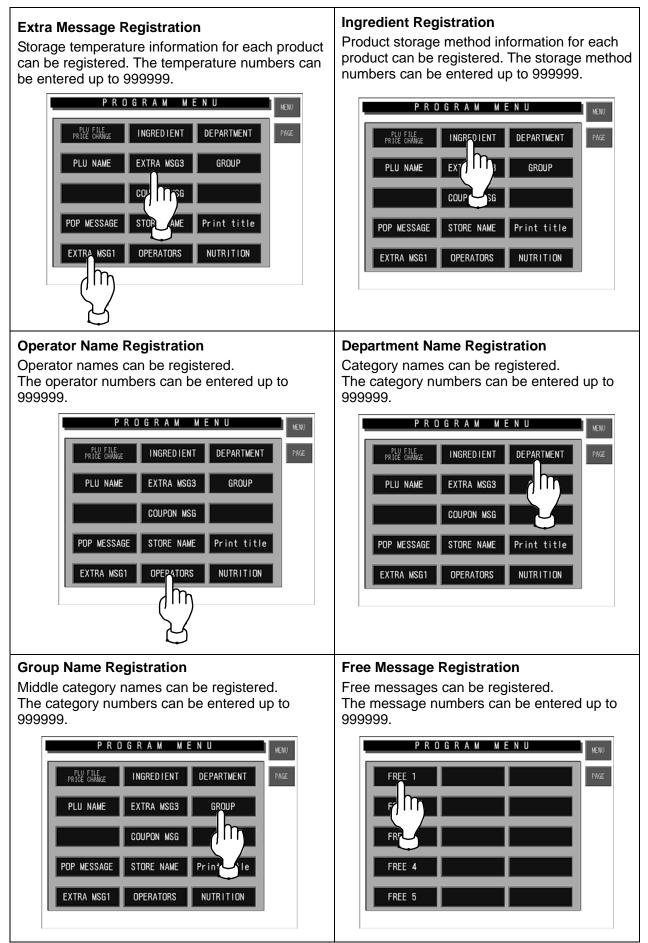



5.6 STORE NAME/ADDRESS REGISTRATION

This section explains the store name and address registration procedures. These names and addresses will be printed on labels.

5.6.1 Store Name Registration

Example: Register the store name "SUPER ISHIDA" in Store No.1.

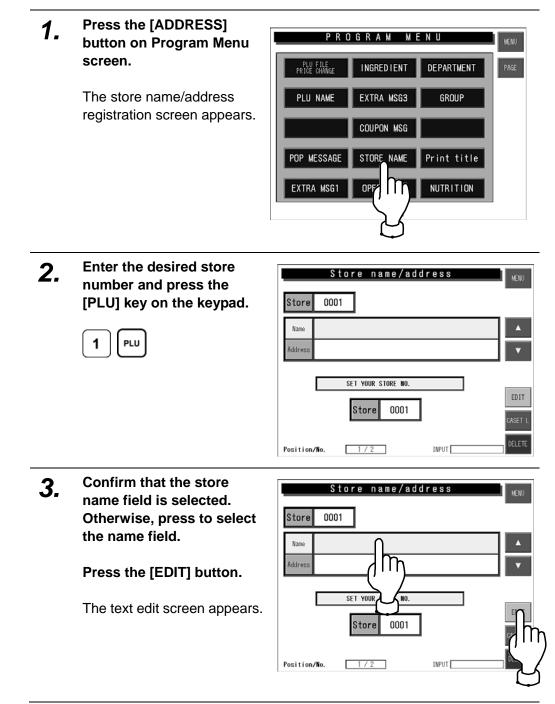


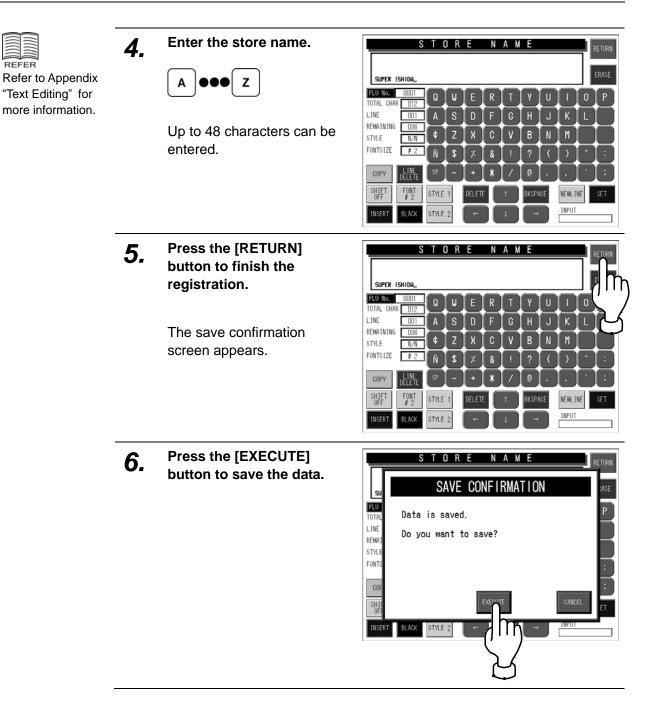


	Press to return to Program Menu screen.
Store name/address	MENU
Name SUPER ISHIDA Address SHOGOIN SAKYO-KU KYOTO JAPAN	Press to display the previous screen.
SET YOUR STORE NO. Store 0001 Position/No. 1/1 INPUT	EDIT Press to display the text edit screen. When no numeric value is entered: The list of store numbers linked with cassettes is displayed. When a numeric value is entered: The specific store number is displayed. Press to return to Program Menu screen.

5.6.2 Store Address Registration

Example: Register the store address "BIWAKO SHIGA JAPAN".

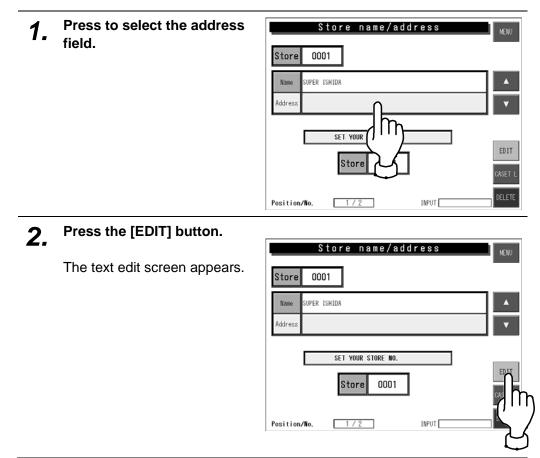


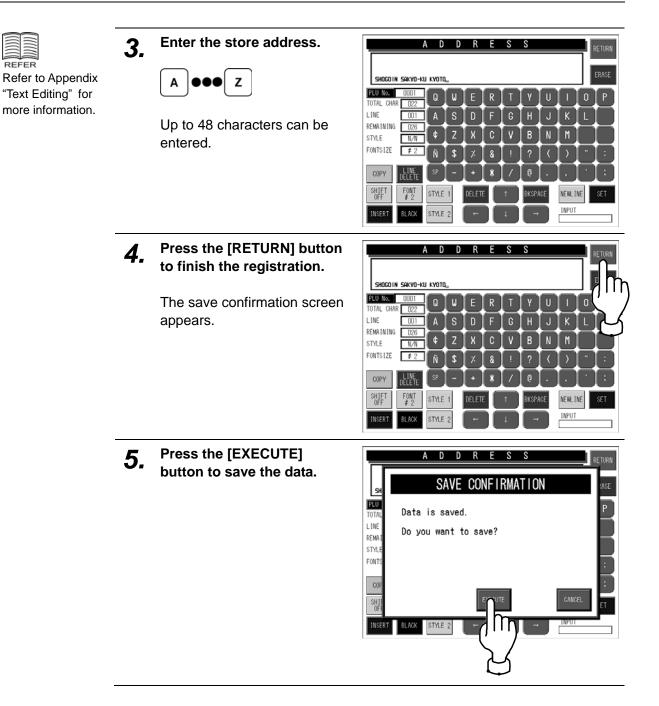

REFER


5.6.3 Cassette Link Registration

Example: Set the store number "1" to link with the cassette number "2".

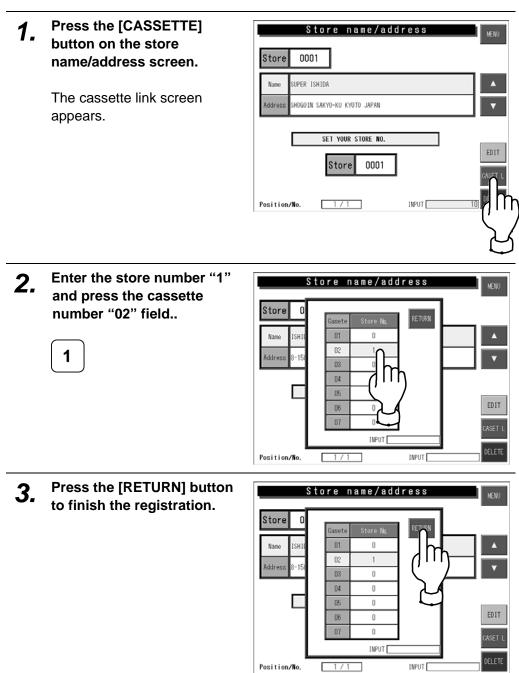

5.6.4 Your Store Registration

Example: Set the store number "2" of which data will be printed on labels.

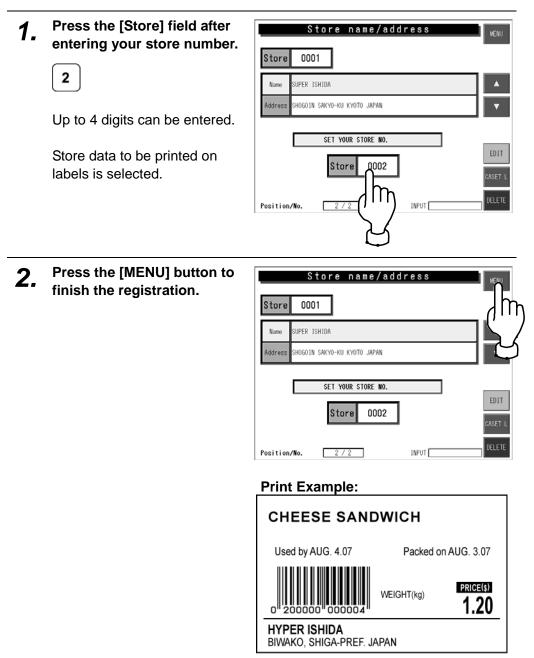


5.7 PRINT TITLE REGISTRATION

This section explains how to register the header and footer message to be printed on receipts.

5.7.1 Print Title Registration


1.	Press the [PRINT TITLE] button on the Program Menu. The print title screen appears.	PROGRAM MENU PLU program Origin Category PLU name Temperature M Category Ingredients Keep method POP Address Print title Comment Operator NU
2.	Press to select the header field.	PRINT TITLE MENU REGEIPT PRINT TITLE MENU HEADER HEADER MENU TOTAL LABEL PRINT TITLE MO. TITLE PLU NO. OODOOOO TITLE PLU NO. OODOOOO TITLE It prints out set up PLU no. If set up PLU no. is 0, Tast PLU name is printed. INPUT
3.	Press the [EDIT] button.	PRINT TITLE MENU
_	The text edit screen appears.	RECEIPT PRINT TITLE HEADER FOOTER TOTAL LABEL PRINT TITLE SELECT TITLE OR PLU NO. TITLE PLU NO. 000000 TITLE PLU NO. It prints out set up PLU no. It set up PLU no. is 0, last PLU name is printed. INPUT

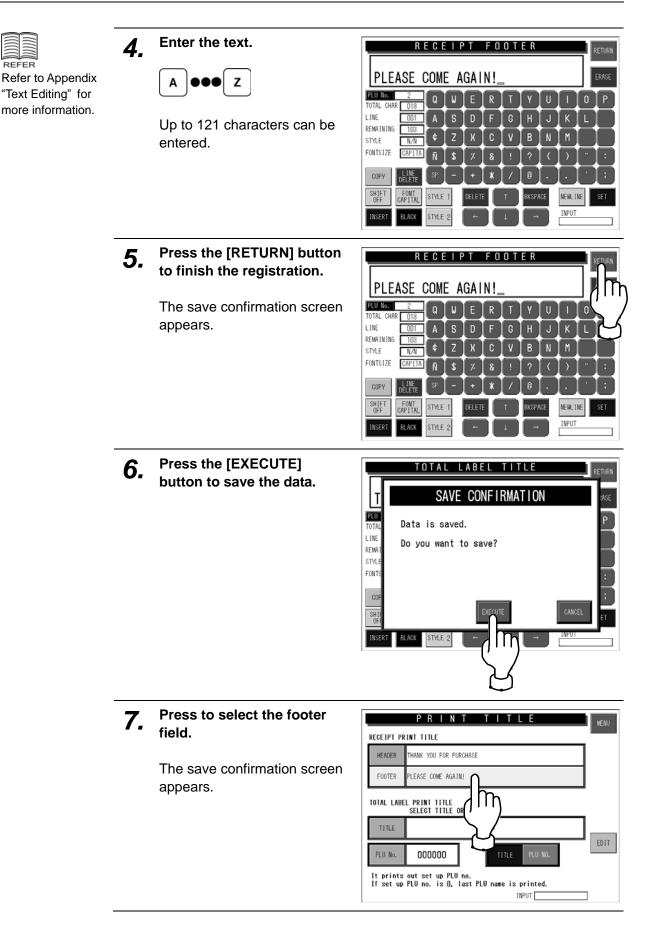

REFER

8.	Press the [EDIT] button.		U
0.	The text edit screen appears.	RECEIPT PRINT TITLE HEADER THANK YOU FOR PURCHASE FOOTER PLEASE COME AGAIN!	
		TOTAL LABEL PRINT TITLE SELECT TITLE OR PLU NO. TITLE	Т
		PLU No. 000000 TITLE PLU NO. It prints out set up PLU no. If set up PLU no. is 0, last PLU name is printed.	Th S


9 Repeat steps 4 through 6.

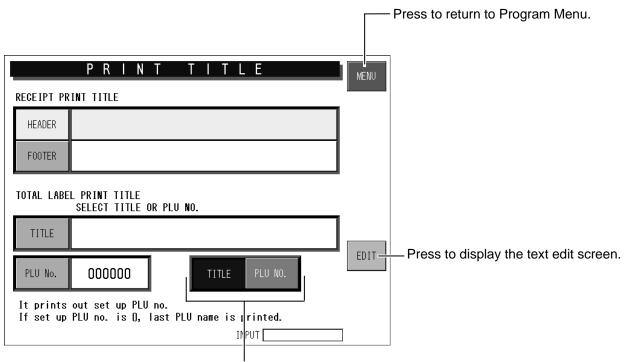



Press to select the print title to be printed on the total labels.

5.8 NUTRITION REGISTRATION

This section explains how to register the nutrition information to be printed on receipts.

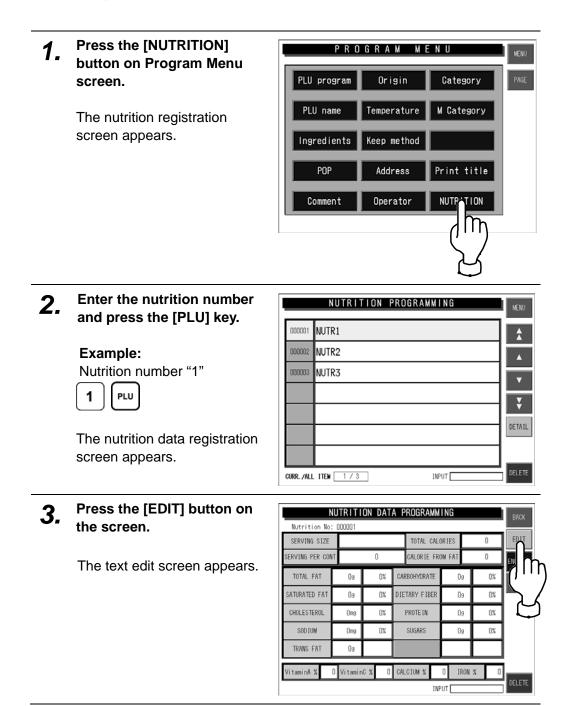

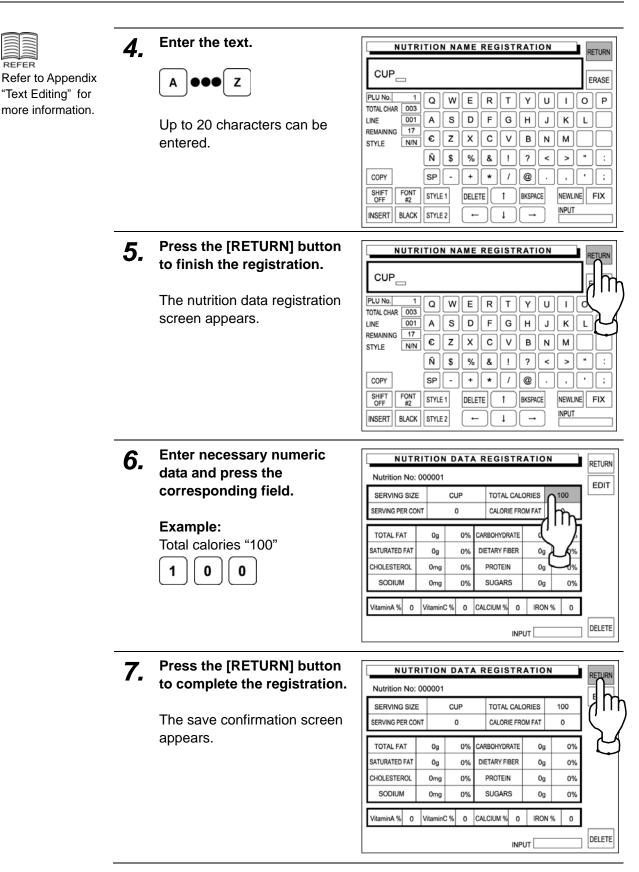


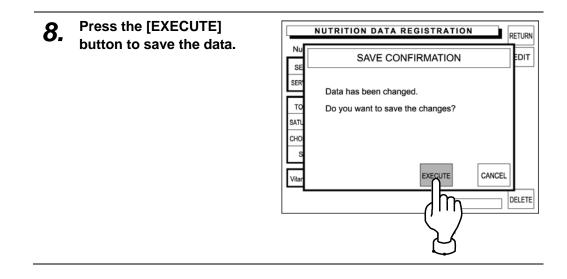

FREE MESSAGE 1 – 5 REGISTRATION 5.9

Any message such as cooking recipe, calorie, etc. can be freely registered.

	1.	Press the [FREE] button on Program Menu screen. The free message registration screen appears.	PROGRAM MENU FREE 1 FREE 4 FREE 5
	2.	Enter the message number and press the [PLU] key. Example:	
		Message No. "1" 1 PLU The free message registration screen appears.	CURR/ALL ITEM 1/1 INPUT DELETE
REFER Refer to Appendix "Text Editing" for more information.	3.	Enter the text. A ●●● Z Up to 2046 characters can be entered. When the text editing is complete, press the [RETURN] button. RETURN	$\begin{tabular}{ c c c c c c c c c c c c c c c c c c c$
	4.	Press the [MENU] button to complete all registrations.	FREE MESSAGE REGISTRATION MENU 000001 MESSAGE 1 Image: Comparison of the second sec

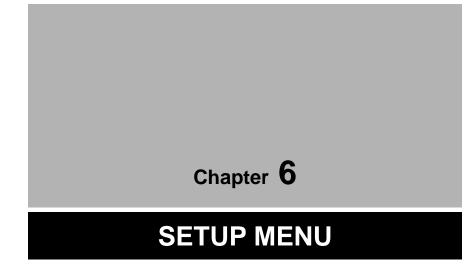


6.1 SETUP MENU ENTRY

Setup Menu is used to register data required for setting up the machine. Press the [MENU] button on the initial screen and press the [SET UP] button on the Main Menu to enter Setup Menu screen.


Note: When a password is programmed for accessing Setup Menu, enter the 6-digit password number using the keypad before pressing the [SET UP] button.


See section 6-4 "Password Setting".

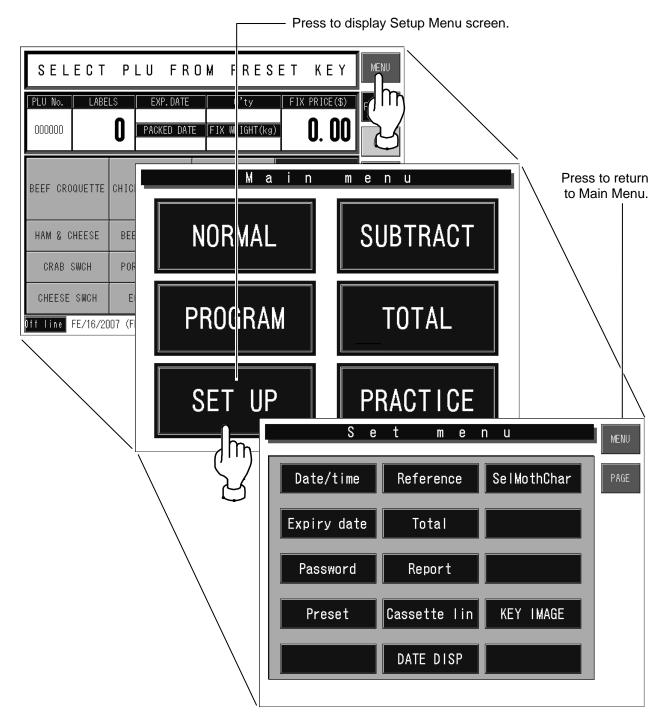

6.2 DATE / TIME SETTING


When setting the date and time, press the [DATE/TIME] button on the Setup Menu to display Date/Time setup screen.

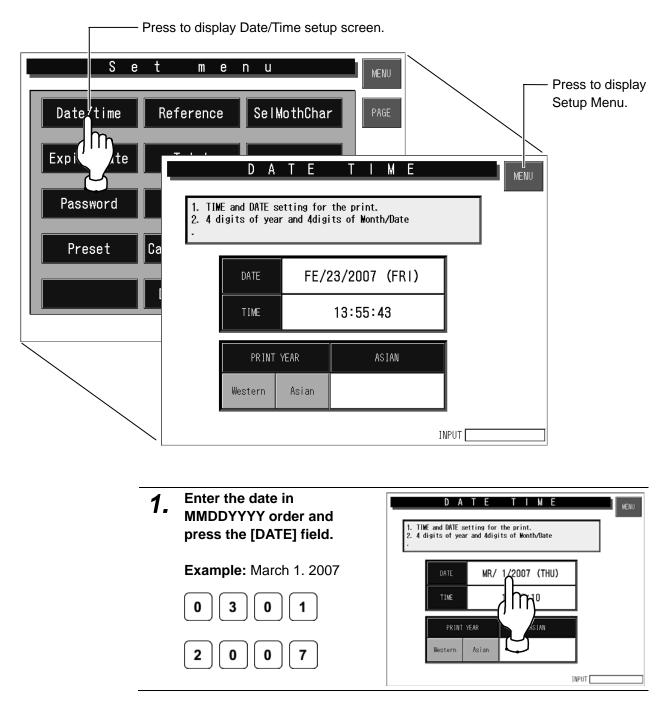

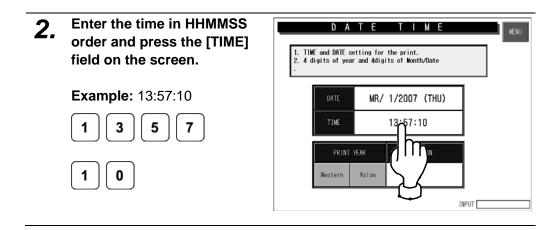

6.3 EXPIRY DATE SETTING

When setting the expiry date, press the [EXPIRY DATE] button on the Setup Menu to display Expiry Period setup screen.

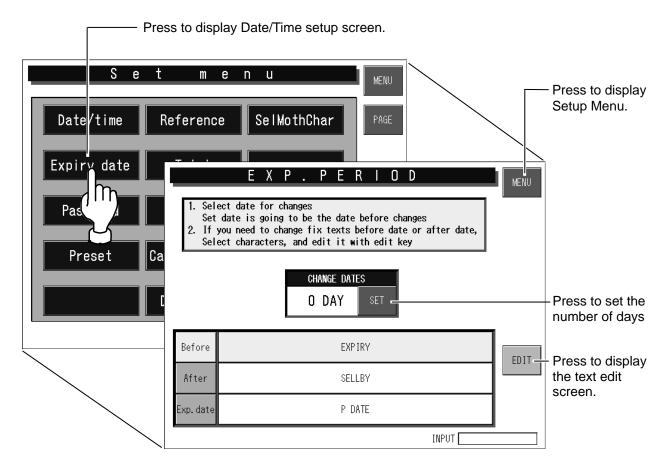


1. Enter the number of days to change the period text.

Example:

4 days to change the text.

4

3 days after the pack date will become the best-before date, and 4 days after the pack date will become the use-by date.

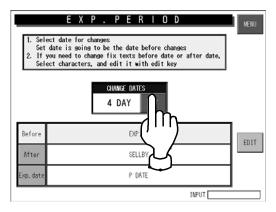


2. Check the character lines of "Before change", "After change" and "Pack date".

When editing the text, press the [EDIT] button after pressing either "Before change", "After change" or "Pack date" button.




The text edit screen appears.

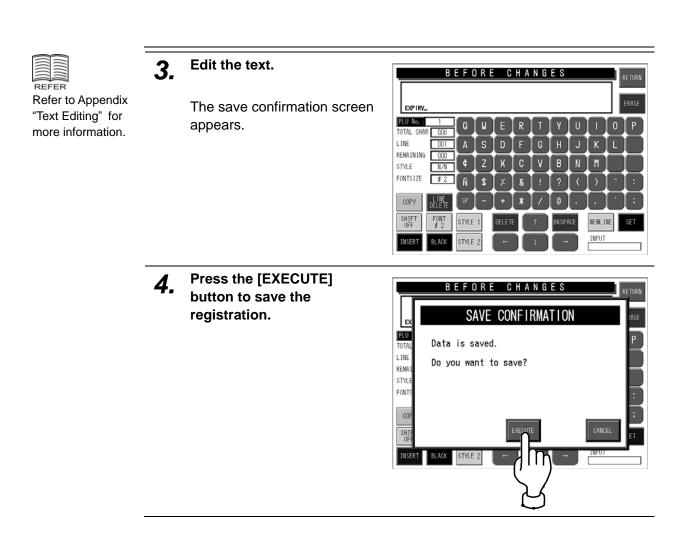



6.4 PASSWORD SETTING

When setting a password number for the selected modes, press the [PASSWORD] button on the Setup Menu to display Password Number setup screen.

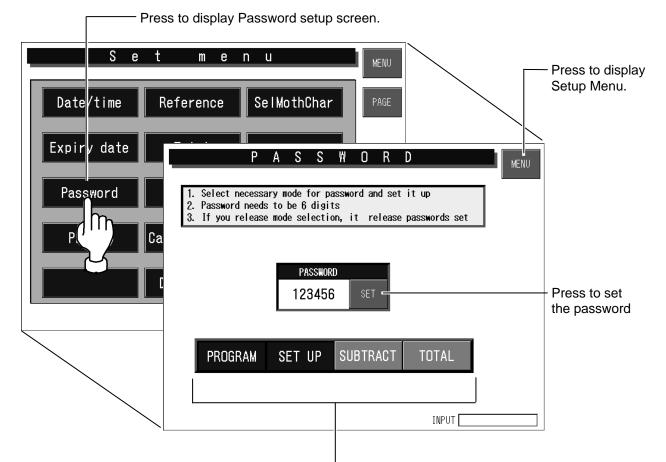


Press to select desired modes that require password number input.

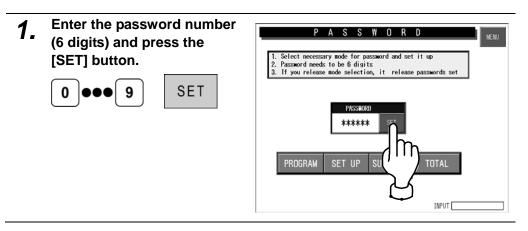

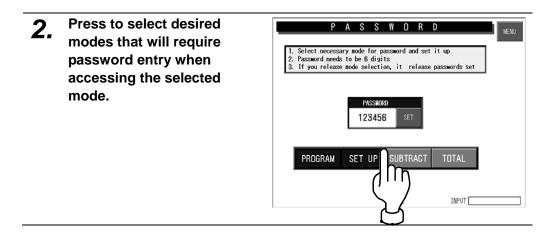

6.5 PRESET KEY SETTING

When setting preset keys, press the [PRESET] button on the Setup Menu to display the first Preset Key setup screen.

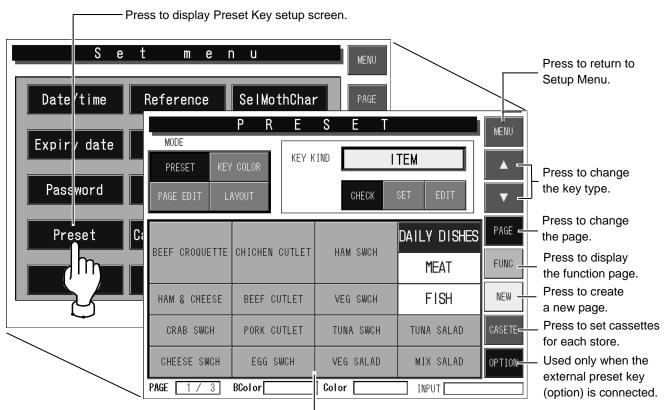


Preset page Press to allocate preset keys, or change the key color and size.

6.5.1 CREATING NEW PRESET PAGE

- 1. Press the [NEW] button to
 - create a new page.

The new page appears.

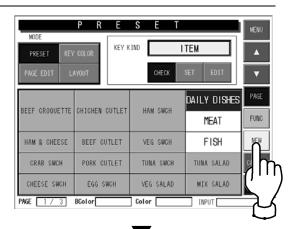

MODE	PR	E S	ΕT	MENU
PRESET	KEY COLOR	KEY KIND	ITEM	
PAGE EDIT	LAYOUT		CHECK SET 8	
				PAGE
				FUNC
				NEW
				CASETE
PAGE 87	7 BColor	Col	or INPU	

- **2.** Allocate preset keys on the new page.
 - To register preset keys, refer to 6.5.4 "Setting Preset Keys".
 - To color preset keys, refer to 6.5.5 "Coloring Preset Keys".
 - To copy a preset page, refer to 6.5.6 "Copying Preset Key Page".
 - To delete a preset page, refer to 6.5.7 "Deleting Preset Keys".
 - To change the size of preset keys, refer to 6.5.8 "Changing Preset Key Size".

6.5.2 CHANGING PRESET PAGE


1.	Select the page you want to change.	MODE PRESET KEY COLOR PRESET KEY COLOR PAGE EDIT LAYOUT CHECK SET EDIT									
	Example: Change page 3. 3 PAGE		CHICHEN CUTLET	HAM SWCH	DAILY DISHES						
	Page 3 screen appears.	HAM & CHEESE CRAB SWCH	BEEF CUTLET	VEG SWCH TUNA SWCH	FISH TUNA SALAD						
		CHEESE SWCH	EGG SWCH BColor	VEG SALAD Color	MIX SALAD						
2.	Change the preset page.										
	■To register preset keys, refer to 6.5.4 "Setting Preset Keys".										
	■To color preset keys, refer to 6.5.5 "Coloring Preset Keys".										
	■To copy a preset page, refer to 6.5.6 "Copying Preset Key Page".										
	■To delete a preset page, refer to 6.5.7 "Deleting Preset Keys".										
	■To change the size of preset keesize".	eys, refer to	6.5.8 "Ch	anging P	■To change the size of preset keys, refer to 6.5.8 "Changing Preset Key						

6.5.3 SETTING FUNCTION PAGE

It is convenient to register functions used in usual operations on the function page.

1. Press the [FUNC] button.

The function page appears.

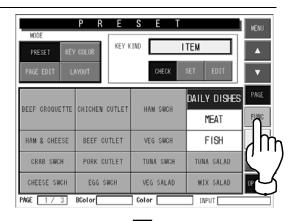

	P R	E S	SΕ	Т		MENU
MODE						
PRESET KEY	COLOR	KEY KIN	D	IT	EM	A
PAGE EDIT L	AYOUT		CHECK	SE	ED IT	•
- \$	-%		MARKDW	N	DATE	
REGISTEROO	P O P 000	,	origiı 000	ו	TOTAL	FUNC
Temp 00	Method 00		Comment 00		VOID	
						CASETE
PAGE 0 / 0	BColor		iolor 🗌		INPUT	

- **2.** Allocate preset keys on the page.
 - To register preset keys, refer to 6.5.4 "Setting Preset Keys".
 - To color preset keys, refer to 6.5.5 "Coloring Preset Keys".
 - To change the size of preset keys, refer to 6.5.8 "Changing Preset Key Size".

6.5.4 SETTING PRESET KEYS

This section explains how to allocate preset keys, edit the display names, and confirm the key types.

■ Allocating Preset Keys

				Pres	s to disp	ay the preset key list.
	P R ' color ayout	E Key K		TEM SET EDIT	MENU	Press to select the key type.
BEEF CROQUETTE	CHICHEN C	UTLET	HAM SWCH	DAILY DISHES MEAT	PAGE FUNC	Press to allocate
HAM & CHEESE	BEEF CUT	ſLET	VEG SWCH	FISH		the preset key.
CRAB SWCH	PORK CUT	FLET	TUNA SWCH	TUNA SALAD	CASETE	
CHEESE SWCH	EGG SW	CH	VEG SALAD	MIX SALAD	OPTION	
PAGE 1 / 3	BColor		Color	INPUT		

This field shows the current page and the total number of pages.

1. Confirm that the preset mode is selected. If not selected, press to select the [PRESET] button. The preset mode is selected.	MODE PRESET KEY COLOR PAG PAG PAG PAG PAG PAG PAG PAG	MENU PAGE FUNC NEW

PAGE 1/3 BColor


2. Press to select the [SET] button.

Now, you can register preset keys.

MODE PRESET	KEY COLOR	KEY KIND	ITEM		
PRESET	LAYOUT		CHECK SET	EDIT	▼
			S	ĥ	PAGE FUNC
					CASSET

COLOR [

] INPUT[

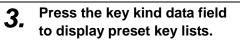

The first page of preset key list appears.

	PR	ESE	т		MENU
MODE		KEY KIND	П	ЕМ	
PRESET	KEY COLOR				
PAGE EDIT	LAYOUT		CHECK S	er(/''')	▼
				$\rightarrow \Lambda$	PAGE
			+	$-\Box$	FUNC
					rono
					NEW
					CASSETT
PAGE 1/3	3 BColor	COL	.OR		




Press the [PAGE] button repeatedly to change pages until the desired preset key type is found on the list.

4. Press the [PAGE] button to change the list when necessary.

	PRES	E T MENU
ľ	Select one fro	m below F BACK
PA	ITEM	
	KEY IMAGE	TEN TEN
	PRNT	WAY AGE
BEE	M PRICE	ORIGIN
_	-\$	REPEAT
HA	-%	REVISE
	EXP. DATE	SETE
C	POS	TION
PAGE	POP	SUBTRACT

	PRE	S E T MENU
	Select one fr	om below PAGE BACK
PA	ADD	FREE 3
		FREE 4
		FREE 5 AGE
BEE	TOTAL	SEND UNC
	CALC	RECEIVE
HP	FORMAT	JOURNAL
	IMAGE	RESEND
C	FREE 1	GROUPE
PAGE	FREE 2	воок

		•	
	PRES	ET	MENU
	Select one fro	om below PAGE BACK	
PA	BOOK	3	
	PCS	4	
	FEED	5	AGE
BEE	No.	6	UNC
	BARCODE	7	
HA	STORE No.	8	IEW
	0	9	SETE
6	1	00	TION
PAGE	2	DEL	
nuq			

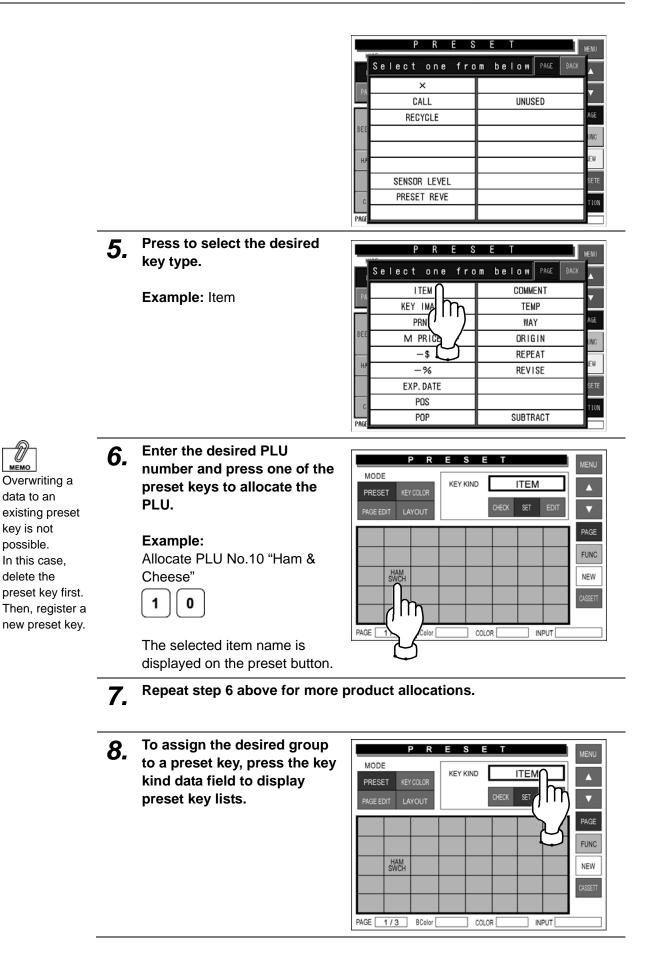

9. Press the [PAGE] button to change the list until you find the [GROUP] button on the list.

	Р	R	Е	S	Е	Т		MENU
Ľ	Select	one	fr	om	b e	low	PAGE BACK	< A
РА	L. L.			COMME				
	KEY IMAGE					TEM	llíη	
	Pf	Т		₩A	<u>Г</u>	AGE		
BEE	M PRICE					ORIGI	\mathcal{N}	UNC
	-	Т		REPEA				
HP	[₽] −%					REVIS	E	IEW
	EXP.	Т				SETE		
6	POS							TION
PAGE	Р			SUBTRA	CT			

Press to select the [GROUP] button.

	PRES	E T MENU
	Select one fro	m below PAGE BACK
РА	ADD	FREE 3
		FREE 4
		FREE 5
BEE	TOTAL	SEND
	CALC	RECEIVE
HA	FORMAT	JOURNAL
	IMAGE	RESEND
C	FREE 1	GROUPE
PAGE	FREE 2	BOC
Thaq		

PRESET

KEY KIND

COLOR

GROUP

CHECK SET EDIT

INPUT [

Δ

PAGE

FUNC

NEW

MODE

PRESET

HAM SWCH

BColor [

PAGE 1/3

10. Enter the desired group number and press one of the preset keys to allocate the group.

Example: Allocate Group No.4 "Daily Dishes"

4

The selected group name is displayed on the preset button.

11. Repeat step 10 above for more group allocations.

6.5.5 **SETTING PRESET KEYS**

Editing Preset Key Names

You can change preset key names such as product names and group names. The registered name data will not be changed by this procedure.

	Pr	ess to displa	y the preset key list.
PRESET KEY COLOR PAGE EDIT LAYOUT			e to select the key e to be edited.
BEEF CROQUETTE CHICHEN CUTIFT HAM SWCH PRE HAM & CHEESE BEEF CRAB SWCH PORK		A M E	RETURN
OKIE SWOIL POKIE CHEESE SWCH EGG TOTAL CHAR 000 PAGE 1 / 3 BColor REMAINING 048 \$ STYLE N/N	₩ E R S D F Z X C	TYU GHJ VBN	I O P K L M
FONTSIZE - Ñ COPY DELETE SP SHIFT FONT SHFF # 4 STYLE	\$ 7/ & - + * DELETE 1		Newline SET
INSERT BLACK STYLE 1. Confirm that the preset mode is selected. If not selected, press to	P R MODE PPT ET KEY COLOR		
select the [PRESET] button.	PAR LAYOUT BEEF STTE CHICHEN HAM & CHEESE BEEF CI CRAB SWCH PORK CI CHEESE SWCH EGG S	UTLET VEG SWCH UTLET TUNA SWCH	SET EDIT PAGE DAILY DISHES PAGE LUNCH BOX FUNC FISH NEW TUNA SALAD CASETE MIX SALAD CPTION

PAGE 173 BColor

Color [

INPUT

2. Press to select the [EDIT] button.

MODE	PRE	S E T		MENU
	COLOR KEY K	GR GR	OUPE	•
PAGE EDIT L	AYOUT	CHECK	SET ED	▼
DEEE DOGOUETTE	CHICHEN CUTLET	HAN CROU	DAILY	PAGE
BEEF GROUDETTE	CHICHEN COILET	HAM SWCH	LUNCI.	FUNC
HAM & CHEESE	BEEF CUTLET	VEG SWCH	FIS	NEW
CRAB SWCH	PORK CUTLET	TUNA SWCH	TUNA SALAD	CASETE
CHEESE SWCH	EGG SWCH	VEG SALAD	MIX SALAD	OPTION
PAGE 1/3	BColor	Color	INPUT	_

3. Confirm that the [GROUP] is selected in the key kind data field.

If not selected, press the key kind data field to display the preset key list and press to select the [GROUP] button.

	PRES	E T MENU
	Select one fro	m below PAGE BACK
PA	ITEM	
	KEY IMAGE	TEN
	PRNT	HAY AGE
BEE	M PRICE	
	-\$	REPEAT
HA	-%	REVISE
	EXP. DATE	SETE
C	POS	TION
PAGE	POP	SUBTRACT


		•
	PRES	E T MENU
ľ	Select one fro	m below PAGE BACK
PA	ADD	FREE 3
		FREE 4
		FREE 5 AGE
BEE	TOTAL	SEND UNC
	CALC	RECEIVE
HA	FORMAT	JOURNAL
	IMAGE	RESEND
C	FREE 1	GROUPE
PAGE	FREE 2	BOC
rnuq		
		K

4. Press to select the group button of which name is to be changed.

Example: Lunch Box


The text edit screen appears.

1005		P R	Ε	S	Ε	T			M	ENU
MODE	KEY	COLOR	KEY K	IND		GRO	JUPE			•
PAGE EDIT	L	AYOUT			CHECK	8	ET	EDIT		T
BEEF CROQUE	TTE	CHICHEN	CUTLET	н	AM SWCF		DAILY			AGE UNC
HAM & CHEE	SE	BEEF	OUTLET	VI	EG SWCH	ŧ	LUNU FI	H B0%	`_	IEW
CRAB SWC	H	PORK (OUTLET	TU	NA SWC	н	TUN		CAS	SETE
CHEESE SW	CH	EGG	SWCH	VE	G SALA	D	MIX	J	OP	TION
PAGE 17	3	BColor] Colo	r 🗌		INPU	ī		

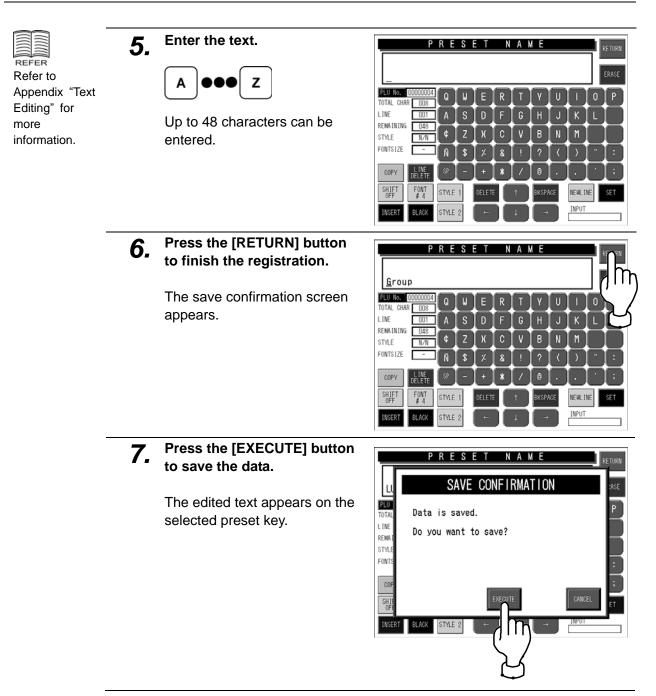

Checking Preset Key Type

You can check the type of preset key that is displayed.

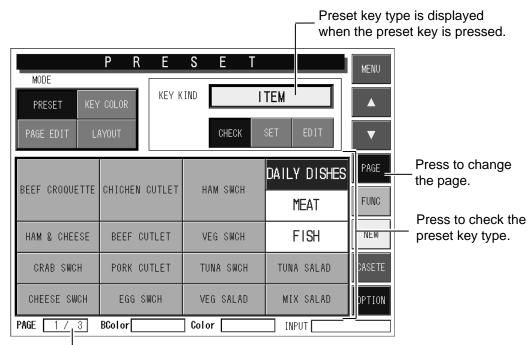

- This field shows the current page and the total number of pages.


1. Check that the preset mode is selected. If not selected, press to select the [PRESET] button.

The preset mode is selected. When the preset mode is selected, the [CHECK] button is also selected.


Е S Е MENU KEY KIND ITEM Δ CHECK V DAILY DISHES CHICHEN CUTLET HAM SWCH FUNC MEAT BEEF CUTLET VEG SWCH FISH NEW HAM & CHEESE CRAR SHCH PORK CUTLET TUNA SWCH TUNA SALAD MIX SALAD CHEESE SWCH EGG SWCH VEG SALAD OPTION PAGE 1/3 BColor Color INPUT

2. Press the desired preset key to check its key type.

"GROUP (01)" appears in the key kind data field.

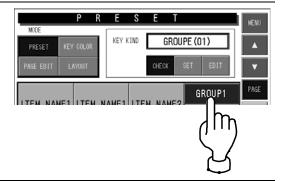

6.5.5 COLORING PRESET KEYS

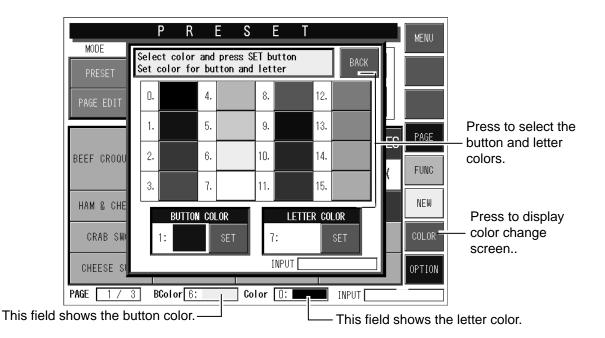

1. Press the [KEY COLOR] button to select the color change mode.


The message "COLOR" appears in the key kind display field.

MODE PRESET KEY PAGE EDIT LA		S E T	DLOR	MENU
BEEF CROQUETTE		HAM SWCH	DAILY DISHES LUNCH BOX	PAGE FUNC
HAM & CHEESE	BEEF CUTLET	VEG SWCH	FISH	NEW
CRAB SWCH	PORK CUTLET	TUNA SWCH	TUNA SALAD	COLOR
CHEESE SWCH	EGG SWCH	VEG SALAD	MIX SALAD	OPTION
PAGE 173	BColor 6:	Color 🛛:	INPUT	

2. Press the [COLOR] button.

The color list appears.

	PRE	S E T		MENU
	/ COLOR	CC	DLOR	
	CHICHEN CUTLET	HAM SWCH	DAILY DISHES	PAGE
HAM & CHEESE	BEEF CUTLET	VEG SWCH	LUNCH BOX	FUNC
CRAB SWCH	PORK CUTLET	TUNA SWCH	TUNA SALAD	COLOR
CHEESE SWCH	EGG SWCH	VEG SALAD	MIX SALAD	
PAGE 1/3	BColor 6:	Color []:	INPUT	Ξ'···
				Y

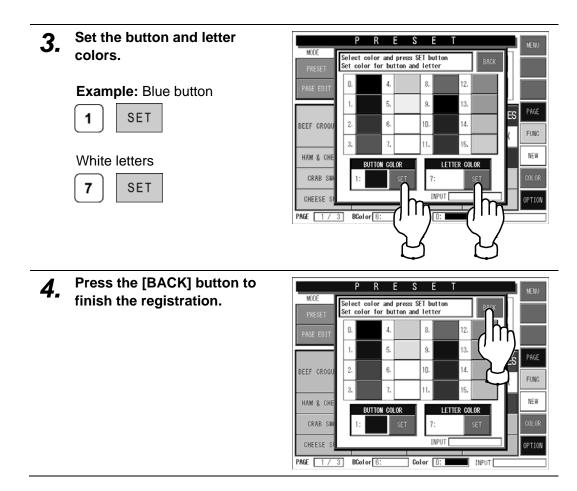

6.5.6 COPYING PRESET KEY PAGE


MODE	P R	E S	ET	MENU	
PRESET PAGE EDIT	KEY COLOR	PROCESS	PAGE COPY		Press to select the page editing process.
				PAGE -	Press to change the page.
				COPY	Press to copy the preset page.
PAGE 4 / 3	BColor	Color	r INPUT F		


1. Check that the preset mode is selected and press the [NEW] button.

A new page is created on the screen.

MODE	PRE	S E T		MENU
	COLOR KEY	K IND	TEM	
PAGE EDIT LA	AYOUT	CHECK	SET EDIT	▼
	CHICHEN CUTLET	HAM SWCH	DAILY DISHES	PAGE
BEEF GROUDETTE	CHICHEN COTLET	HAM SWOH	MEAT	FUNC
HAM & CHEESE	BEEF CUTLET	VEG SWCH	FISH	
CRAB SWCH	PORK CUTLET	TUNA SWCH	TUNA SALAD	17 m
CHEESE SWCH	EGG SWCH	VEG SALAD	MIX SALAD	K 7
PAGE 1 / 3	BColor	Golor	INPUT	Y

- 2. Press the [PAGE EDIT] button to select the page edit mode.
- 3. Select the message "PAGE COPY" in the process field by using the [▲] and [▼] buttons.

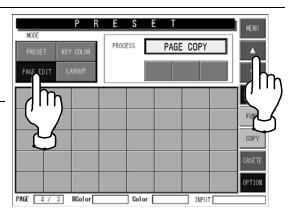

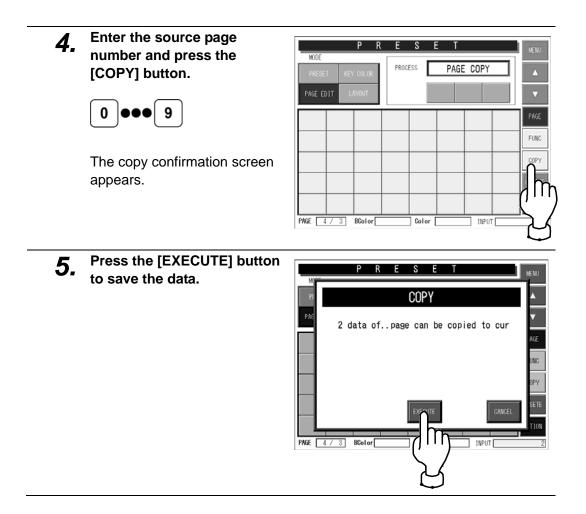


DELETING PRESET PAGE 6.5.7


	PRE COLOR AYOUT	SET	E DEL	MENU	Press to select the page editing process.
BEEF CROQUETTE	CHICHEN CUTLET	HAM SWCH	DAILY DISHES LUNCH BOX	PAGE FUNC	Press to change the page.
HAM & CHEESE	BEEF CUTLET	VEG SWCH	FISH	DEL -	Press to delete the preset page.
CRAB SWCH	PORK CUTLET	TUNA SWCH	TUNA SALAD	CASETE	
CHEESE SWCH	EGG SWCH	VEG SALAD	MIX SALAD	OPTION	


- Press the [PAGE EDIT] 1. button to select the page edit mode.
- 2. Select the message "PAGE DEL" in the process field by using the $[\blacktriangle]$ and $[\lor]$ buttons.

[PAGE] buttons.

3.

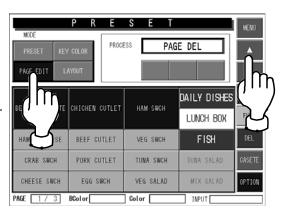

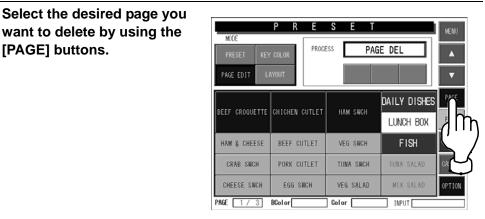

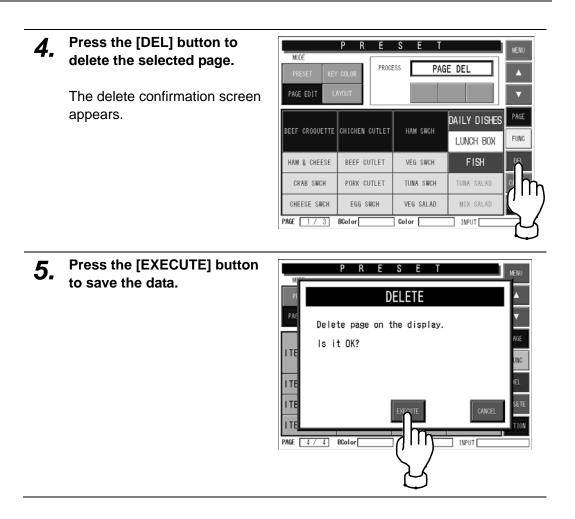


6.5.8 CHANGING PRESET KEY SIZE

NODE	PRE	S E T		MENU	
MODE PRESET KEY	' COLOR	CHAN	GE SIZE		
PAGE EDIT L	AYOUT SI	ZEL	M S		Press to select the key size.
			DAILY DISHES	PAGE	
BEEF CROQUETTE	CHICHEN COTLET	HAM SWCH	LUNCH BOX	FUNC	Droco to chongo the
HAM & CHEESE	BEEF CUTLET	VEG SWCH	FISH	INEW	Press to change the preset key size.
CRAB SWCH	PORK CUTLET	TUNA SWCH	TUNA SALAD	CASETE	
CHEESE SWCH	EGG SWCH	VEG SALAD	MIX SALAD	PTION	
PAGE 1 / 3	BColor	Color	INPUT	_	

1. Press the [LAYOUT] button to select the layout mode and press to select the desired key size.

The message "CHANGE SIZE" appears in the process field.

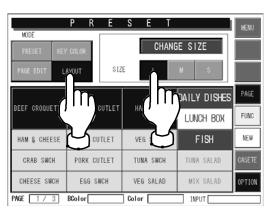

Press the desired preset key 2. R MOD to change the size. CHANGE SIZE SIZE DAILY DISHES BEEF CROQUETTE CHICHEN CUTLET HAM SWCH FUNC LUNCH BOX FISH NEW HAM & CHEESE BEEF CUTLET CRAB SWCH PORK CUTLET TUNA SALAD m CHEESE SWCH EGG SWCH MIX SALAD OPTION

PAGE 1 / 3 BColor

INPUT [

6.5.9 LINKING PRESET PAGE WITH CASSETTE

1. Press the [CASSETTE] button.

The cassette link preset setup screen appears.


	PRE	S E T		MENU
	' COLOR AYOUT \$12		GE SIZE	
BEEF CROQUETTE	CHICHEN CUTLET	HAM SWCH	DAILY DISHES LUNCH BOX	PAGE
HAM & CHEESE	BEEF CUTLET	VEG_SWC	FISH	NEW
CRAB SWCH	PORK CUTLET	TUNA SW CH	TUNA SALAD	CASETE
CHEESE SWCH	EGG SWCH	VEG SALAD	MIX SALAD	
PAGE 1 / 3	BColor	Color	INPUT	<u> </u>
				िरि

2. Enter the desired preset page number and press the cassette number field on the screen.


Example:

2

Set the second preset page to link with the cassette number "0 1".

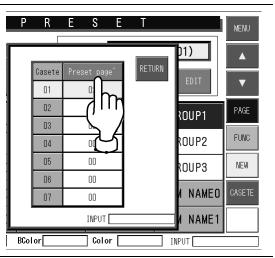


3. Press the [RETURN] button to save the data.

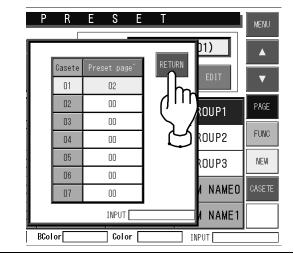

6.6 REFERENCE DATA SETTING

When setting various reference data, press the [REFERENCE] button on the Setup Menu to display Reference Data setup screen.

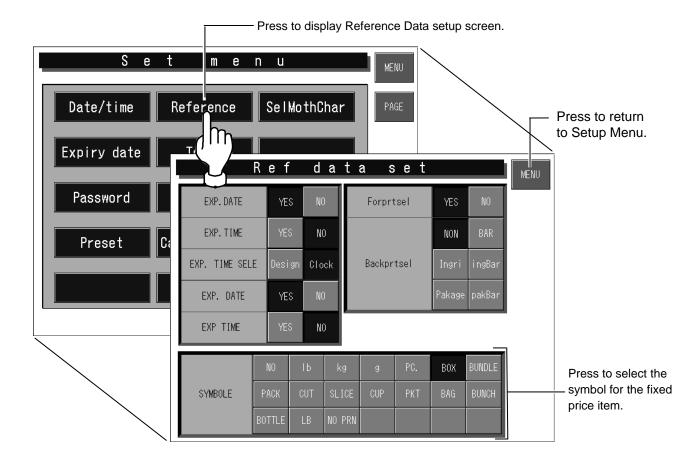


Setting Method for Each Item

Item	Operation		
Pack date print	YES Pack date is printed on labels.		
	NO Pack date is not printed on labels.		
Pack time print	YES Pack time is printed on labels.		
	NO Pack time is not printed on labels.		
Pack time select	Design Designated time is used.		
	Clock Internal clock is used.		
Expiry date print	YES Expiry date is printed on labels.		
	NO Expiry date is not printed on labels.		
Expiry time print	YES Expiry time is printed on labels.		
	NO Expiry time is not printed on labels.		
Fore printer select	YES Top labels are printed.		
	NO Top labels are not printed.		
Back printer select	NON Bottom labels are not printed.		
	BAR Bottom labels are printed with barcodes.		
	Ingre Bottom labels are printed with ingredient data.		
	IngBar Bottom labels are printed with ingredient data and barcodes.		
	Package Bottom labels are printed with package information		
	PakBar Prints barcodes and package information on bottom labels.		
Symbol select	Select the symbol for the fixed price product.		

6.7 TOTAL SETTING

When setting various data for totals, press the [TOTAL] button on the Setup Menu to display Total Setup screen.

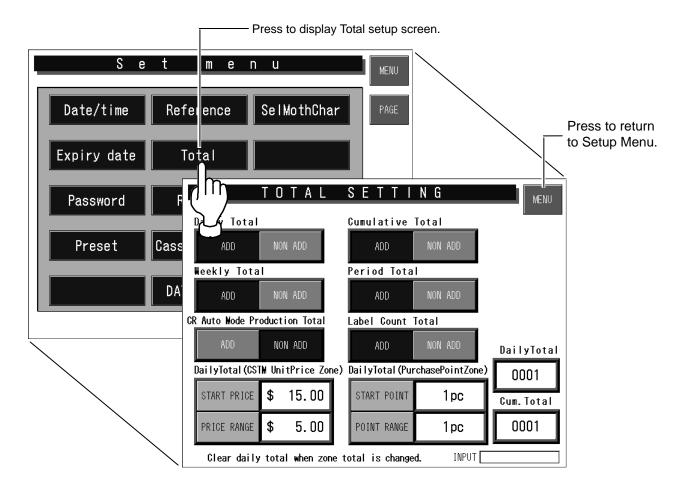


Setting Method for Each Item

ltem	Operation		
Daily total	ADD	Production results are added to this total.	
	NON ADD	Production results are not added to this total.	
Cumulative total	ADD	Production results are added to this total I.	
	NON ADD	Production results are not added to this total I.	
Weekly total	ADD	Production results are added to this total.	
	NON ADD	Production results are not added to this total.	
Period total	ADD	Production results are added to this total.	
	NON ADD	Production results are not added to this total.	

Item	Operation		
CR auto mode production total	ADD	Production result in continuous labeling is added to this total.	
	NON ADD	Production result in continuous labeling is not added to this total.	
Label count total	ADD	The number of issued labels is added to this total.	
	NON ADD	The number of issued labels is not added to this total.	
Daily total (CSTM unit price zone)		Up to 6 digits can be entered. Example: Start price \$5.00	
	START PRICE	5 00 START PRICE	
		NOTE Make sure to perform daily total clear immediately after changing the start time.	
		Up to 6 digits can be entered. Example: Price range \$3.00	
	PRICE RANGE	3 00 START PRICE	
		NOTE Make sure to perform daily total clear immediately after changing the price range.	
Daily total (Purchase point zone)	START POINT	Up to 2 digits can be entered. Example: Start point "1"	
		1 START POINT	
		NOTE Make sure to perform daily total clear immediately after changing the start point.	
		Up to 6 digits can be entered. Example: Point range "2"	
	POINT RANGE	2 POINT RANGE	
		NOTE Make sure to perform daily total clear immediately after changing the point range.	
Daily total	Daily total counter This counter is increased by one whenever total data is cleared after the issue of daily preset report.		
Cumulative total	Cumulative total counter This counter is increased by one whenever total data is cleared after the issue of cumulative preset report.		

6.8 PRESET REPORT SETTING

When selecting preset reports, press the [REPORT] button on the Setup Menu to display Preset Report setup screen.

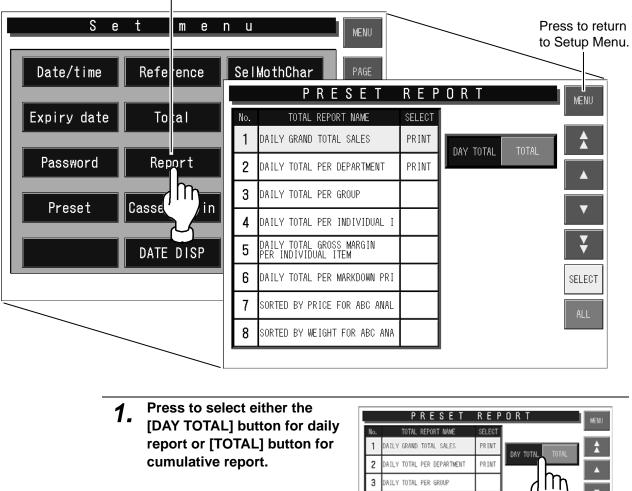

Press to display Preset Report setting screen.

- 4 DAILY TOTAL PER INDIVIDUAL : ¥ AILY TOTAL GROSS MARGIN PER INDIVIDUAL ITEM 5 6 DAILY TOTAL PER MARKDOWN PRI SELECT 7 SORTED BY PRICE FOR ABC ANAL 8 SORTED BY WEIGHT FOR ABC ANA Select totals to be linked by PRESET REPORT TOTAL REPORT NAME 1 DATEX GRAND TOTAL SALES PRINT
- using the $[\bigstar]$ $[\blacktriangledown]$ $[\blacktriangle]$ buttons. A PRINT 2 DATLY TOTAL PER DEPARTMENT 3 AILY TOTAL PER GROUP 4 DAILY TOTAL PER INDIVIDUAL 1 DAILY TOTAL GROSS MARGIN PER INDIVIDUAL ITEM 5 6 DAILY TOTAL PER MARKDOWN PRI 7 SORTED BY PRICE FOR ABC ANAL 8 SORTED BY WEIGHT FOR ABC ANA

2.




3. Press the [SELECT] button to select totals to be linked.

The message "PRINT" is displayed in the select column.

6.9 CASSETTE LINK SETTING

When setting the cassette link data, press the [CASSETTE LINK] button on the Setup Menu to display Cassette Link setup screen.

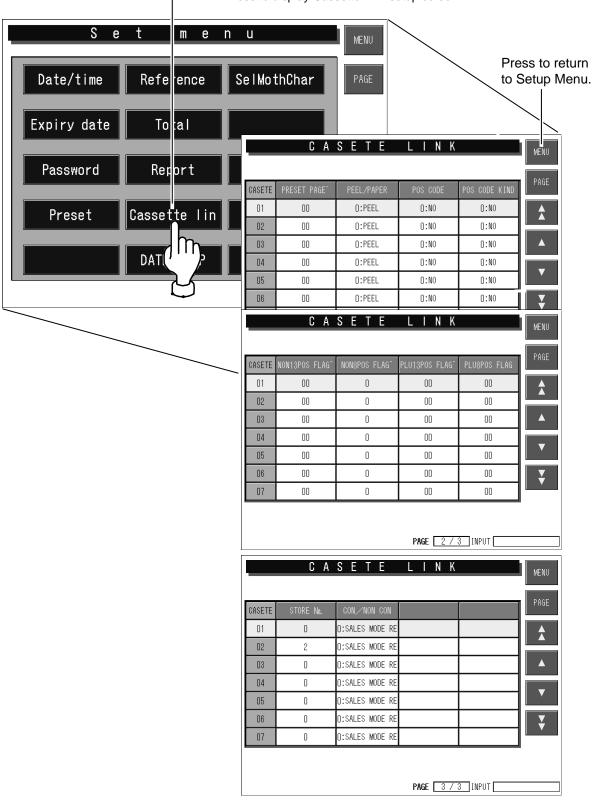

- Press to display Cassette Link setup screen.

Setting Method for Each Item

Item	Example	Operation
PRESET PAGE Preset page	Set the second page to the cassette number "1".	Up to page 99 can be entered. 2 PRESET PAGE
PEEL/PAPER Peel/Paper	Select the labeling method.	Press this button to display the selection screen.
		PEEL When issuing and peeling labels
		PAPER When issuing labels with backing paper.
POS CODE POS code	Select the POS code system.	Press this button to display the selection screen.
		NON POS code system is not set.
		NON PLU 13 Non PLU 13 system is set.
		NON PLU 8 Non PLU 8 system is set.
		PLU 13 PLU 13 system is set.
		PLU 8 system is set.

Item	Example	Operation
		Press this button to display the selection screen.
		No SET UP POS code type is not set.
		STD 5 dig POS code type is not set.
POS CODE KIND POS code kind	Select the POS code type.	C/P6dig Standard 5-digit is set.
		F/G6dig 6-digit including check-price is set.
		C/P Price 5 dig 6-digit including F/G is set.
		Code 5P6 6-digit code and 5-digit price are set.
NON 13 POSFLAG		Up to 99 can be entered.
Non-PLU 13 POS flag	Set the Non-PLU 13 POS flag "2".	2 NON 13 POS FLAG
NON 8 POSFLAG	Set the Non-PLU 8 POS	Up to 9 can be entered.
Non-PLU 8 POS flag	flag "2".	2 NON 8 POSFLAG
PLU 13 POSFLAG	Set the PLU 13 POS flag	Up to 99 can be entered.
PLU 13 POS flag	"49".	4 9 PLU 13 POSFLAG
PLU 8 POS FLAG	Set the PLU 8 POS flag	Up to 9 can be entered.
PLU 8 POS flag	"4".	4 PLU8POSFLAG
STORE No.		Up to 9999 can be entered.
Store number	Set the store number "5".	5 STORE No.
		Press this button to display the selection screen.
CON/NON CON	Select to issue either multiple labels (continual)	SALES MODE REF Sales mode setting is referred to.
Continual/ Non-continual	or one label (non-continual)	No CON Label are not continuously issued.
		CON Labels are continuously issued.

APPENDIX TEXT EDITING

The following Text Edit screen is used when entering desired characters and editing the entered text.

			PLU name		
	PLU numb	ber	The called Pl	LU name or the	ne entered PLU name is displayed.
		Commodity r		RETURN	 Touch this key to return to the Program Menu screen. The displayed PLU name can be deleted.
Number of registered characters — Current line number — Remaining number of characters — Character attribute —	PLU No. TOTAL CHAR 000 LINE 001 REMAINING 511 STYLE N/N		TYUI GHJK VBNM		
STYLE 1STYLE 2N: NormalN: NormalB: Bold faceS: ShadowR: ReverseE: EdgeU: UnderlineF: Frame	COPY SHIFT FONT OFF #7 INSERT BLACK		! ? < > / @ ↑ BKSPACE ↓ → INP	> " : , • ; , • ; wline FIX	

Function Keys

Кеу	Function
ERASE	Used to erase the entire text on the text display field.
FIX	Used to confirm the edited text image on the text display field.
NEW LINE	Used to perform carriage return.
RETURN	Used to finish the text edit screen.
COPY	Used to copy the original file data to the destination file data.
BKSPACE	Used to delete a character by moving the cursor back.
$\leftarrow \rightarrow$	Used to select the entered characters for editing the text. Also used to move the cursor left or right.
	Used to move the character line up or down.
DELETE	Used to delete a character at the position where the cursor is positioned.

Кеу	Function
STYLE1	Used to emphasize the characters. Touching this key changes the key display in the following order. \blacksquare BOLD-FACE \rightarrow REVERSE \rightarrow UNDERLINE \rightarrow FRAME Used to emphasize the characters.
STYLE2	This key is effective only when the two thermal heads are used. Touching this key changes the key display in the following order. SHADOW → EDGE
SHIFT ON / SHIFT OFF	Used to select either lower-case or upper-case characters. SHIFT ON: Lower-case characters SHIFT OFF: Upper-case characters Touching this key changes the key display in the following order. $\boxed{\text{SHIFT}} \Rightarrow \boxed{\text{SHIFT}}$
BLACK / RED	Used to select either black or red characters. Touching this key changes the key display in the following order. BLACK → RED Note: Available only when two-color print specification is used.
INSERT / SELECT	Used to select either for inserting a character or selecting the characters on the text display field. Touching this key changes the key display in the following order.
FONT #1	Used to select a character size. Touching this button changes the display in the order from FONT #1 (smallest) to FONT #13 (largest).

Shift ON /OFF

[SHIFT ON] or [SHIFT OFF] key is used to select either lower-case or upper-case characters.

Shift OFF (Upper-case characters)


C	commodity name	RETURN
		ERASE
PLU No. 0001 TOTAL CHAR 006	QWERTYUI	0 P
LINE 001	ASDFGHJK	L
	€ZXCVBNM	
	Ñ \$ % & ! ? < >	• :
COPY	SP - + * / @ . , [• ;
SHIFT FONT OFF #3 S	STYLE 1 DELETE 1 BKSPACE NEWLINE	FIX
INSERT BLACK S	STYLE 2 ← ↓ → INPUT	

Shift ON (Lower-case characters)

	Commodity name	RETURN
ishida		ERASE
PLU No. 0001 TOTAL CHAR 006	QWERTYUI	0 P
LINE 001	ASDFGHJK	L
REMAINING 505 STYLE N/N	€ZXCVBNM	
	Ñ \$ % & ! ? < >	• :
COPY	SP - + * / @ . ,	• ;
SHIFT FONT ON #3	STYLE 1 DELETE 1 BKSPACE NEWLINE	FIX
INSERT BLACK	STYLE 2 ← ↓ → INPUT	

Text Editing Example:

Text editing procedure is explained by quoting the following Commodity Name edit screen as an Example.

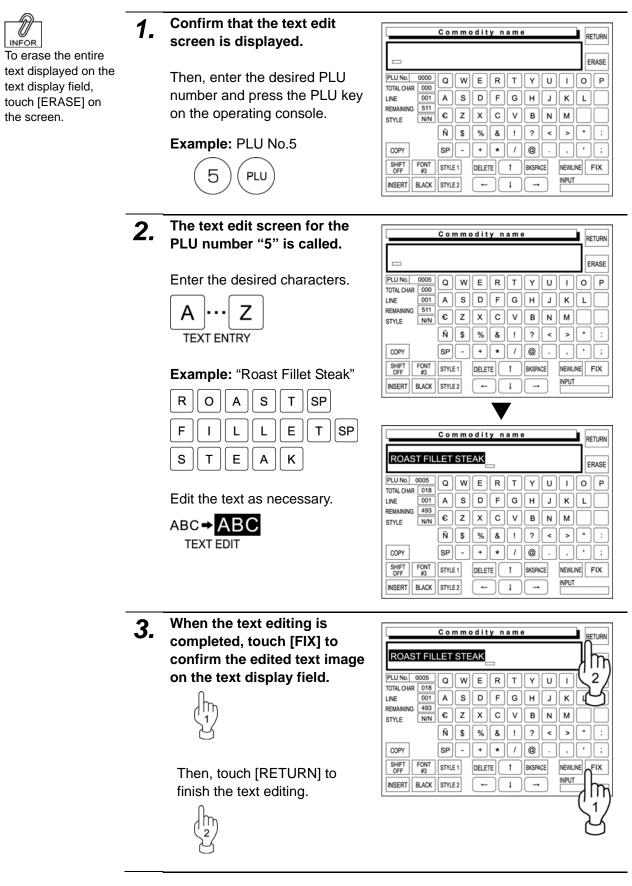


4.	The confirmation screen appears on the display for		Commodity name	RETURN
	saving.	RO.	SAVE CONFIRMATION	ASE
	Then, touch [EXECUTE] to save the text.	PLUN TOTAL O LINE REMAIN STYLE COPY SHIFT OFF B		P :: CANCEL IX IPUT

_


Emphasizing Characters

[STYLE 1] and [STYLE 2] keys are used to emphasize the characters.

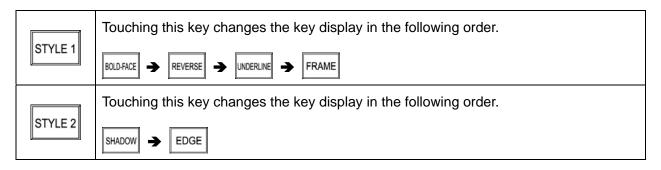

The following procedure explains how to emphasize characters.

Emphasizing characters first

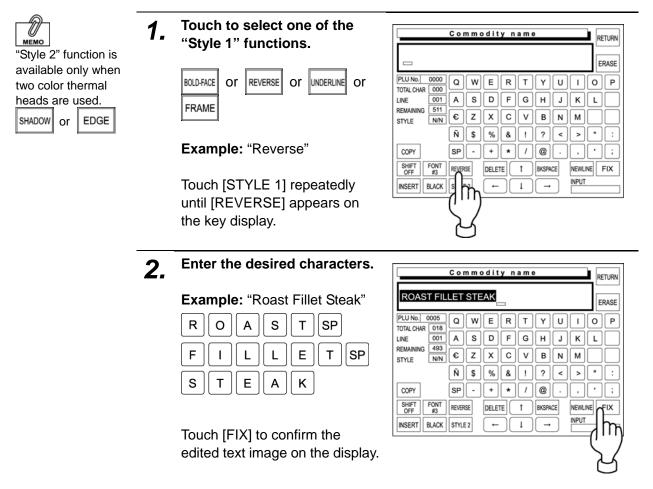

Emphasizing characters later

1. Confirm that the existing text is displayed on the text display field.

Otherwise, enter the desired characters.

Example: "Roast Fillet Steak"

ROASTSP
FILLETSP
STEAK

[Commodity name	RETURN
ROAST FIL	ERASE	
PLU No. 0005 TOTAL CHAR 018	QWERTYU	JIOP
LINE 001	ASDFGH.	JKL
REMAINING 493 STYLE N/N	€ Z X C V B M	N M
	Ñ\$%&!?•	< > " :
COPY	SP - + * / @ .	;
SHIFT FONT OFF #3	STYLE 1 DELETE 1 BKSPACE	NEWLINE FIX
INSERT BLACK	STYLE 2 ← ↓ →	INPUT


2. Confirm that [SELECT] is selected on the screen.

If not selected, touch [INSERT] to change the key display to [SELECT].

ROAST FIL		STE	E	R	Т	Y	U			PASE
TOTAL CHAR 018 LINE 001	A	s	D	F	G	н	J	ĸ	L	\Box
REMAINING 493 STYLE N/N	€	Z	X	С	V	В	N	м		
	Ñ	\$	%	&	!	?	<	>	•	:
COPY	SP	-	+	*	1	@	\cdot	,	\cdot	;
SHIFT FONT OFF #3	STYLE	1	DELET	re (1	BKSPA	CE	NEWL		IX
SELECT BLACK	STYLE	2	-		ţ	-				
(''')										

3. Select [REVERSE] by touching [STYLE 1] repeatedly.

Example: "Reverse"

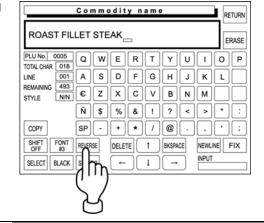

-	–] and [\rightarrow] keys to	Commodity name		RETURN
select	the characters to be isized.	ROAST FILLET STEAK		ERASE
•				0 P
			к	L
			м]	
		Ň \$ % & ! ? <	>	• :]
		COPY SP - + * / @ .		•;
		SHIFT FONT REVERSE DELETE 1 BKSPACE N	EWLINE	FIX
		SELECT BLACK STYLE 2	NPUT	
		עיוך עיוך		
		$\langle \langle \rangle \rangle$		

Erasing Entire Text

The following procedure is used to delete the entire text displayed on the text display field.

1. Confirm that the existing text is displayed on the text display field.

Example: "Roast Fillet Steak"

Commodity name	RETURN
ROAST FILLET STEAK	ERASE
PLU No. 0005 Q W E R T Y U I	0 P
Ñ\$%&!?<>	• :
COPY SP - + * / @ . ,	•;
SHIFT FONT OFF #3 STYLE 1 DELETE 1 BKSPACE NEWLINE	FIX
SELECT BLACK STYLE 2 ← ↓ → INPUT	

2. Touch [ERASE] on the screen to delete the entire text.

	Cor	n m c	dit	y n	ame	e			RETURN	
									ERASE	
PLU No. 0000 TOTAL CHAR 000	Q	W	E	R	T	Y	U	Ι	GR	
LINE 001	Α	s	D	F	G	Н	J	к	(''')	
REMAINING 511 STYLE N/N	€	z	x	С	V	В	N	M	C L A	
	Ñ	\$	%	&	!	?	<	>	ĿĻ	
COPY	SP	•	+	*	1	@	•	•	•;	
SHIFT OFF #3	STYLE	1	DELETE		1 BKSPACE		CE	NEWLINE FIX		
SELECT BLACK	STYLE	2	-		Ļ	-		INPUT		

Back Spacing

The following procedure is used to delete a character by moving the cursor back.

1. Place the cursor immediately after the character to be deleted.

Example: "Roast Fillet Steal"

PLU No. 0005 TOTAL CHAR 018 LINE 001 REMAINING 493 STYLE N/N	QWERTYUI ASDFGHJK EZXCVBNM Ñ\$%&!?<>	0 P L						
COPY SHIFT FONT OFF #3 SELECT BLACK	SP - + * / @ STYLE 1 DELETE 1 BKSPACE NEWLINE STYLE 2 - ↓ -	• ; FIX						

2. Touch [BACK SPACE] on th screen to delete the character.

TOTALCHAR 017 LINE 001 A S D F G H J K L REMAINING 494
STYLE NN C Z X C V B N M
Ñ \$ % & ! ? < > "
COPY SP - + * / @ . , '
SHIFT FONT STYLE 1 DELETE 1 BKSPACE NEWLINE

Deleting a Character

The following procedure is used to delete the character at the position where the cursor is placed.

The displayed text is misspelled.	Commodity name RETURN ROAST FILLETT STEAK ERASE
Example: "Roast Fille	
Place the cursor at the cursor at the character to be delet	d.
Then, touch [DELETE] screen to delete the ch	

Inserting a Character


The following procedure is used insert a character next to the right where the cursor is placed.

1.	The displayed text is misspelled.	Commodity name RETURN ROAST FILET STEAK
	Example: "Roast Filet Steak"	
	Example. Roast het Steak	Image: PLU No. 0005 Q W E R T Y U I O P TOTAL CHAR 017 A S D F G H J K L
		Ň\$%&!?<>*:
		COPY SP - + * / @ . , • ;
		SHIFT OFF FONT #3 STYLE 1 DELETE 1 BKSPACE NEWLINE FIX SELECT BLACK STYLE 2 ← ↓ → INPUT
2	Confirm that [INSERT] is	-
2.	selected on the screen.]	Commodity name RETURN
		ROAST FILET STEAK
	If not selected, touch [SELECT]	PLU No. 0005 Q W E R T Y U I O P
	to change the key display to [INSERT].	LINE 001 A S D F G H J K L
		STYLE NN CZXCVBNM N \$ %&!?<>":
		COPY SP - + * / @ . , ' ;
		SHIFT FONT OFF FONT STYLE 1 DELETE 1 BKSPACE NEWLINE FIX
		INSERT BLACK STYLE 2 ← 1 → INPUT
		(m)
		님
2	Move the cursor to the	
5.	position where the character	Commodity name RETURN
	to be inserted.	
		PLUNO 0005 Q W E R T Y U I O P
	Then, enter the character "L".	
	L	STYLE NN € Z X C V B N Image: N <th< th=""></th<>
		Ν 9 70 α 1 · · · · · · · · · · · · · · · · · · · · · · · · · · · · · · · · · · · · · · · · · · · · · · · · · · · · · · · · · · · · · · · · · · · · · · · · · · · · · · · · · · · · · · · · · · · · · · · · · · · · ·
		SHIFT FONT STYLE 1 DELETE 1 DESPACE NEWLINE FIX
		գրու գրու

Copying Original Text to Designated Field

The following procedure is used to copy the original text to the text field of the designated file.

Example: Copy the text "Roast Fillet Steak" of the PLU No.5 to the PLU No.25.

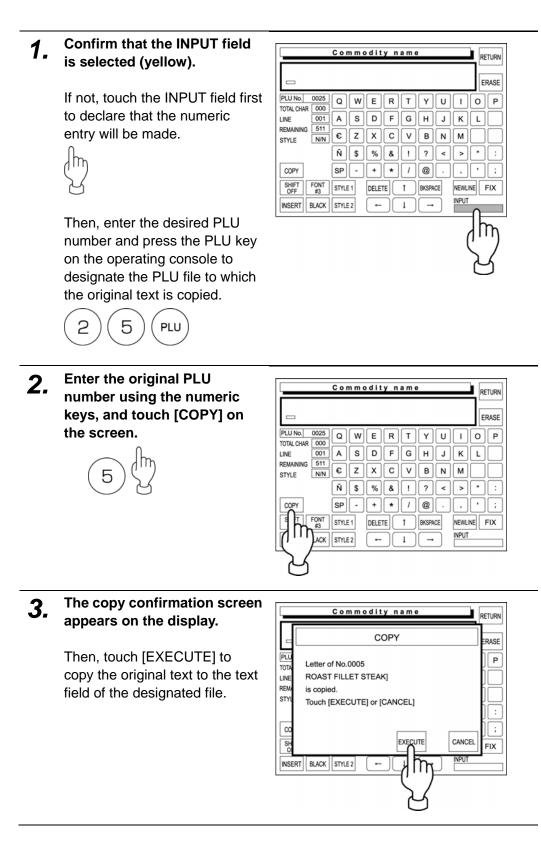

4. The text "Roast Fillet Steak" of the PLU No.5 is copied to the text display field of the PLU No.25.

ROAST FILLET STEAK									E	RASE
PLU No. 0025 TOTAL CHAR 000	Q	W	E	R	T	Y	U			P
LINE 001 REMAINING 511	<u>A</u>	s		F	G	Ш	IJ	К	Ľ	
STYLE N/N	€	z	X	С	V	В	N	м		
	Ñ	\$	%	&	!	?	<	>	•	:
COPY	SP	•	+	*	1	@	•	,	•	;
SHIFT FONT OFF #3	STYLE 1		DELETE 1 BKSPACE				CE	NEWLINE FIX		