


IL-EMZ

Operation Manual

COUNTRY: CAN. USA 2008.09.10

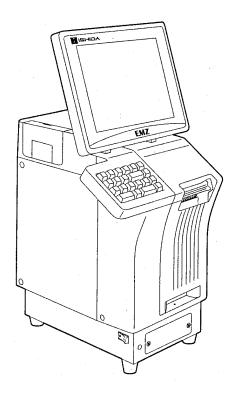

IMPORTANT

- Read this manual thoroughly, and do not perform installation, operation, maintenance, or inspection unless you fully understand all of the contents.
- Keep this manual in a safe place where you can refer to it easily while installing, operating, and carrying out maintenance or inspections.



© ISHIDA Co., Ltd. 2008

All rights are reserved. No part of this publication may be reproduced, stored in a retrieval system, or transmitted in any form or by any means mechanical, electronic, photocopying, recording, or otherwise without prior written permission of ISHIDA. The information contained in this manual is subject to change without notice.



Contents

SPECIFICATIONS	. 2
NAME OF EACH PART	. 4
OUTER DIMENSIONS	. 5
PREPARATION FOR INSATALLATION	. 6
PRECAUTIONS FOR INSTALLATION	. 7
HARDWARE INSTALLATION	. 8
FINALIZING INSTALLATION	. 9
	NAME OF EACH PART OUTER DIMENSIONS PREPARATION FOR INSATALLATION PRECAUTIONS FOR INSTALLATION HARDWARE INSTALLATION


1.1 SPECIFICATIONS

No.	Item	Specifications			
1	Operating environment	•			
1.1	Temperature range	-5°C - 40°C			
	Operating humidity	20% - 85% (Non condensing)			
2	Outer dimensions	···· ···· · ··· · · · · · · · · · · ·			
2.1	Main body	W285 × D368 × H645mm			
2.2	Scale unit	W300 × D270 × H88mm			
3	Mass				
3.1	Main body	19kg			
4	Power supply	CAN, USA: AC110-120V 50/60Hz 4A			
5	Display unit	10.4-inch TFT color liquid crystal VGA with backlight (640 × 480 dots)			
6	Printing method	Direct thermal method			
7	Thermal head Print speed	LH4114K (TDK) 3-inch (640 dots), 8 dots/mm			
-	100mm/sec				
9	Effective print size	78mm			
	Label size				
	Label width	30 - 80mm			
	Label length	30 - 150mm			
10-3 11	Backing paper width Label diameter	32 - 82mm			
11-1	Core inner diameter	∮76mm			
	Max. outer diameter	<i> </i> ¢2240mm			
	Keys	240mm - 450mm			
	Touch panel	212mm × 159mm			
12-2	Stroke key	24 keys Ethernet:1ch			
13	1/0	RS-232C:2ch			
		PCMCIA:2ch			
		I2NET:2ch(ISHIDA Original Protocol)			
14	Program storage medium				
14-1	Flash ROM (1MB)	Boot program			
14-2	Compact Flash (32MB)	OS + Application program			
15	Memory capacity	*The registration number varies depending on the total memory			
		capacity.			
15-1	PLU master	511 characters, 4,000 PLUs, 5 prices			
15-2	Additive master	511 characters, 9,999 additives			
15-3	POP master	39 characters, 999 POPs			
15-4	Comment master	511 characters, 99 comments			
15-5	Origin master	39 characters, 9,999 origins			
15-6	Storage temperature master	119 characters, 99 temperatures 119 characters, 99 methods			
15-7 15-8	Storage method master Free master 1	511 characters, 99 methods			
15-6	Free master 2	511 characters, 99 messages			
15-10	Free master 3	511 characters, 99 messages			
15-10	Free master 4	511 characters, 99 messages			
15-12	Free master 5	511 characters, 99 messages			
15-12	Format master	99 characters, 2,048 bytes/format			
15-13	Label master	99 labels			
15-15	Department name master	13 characters, 9,999 names			
15-16	Group name master	13 characters, 9,999 names			
15-17	Class name master	13 characters, 9,999 names			
15-18	Sales promotion master	99 images, 99 comments, 999 origins			
15-19	Store master	9,999 stores,			


No.	Item	Specifications
		48 characters/store name, 48 characters/store address
15-20	Tray master	9,999 trays, 10 characters/tray
15-21	Memo preset keys	56 items (28 items x 2 pages)
15-22	Classification preset keys	36 types (5 ranges/type)
16	Barcode print	
17	POS code system	NON-PLU 13 digits, NON-PLU 8 digits PLU 13 digits, PLU 8 digits
18	POS types	5-digit standard code, 6-digit code including check price, 6-digit code including flag, 5-digit code including check price, 6-digit code + 5-digit price
19	Durability	
19-1	Number of label issues	16.2 million labels.(label length 42mm, 9,000 labels, 360 operation days, 5 years, 721km)
19-2	Printer frame drawer	7,300 times (4 times/day, 360 days × 5 years)
19-3	Display angle adjustment frequency	3,650 times (2 times/day, 360 days × 5 years)
19-4 Volume adjustment 7,300 times (4 times/day, 360 days × 5 years) frequency		7,300 times (4 times/day, 360 days × 5 years)
19-5	LCD backlight	40,000 hours (10.9 years on the assumption of 10 hours/day)
19-6	Power switch	10,000 times, 6.8 years on the assumption of 4 times/day

1.2 NAME OF EACH PART


1.2.1 FRONT VIEW

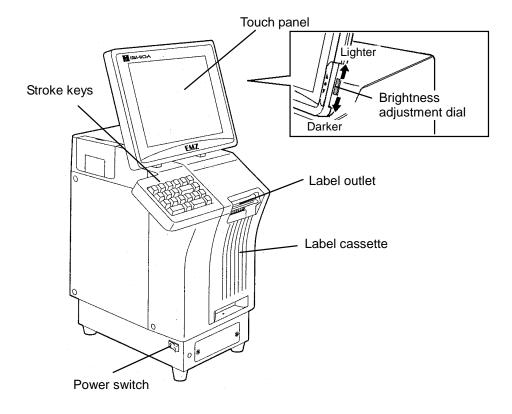


1.2.2 REAR VIEW

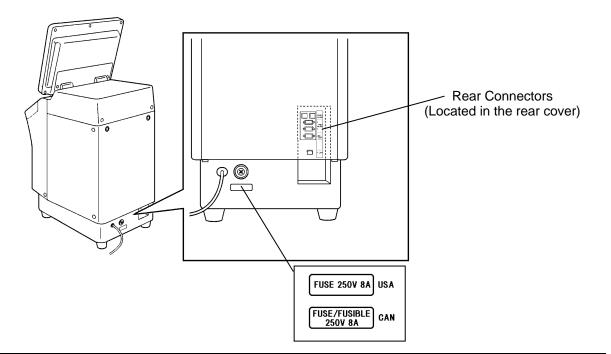

1.3 OUTER DIMENSIONS

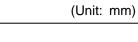

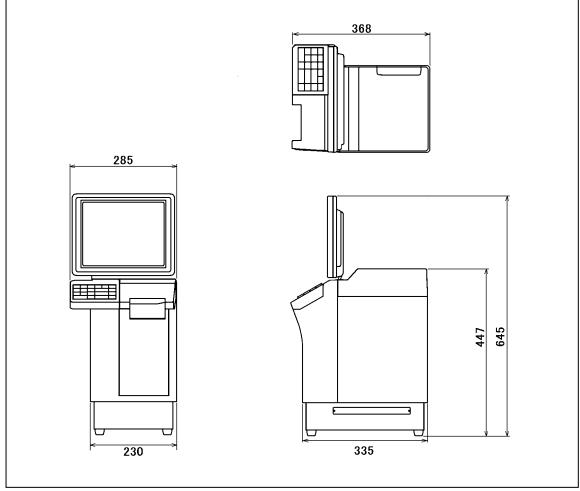

1.4 PREPARATION FOR INSATALLATION

1.4.1 UNPACKING

Confirm that the following things are packed.

- Main body
- Scale unit
- Grounding cable
- Tool: Plus Screw driver
- User's manual
- Cleaning pen

NOTE: Parts are fixed with adhesive tapes so as not to move when transported.

Remove these tapes when unpacking.

1.4.2 THINGS TO BE PREPARED

- IF-21FD
- 3.5-inch 2DD floppy disk in which the user's data is recorded
- I2NET cable (D-sub 9 pin -modular)
- Labels

1.5 PRECAUTIONS FOR INSTALLATION

1.5.1 GENERAL PRECAUTIONS

• DO NOT PUT HANDS IN THE MACHINE

When you need to put your hand inside the machine, always push the Emergency Stop Button first. Never put your hand inside the machine.

- ALWAYS KEEP HANDS AWAY FROM THE MOVING PARTS When the power is turned ON, some parts may still move after a commodity or tray has been called, and your hand may get caught in the machine.
- DO NOT PUT YOUR HAND INSIDE THE POWER SUPPLY UNIT There is danger of electric shock if you touch the inside of the Power Supply Unit. Never touch directly or spill water into the unit. Also, never touch the Main Power Switch with wet hands.
- DO NOT DISASSEMBLE OR MAKE ANY ALTERATIONS TO THE MACHINE The machine can be damaged if disassembled incorrectly. Making any alterations without permission, or removing any parts other than those specified, may cause a serious accident or injury.

HANDLE WITH CARE AS THIS IS A PRECISION MACHINE

Bumps or shocks to the machine can cause damage.

1.5.2 MAINTENANCE PRECAUTIONS

- Keep the area around the machine clear of any dust and debris.
- Do not leave screws or other foreign objects in the machine after performing routine maintenance since this can cause major damage to the machine when the electrical switch is turned on.
- Always remove wires by holding the connector and pulling to disconnect. Do not disconnect by pulling on the wires themselves since this may cause a wire to snap or damage the connection.
- Before disassembling or adjusting this machine, make sure you thoroughly understand and follow each step in the order indicated in this manual.

1.5.3 PROHIBITED LOCATIONS

WARNING Do not install the machine in the following types of places:

- Places subject to high temperatures or high humidity
- Places exposed to direct sunlight
- Places where water or other liquids are easily spilled on the machine
- Places subject to excessive vibration or unstable foundations
- Places exposed to direct cold air from air conditioners or refrigerators
- Places where the floor or foundation is unstable
- Places subject to a lot of dust or dirt
- · Places with large voltage fluctuations

1.5.4 PRECAUTIONS FOR POWER SUPPLY

Do not use an unspecified power supply.

- Use a power supply with rated voltage ground.
- Prepare a dedicated power source.
 A power supply that generates voltage variation may cause a malfunction.
- To avoid any potential electrical shock, securely attach the ground wire to the grounding provision.

1.6 HARDWARE INSTALLATION

 Install the main body to be able to see the display clearly and perform the key operation easily.



- 2. Make sure that the machine is grounded at the power supply outlet.
- **3.** Insert the power plug into the outlet.



- 5. Fix the harnesses.

NOTE:

Nylon clamps to fix harnesses are not attached. Prepare the nylon clamps beforehand with their sizes according to the number of the connected harnesses.

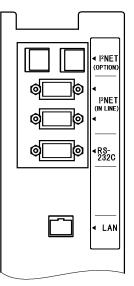


Fig.1 Rear Connectors (Located in the rear cover)

6. Load labels to be used by the user. Refer to "Label Replacement" in the User's Manual.

1.7 FINALIZING INSTALLATION

Operation check

Call up a product, place a load on the weighing platter, and issue a label. After issuing the label, clear the result.


Set content save

Connect the IF-21FD and save the settings.

Operation explanation

Explain the operation method and precautions to the user.

<u>memo</u>

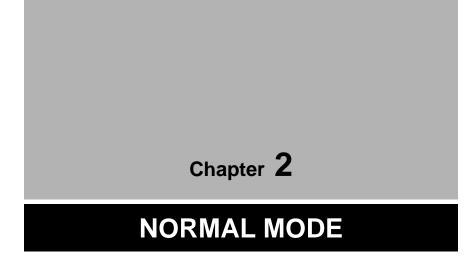

2.1 NORMAL MODE ENTRY


Normal MODE is used to perform daily operations. The initial screen appears on the display when the machine is turned on. To access the initial screen from the Main Menu screen, press the [NORMAL] button on the Main Menu.

N N	lain	m e n u		Pre	ess to return to Main Menu.
NORM	AL	SUBT	RACT		
	SELECT	PLU FR	OM PRES	ET KEY	MENU
PRŒf	PLU No. LABE	0	Q'ty E FIX WEIGHT(kg	FIX PRICE(\$)	FIX PRI
	000000	U PACKED DAT		0.00	ADD
SET	BEEF CROQUETTE	CHICKEN CUTLET	HAM SWCH	DAILY DISHES	PAGE
				LUNCH BOX	FUNC
	HAM & CHEESE	BEEF CUTLET	VEG SWCH	FISH	CONT
	CRAB SWCH	PORK CUTLET	TUNA SWCH	TUNA SALAD	FEED
	CHEESE SWCH	EGG SWCH	VEG SALAD	MIXED SALAD	
	JUL/25/2	2007 (WED) 13:07	PM		PEEL


2.2 TOUCH BUTTONS AND DISPLAY FIELDS

2.2.1 TOUCH BUTTONS

Fixed Price Screen

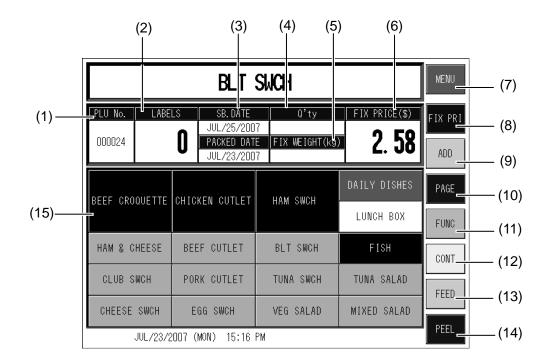


Unit Price Screen

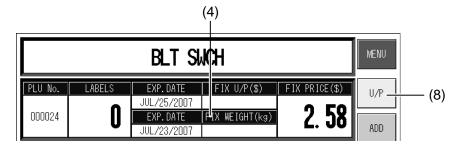


- (1) Used to call up a product list.
- (2) Used to display the number of labels.
- (3) Used to change the date. Date change screen appears when pressed directly.
- (4) Used to change the number of pieces for a fixed price product.
- (5) Used to enter or change the weight of a product.
- (6) Used to change the fixed price of a product.
- (7) Used to display the main menu screen.
- (8) Used to change from a fixed price sale to a unit price sale.[FIXED PRICE] Used to sell a product at the fixed price.[UNIT PRICE] Used to sell a product at the unit price.
- (9) Used to select one of the following modes:
 [ADD] Used to add the production data to totals.
 [NO PRN] Used not to print labels.
 [NO ADD] Used not to add the production data to totals.
- (10) Used to change the page.
- (11) Used to display the function page.
- (12) Used to select continuous label issue or single label issue.
- (13) Used to feed labels to adjust the print position.
- (14) Used to select label issuing method, either labels are peeled off or issued with backing paper.
- (15) Preset keys used when a product is selected.

2.2.2 DISPLAY FIELDS


Fixed Price Screen

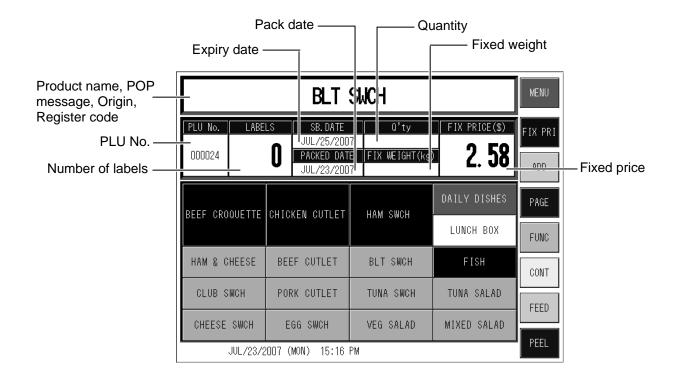

Unit Price Screen

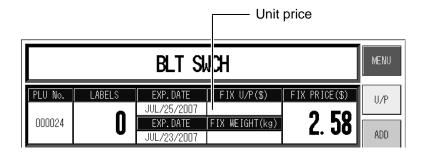

2.3 DAILY OPERATION FOR FIXED PRICE PRODUCTS

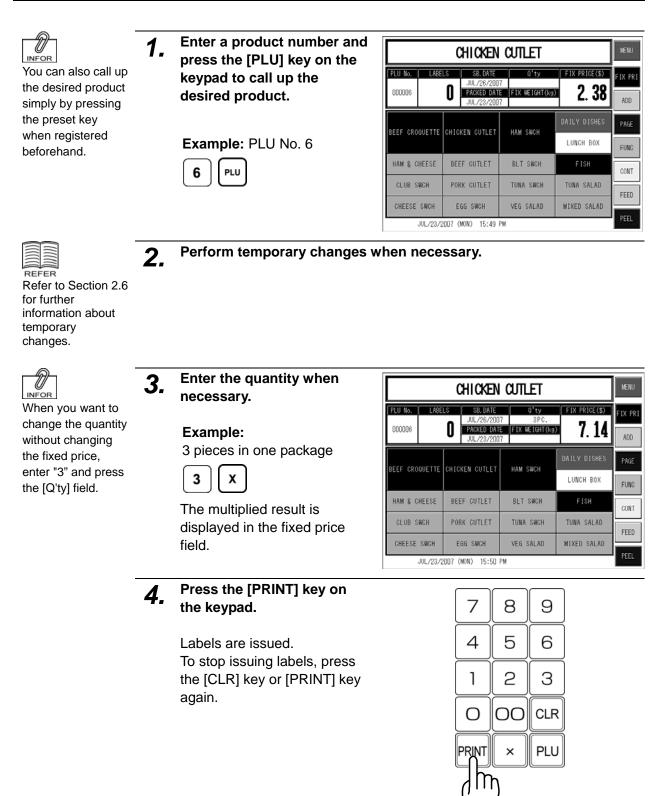

2.4 PRODUCT CALL-UP FROM THE LIST

When you do not clearly remember the PLU number, you can display the product list with products around the input number and press to select the desired product on the screen.

	—— Pr	ess to displays the	product list.			
SE-	ECT	PLU FROM	PRESET	KEY		
PLV No.	LABELS		Q'ty FI		7	
		DISPLAY PROD	DUCT LIST	(28) RETURN		Press to returns to the
	000001	ROAST BEEF	000015	CHICKEN CUTLET		initial screen.
BEEF CR	000002	BEEF CROQUETTE	000016	Ham Such		
	000003	BEEF STEW	000017	DAILY DISHES		
	000004	gouda cheese	000018	LUNCH BOX		
HAM &	000005	GRUYERE CHEESE	000019	FISH		
	000006	CHICKEN CUTLET	000020	tuna salad		
CRAB	000007	Pork Loin	000021	Mixed Salad		
	000008	Pork Back RIBS	000022	Ham & Cheese		
CHEESE	000009	Pork Cutlet	000023	BEEF CUTLET		
0ff line	000010	MIXED SALAD	000024	BLT SWCH		
	000011	Indian Salad	000101	CLUB SWCH		
	000012	Salmon Salad	000102	TUNA SWCH		
	000013	Cooked Salad	000103	CHEESE SWCH		
	000014	Bean Salad	000104	EGG SWCH		
		SKIP	14]	
Press to c ▲ Previou ▼ Followi	ls page	e Pr		Press to change to be displayed o the product list page ered PLU number.		mber of products list.



When you enter a PLU number you think it might be somewhere around this number and press the [PLU No.] field on the screen, the product list will appear with products centering on the input number.



When you can not find the desired product on the current page, change the page using the $[\blacktriangle]$ and $[\Psi]$ buttons.



You can call up the desired product by entering the PLU number and pressing the [PLU] key on the keypad. **1.** Press the [PLU No.] field on the screen.

The product list screen appears.

SELECT	PLU FR	OM PRES	ЕТ КЕҮ	MENU
	SB. DATE	O'ty E FIX WEIGHT(kg)	FIX PRICE(S)	FIX PR
BEEF	CHICKEN CUTLET	HAM SWCH	DAILY DISHES	PAGE
HAM & CHEESE	BEEF CUTLET	VEG SWCH	FISH	CONT
CRAB SWCH	PORK CUTLET	TUNA SWCH	TUNA SALAD	FEED
CHEESE SWCH	EGG SWCH 007 (WED) 13:07	VEG SALAD	MIXED SALAD	PEEL

2. Press to select the desired product on the list.

Example: PLU No.9

The product screen appears.

	DISPLAY PRODUCT	LIST	(28) RETURI
000001	ROAST BEEF	000015	CHICKEN CUTLET
000002	BEEF CROQUETTE	000016	Ham Such
000003	BEEF STEN	000017	DAILY DISHES
000004	gouda cheese	000018	LUNCH BOX
000005	GRUYERE CHEESE	000019	FISH
000006	CHICKEN CUTLET	000020	tuna salad
000007	PORK LOIN	000021	MIXED SALAD
000008	Pork Back RIBS	000022	Ham & Cheese
000009	PORK CUTLET	000023	BEEF CUTLET
000010	MIXED SALAD	000024	BLT SUCH
000011	INDIAN SALAD	000101	CLUB SUCH
000012	Salmon Salad	000102	TUNA SUCH
000013	COOKED SALAD	000103	CHEESE SUCH
000014	Bean Salad	000104	EGG SUCH
	▼ SKIP	14	28 INPUT



	PORK CUTLET								
PLU No. 000009	LABE	Û	SB. DATE JUL/26/200 PACKED DAT JUL/23/200	E FIX WEIGHT(kg	FIX PRICE(\$)	FIX PRI			
BEEF CRO	OVETTE	сніс	KEN CUTLET	HAM SWCH	DAILY DISHES	PAGE			
HAM & C	HEESE	BEE	F GUTLET	BLT SWCH	LUNCH BOX	FUNC			
CLUB S			RK CUTLET	TUNA SWCH	TUNA SALAD	FEED			
	JUL/23/2	_			mineo oneno	PEEL			

TEMPORARY CHANGES 2.5

You can perform temporary changes during operation when necessary. These changes will not be reflected on the registered product.

AMOUNT DISCOUNT 2.5.1

1.	Confirm that the desired product screen is displayed and press the [FUNCTION]	PLU
	button.	UUUU

The function list appears on the screen.

Enter the discount amount

	PORK CUTLET							
PLU No. 000009	LABE		SB. DATE JUL/26/200 PACKED DAT JUL/23/200	7 E FIX W	O'ty EIGHT(kg)	FIX PRICE(\$)	FIX PRI ADD	
BEEF CRO	OVETTE	сніскі	EN CUTLET	HAM S	NCH .	DAILY DISHES LUNCH BOX	PAGE	
HAM & C	HEESE	BEEF	CUTLET	BLT :	SWCH	FISH		
CLUB S	WCH	PORK	CUTLET	TUNA	SWCH	TUNA SALAD	hiid	
CHEESE	SWCH	EG	G SWCH	VEG S	ALAD	MIXED SALAD	\mathbf{h}	
	JUL/23/2	2007 (M	ON) 15:53	PM				

Ű INFOR Amount discount (-\$) button must be registered on the function page beforehand.

2.	Enter the discount amoun and press the [-\$] button.
	Example:
	Discount amount \$0.50



		Pork (VILET		MENU
PLU No.	LABELS	SB. DATE JUL/26/200 PACKED DAT JUL/23/200	E FIX WEIGHT(kg)	FIX PRICE(S)	FIX PRI ADD
- \$		-%	MARKDWN	DATE	
RE(DO	0	P O P 000	origin 000	TOTAL	CATEGRY
	Ŋ	Keep OO	Comment 00	VOID	CONT
	$\langle -$				FEED
JUL	/23/2007	(MON) 16:02	PM		PEEL

INFOR

Percent discount (-%) button must be


registered on the function page

beforehand.

2.5.2 PERCENT DISCOUNT

1. Confirm that the desired product screen is displayed and press the [FUNCTION] button.

The function list appears on the screen.

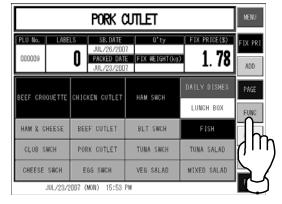

2. Enter the discount rate and press the [-%] button.



1 0 -%

PORK CUTLET								
PLU No.	LABELS	SB. DATE JUL/26/200 PACKED DAT JUL/23/200	E FIX WEIGHT(kg)	FIX PRICE(\$)	FIX PRI			
- \$		-%	MARKDWN	DATE				
REG C	000	P P	origin 000	TOTAL	CATEGRY			
Temp 00		(''')	Comment 00	VOID	CONT			
		Σ			FEED			
		$\mathbf{\nabla}$			PEEL			
JUL/23/2007 (MON) 16:01 PM								

2.5.3 MARKDOWN PRICE

1. Confirm that the desired product screen is displayed and press the [FUNCTION] button.

The function list appears on the screen.


PORK CUTLET							MENU		
PLU No. 000009	LABE	LS O	SB. DATE JUL/26/200 PACKED DAT JUL/23/200	7 E FIX WEI	ty GHT(kg)	FIX PRI	^{æ(\$)} 78	FIX PRI	
BEEF CRO	OVETTE	CHIC	KEN CUTLET	HAM SW	сн	DAILY DI			
HAM & C	HEESE	BEE	F CUTLET	BLT SW	існ	FISH		٦ħ	r
CLUB SWCH		POR	K CUTLET	TUNA S	WCH	TUNA SA	LAD	l''	'
CHEESE SWCH		E	GG SWCH	VEG SA	LAD	MIXED S	ALAD		í
	JUL/23/2	007 (MON) 15:53	PM					ĺ


- Markdown button must be registered on the function page beforehand.
- 2. Enter the markdown price and press the [MARKDOWN] button.

Example:

Markdown price \$1.20

1 2 0 MARKDOWN

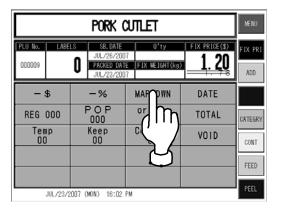

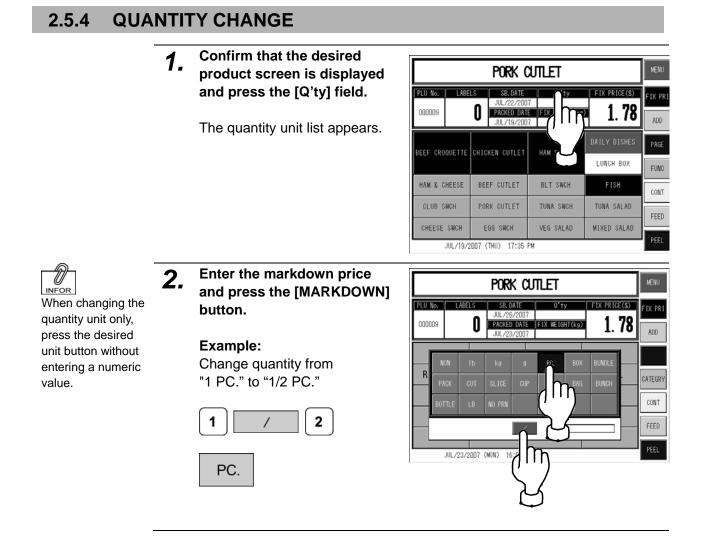

INFOR

Û

INFOR

Enter 8 digits when

changing month,

day, and year,

4 digits when

changing month


and day, or 2 digits

when changing day.

2.5.5 **SB./PACKED DATE CHANGE**

Press the [SB. DATE] or 1. [PACKED DATE] field.

> The date change screen appears.

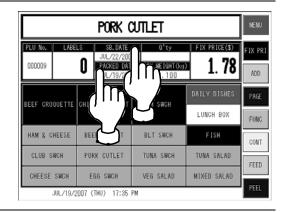


Change the date and press 2. the [SB DATE] field.

Example:

Change the expiry (sell-by) date from July 22, 2007 to July 21, 2007.



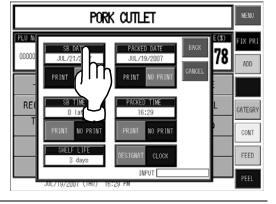

2.5.6 **REGISTER CODE CHANGE**

Confirm that the desired 1. 1 PORK CUTLET product screen is displayed Register code SB. DATE PLU No. FIX PRICE(\$) and press the [FUNCTION] JUL/21/2007 PACKED DATE FIX WEIGHT(k button must be 000009 0 1. 78 button. registered on the function page BEEF CROQUETTE CHICKEN CUTLET HAM SWCH The function list appears. beforehand. LUNCH BOX HAM & CHEESE BEEF CUTLET BLT SWCH CLUB SWCH PORK CUTLET TUNA SWCH TUNA SALAD VEG SALAD MIXED SALAD CHEESE SWCH EGG SWCH JUL/19/2007 (THU) 16:59 PM Change the data and press 2. 3 PORK CUTLET the [REG] field. PLU No. FIX PRICE(\$) SB. DAT JUL/21 PACKED DATE FIX WEIGHT(kg) 1. 78 000009 0 Example: JUL/19/2007 Change the register code from DAILY DISHES HAM SWCH "1" to "3". LUNCH BOX 3 HAM & CHEESE BEEF CUTLET BLT SWCH CLUB SWCH PORK CUTLET TUNA SWCH TUNA SALAD CHEESE SWCH EGG SWCH VEG SALAD MIXED SALAD

JUL/19/2007 (THU) 16:59 PM


ADD

ADD

CATEGR

CONT

FEED

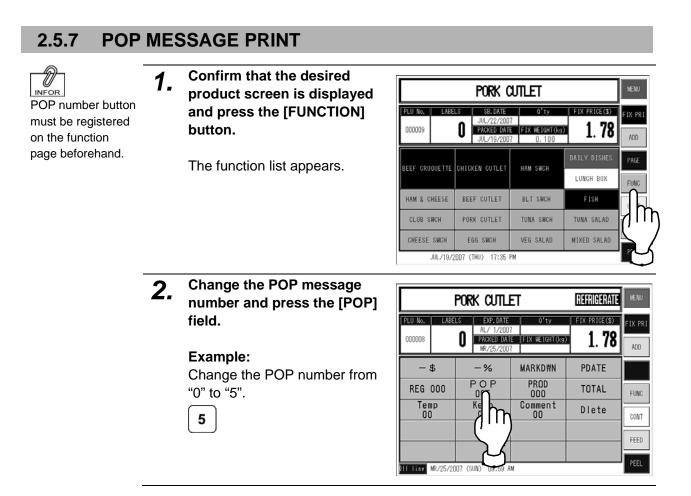

2.5.8 FIXED WEIGHT PRINT

- 1. Check that the desired
- product screen is displayed.

PORK CUTLET							
PLU No. LABE	LS EXP. DATE AL/ 1/200 PACKED DAT MR/25/200	E FIX WEIGHT(kg)	1. 78	FIX PRI			
BEEF CROQUETTE	CHICHEN CUTLET	HAM SWCH	Daily dishes Lunch Box	PAGE			
HAM & CHEESE	BEEF CUTLET	VEG SWCH	FISH	CONT			
CRAB SWCH CHEESE SWCH	PORK CUTLET EGG SWCH	TUNA SWCH VEG SALAD	TUNA SALAD MIX SALAD	FEED			
Off line MR/25/20	107 (SUN) 10:10 A	M		PEEL			


2. Enter the weight and press the [FIX WEIGHT] field.

Example:

Print the fixed weight "100g" on labels.



PORK CUTLET									
PLU No. 000009	LABEL		SB. DATE UL/21/200 ACKED DAT UL/19/200)7 TE FIX W	D'ty		ix price(s) 1. 78	FIX PRI ADD	
- \$;		%	MARK		i r	DATE		
REG O	00		D P 17	oris 00		χ	TOTAL	CATEGRY	
Temi 00	p		ep O	Comm		7	VOID	CONT	
								FEED	
	UL/19/20	IN7 (THU) 16:36	PM				PEEL	

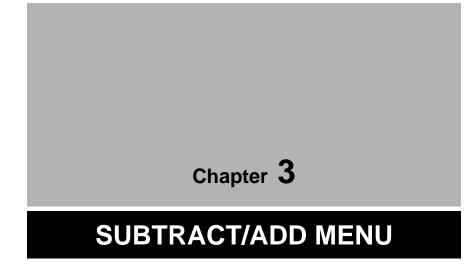

SUBTRACT/ADD MENU ENTRY 3.1

Subtract/Add Menu is used to subtract or add product data from or to production totals. Press the [MENU] button on the initial screen and press the [SUBTRACT] button on the Main Menu to enter Subtract/Add Menu.


MENU SELECT ΡLU FROM PRESET KEY Press to return to Main Menu. PLU No. FIX PRICE(\$) LABELS EXP. DATE Q'ty Π 0.00 000000 PACKED DATE FIX WEIGHT(kg) a i n М m е n u BEEF CROQUETTE CHIC NORMAL **SUBTRACT** HAM & CHEESE BEE POF CRAB SWCH m IT ADD/SUB TOTAL ADJU CHEESE SWCH Ε PROGF 0ff line FE/16/2007 (F NUMBER ADD ACC1 NUM ADD SET ACC2 NUM ADD ACC3 NUM ADD

See section 6-4 "Password Setting".


Note: When a password is programmed for accessing Subtract/Add Menu, enter the 6-digit password number using the keypad before pressing the [SUBTRACT] button.


3.2 SUBTRACTION

This function is to subtract quantity, weight, and price of a returned product from totals memorized in the machine.

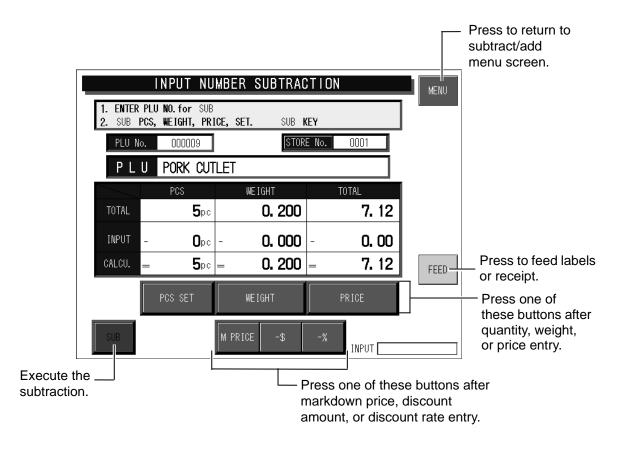

Example: Subtract one piece of "Pork Cutlet" at the price of \$1.00. (NUMBER SUB is used in this example.)

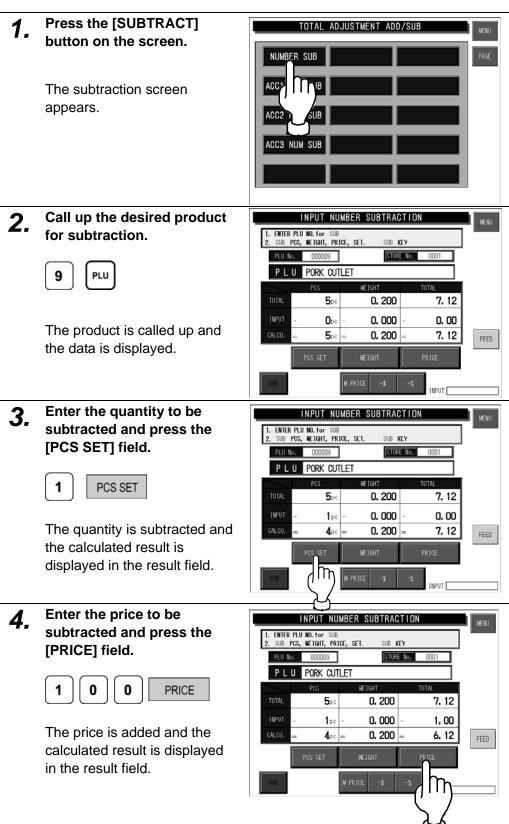


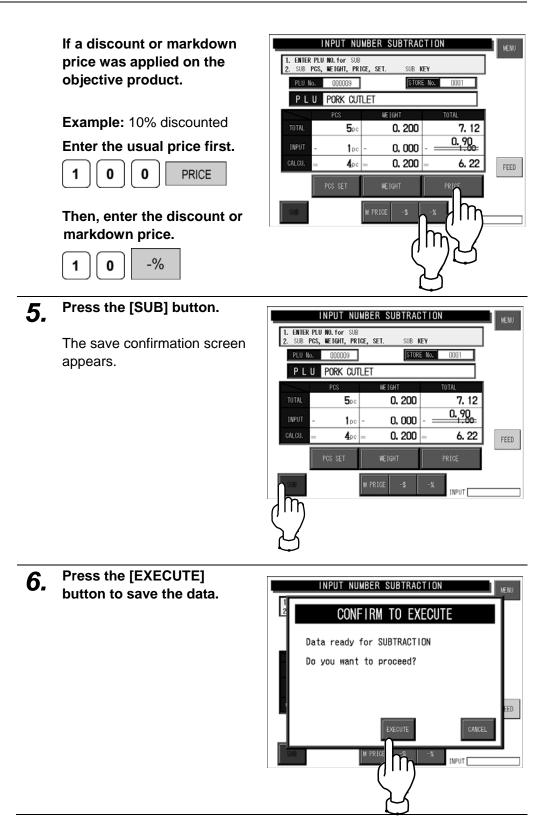

3.3 ADDITION

This function is to add quantity, weight, and price of a product to totals memorized in the machine.

Example: Add five pieces of "Pork Cutlet" at the total price of \$5.00. (NUMBER ADD is used in this example.)

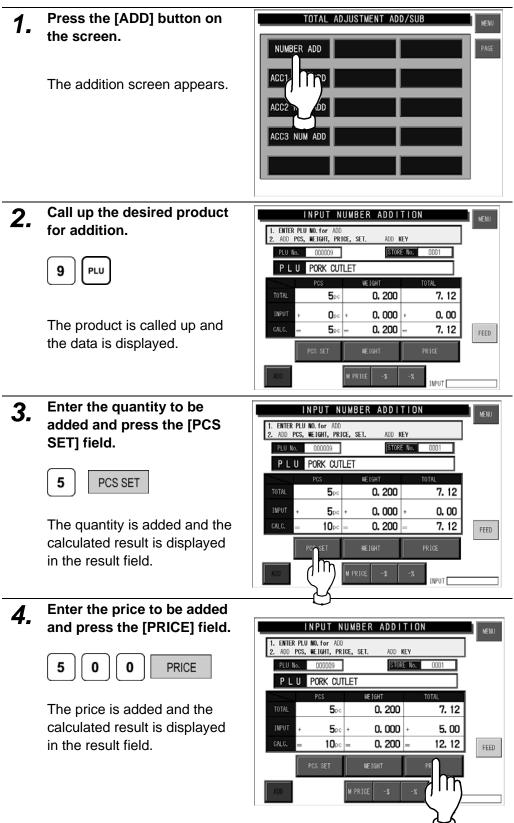


If a discount or markdown price was applied on the objective product.


Example:

Markdown price \$4.00

Enter the usual price first.

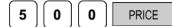


Then, enter the discount or markdown price.

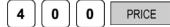






Press the [ADD] button.

The save confirmation screen appears.

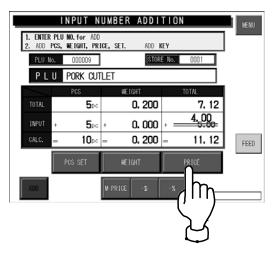

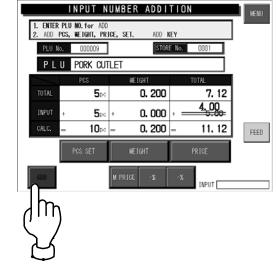

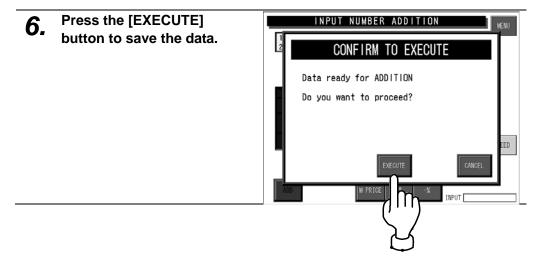


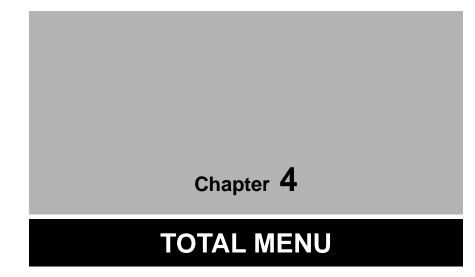

4.1 TOTAL MENU ENTRY


Various transaction totals can be obtained in Total Menu. Press the [MENU] button on the initial screen and press the [TOTAL] button on the Main Menu to enter Total Menu.

Note: When a password is programmed for accessing Total Menu, enter the 6-digit password number using the keypad before pressing the [TOTAL] button. See section 6-4 "Password Setting".

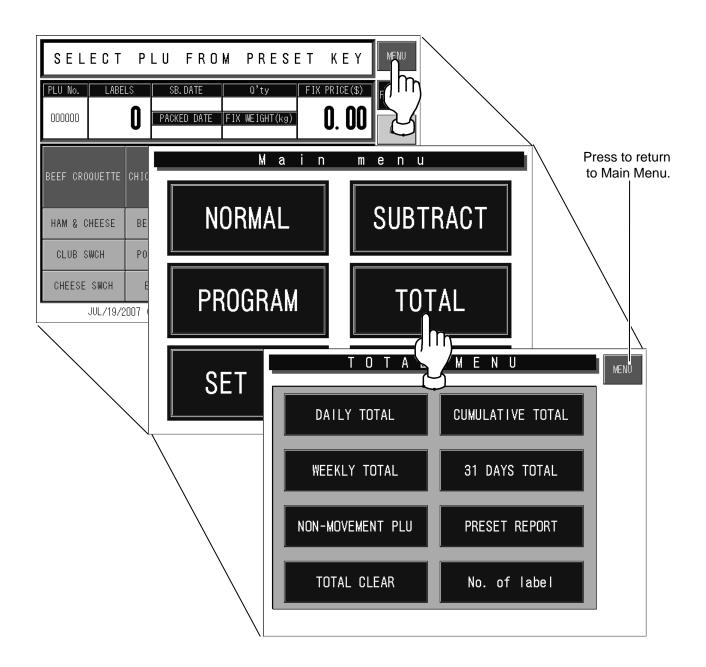


4.2 DAILY / CUMULATIVE TOTALS

Totals of various transactions performed on that day or for a certain period of time can be obtained. Press the [DAILY TOTAL] or [CUMULATIVE TOTAL] button on the Total Menu screen to display either Daily Total Menu or Cumulative Total Menu.

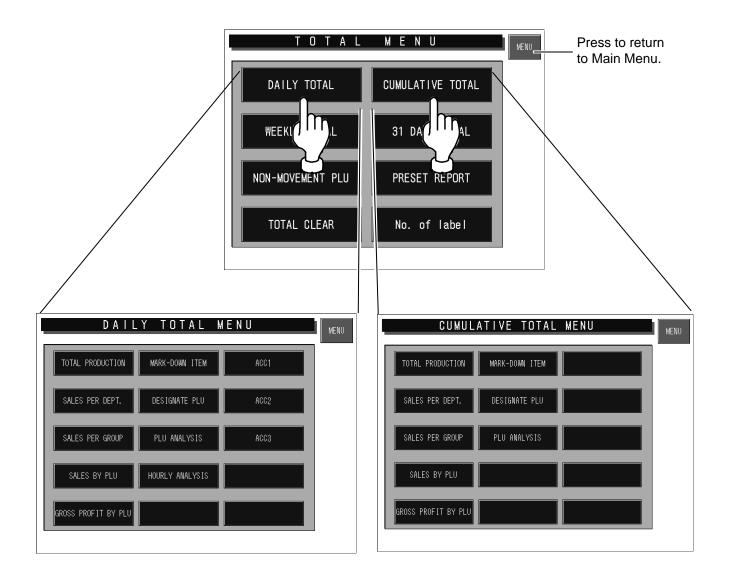


4.2.1 TOTAL PRODUCTION


To print the total data, press the [PRINT] key on the keypad.

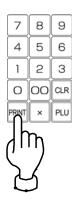

Press the [TOTAL PRODUCTION] button.

"Total Production" screen appears (Daily Total Menu is used in this example).

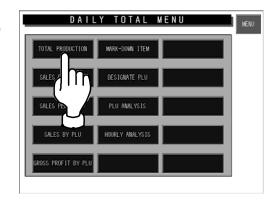


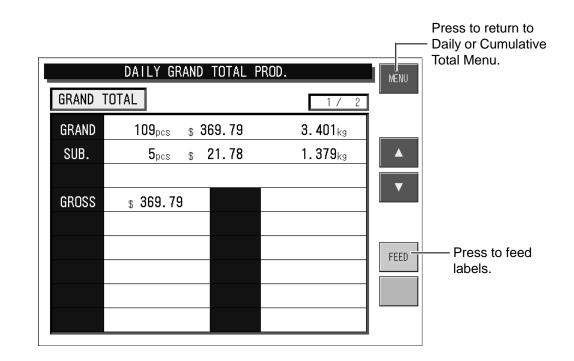

4.2.2 SALES PER DEPARTMENT




To print the total data, press the [PRINT] key on the keypad.

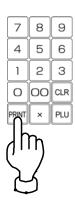

Press the [TOTAL SALES PER DEPT] button.

"Total Sales per Department" screen appears (Daily Total Menu is used in this example).

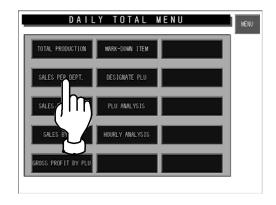

D	AILY TOTAL SAL	- Press to return to Daily or Cumulative Total Menu.				
GRAND TTL AVERAGE	748 pcs 95 1.277 kg/pcs	5.120 kg 3	g \$ 2 .20 \$/pcs	2397.29		Press to change the previous pag
CATEGORY	DEPARTMENT NAME	PCS	WEIGHT(kg)	PRICE(\$)		Press to scroll
1	DEPT. 1	120	153.774	385.97		up the line.
2	DEPT. 2	119	151.863	381.17	│ ▼ └	Press to scroll
3	DEPT. 3	144	184.337	462.68		down the line.
4	DEPT. 4	80	102.200	256.51	. ₹ .	Press to change
5	DEPT. 5	152	194.846	489.32		the next page
6	DEPT. 6	132	168.100	421.91	FEED	
						Press to feed
						labels

4.2.3 TOTAL SALES PER GROUP




Press the [SALES PER GROUP] button.

"Total Sales per Group" screen appears (Daily Total Menu is used in this example).

To print the total data, press the [PRINT] key on the keypad.



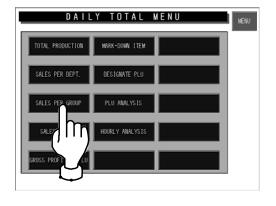


DA	ILY TOTAL SALE	Daily or Cumulative Total Menu.				
GRAND TTL AVERAGE	748 pcs 95 1.277 kg/pcs	5.120 kg 3	g \$ 2 .20 \$/pcs	2397.29		Press to change the previous pag
CATEGORY	GROUP NAME	PCS	WEIGHT(kg)	PRICE(\$)		Press to scroll
1	GROUP 1	63	79.430	199.42		up the line.
2	GROUP 2	68	78.455	194.33	I ▼ ⊥	Press to scroll
3	GROUP 3	75	95.233	239.05		down the line.
4	GROUP 4	41	52.804	131.52	│ ▼ ⊥	Press to change
5	GROUP 5	49	100.667	252.16		the next page
6	GROUP 6	65	86.850	217.98	FEED	
7	GROUP 7	42	95.111	231.05		Press to feed
8	GROUP 8	39	50.998	230.90		labels
9	GROUP 9	80	99.101	131.16		
10	GROUP 10	61	88.208	215.98		

4.2.4 TOTAL SALES BY PLU




To print the total data, press the [PRINT] key on the keypad.

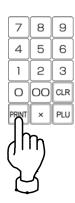

Press the [SALES BY PLU] button.

"Total Sales by PLU" screen appears (Daily Total Menu is used in this example).

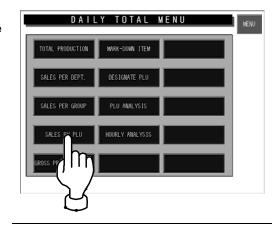

	DAILY TOTA	MENU	Press to return to Daily or Cumulative Total Menu.			
GRAND TTL	748 pcs	955.120 k	g \$	2397.29		Press to change the previous page
PLU No.	PRODUCT NAME	PCS	WEIGHT(kg)	PRICE(\$)		Press to scroll
1	PLU 1	13	9.430	99.42		up the line.
2	PLU 2	21	8.455	94.33	I ▼ _	Press to scroll
3	PLU 3	12	5.233	39.05		down the line.
4	PLU 4	26	2.804	31.52	. ▼ .	Press to change
5	PLU 5	40	10.667	52.16		the next page
6	PLU 6	32	6.850	17.98	FEED	
7	PLU 7	18	5.111	31.05		Press to feed
8	PLU 8	25	10.998	30.90		labels
9	PLU 9	33	9.101	31.16		
10	PLU 10	19	8.208	15.98		

4.2.5 TOTAL GROSS PROFIT BY PLU




Press the [GROSS PROFIT BY PLU] button.

"Total Gross Profit by PLU" screen appears (Daily Total Menu is used in this example).

To print the total data, press the [PRINT] key on the keypad.



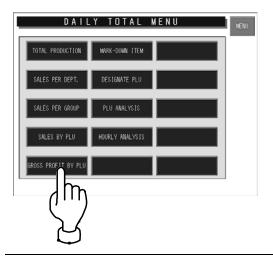


C	AILY TOTAL G	ROSSI	BY PLU		MENU	- Press to return to Daily or Cumulative Total Menu.
GRAND TTL	\$ 344372.65 TOTAL GRO	SS \$47523.	43 GROSS	RATE 13.8%		Press to change the previous page
PLU No.	PRODUCT NAME	GROSS%	GROSS(\$)	PRICE(\$)		Press to scroll
1	PLU 1	19.8	1974.29	9971.15		up the line.
2	PLU 2	12.6	1575.17	12501.31		Press to scroll
3	PLU 3	14.0	24.24	173.13		down the line.
4	PLU 4	10.3	51.78	502.72	▼ +	Press to change
5	PLU 5	12.4	1536.46	12390.84		the next page
6	PLU 6	18.8	862.03	4585.26	FEED	_
7	PLU 7	10.7	1324.24	12376.07		Press to feed
8	PLU 8	16.6	394.70	2377.73		labels
9	PLU 9	19.1	301.15	1577.73		
10	PLU 10	17.9	2222.92	12418.56		

4.2.6 TOTAL MARKDOWN ITEM




To print the total data, press the [PRINT] key on the keypad.

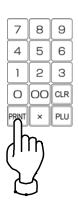

Press the [MARKDOWN ITEM] button.

"Total Markdown Item" screen appears (Daily Total Menu is used in this example).

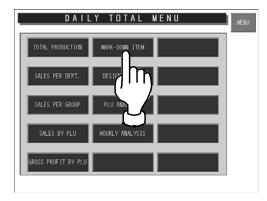



DA	VILY TOTAL M	Press to return to Daily or Cumulative Total Menu.				
GRAND TTL	255 pcs	46.611 kg	g \$	514.11		Press to change the previous page
PLU No.	PRODUCT NAME	PCS	WEIGHT(kg)	PRICE(\$)		Press to scroll up the line.
15	PLU 15	62	4.320	152.30		·
21	PLU 21	90	19.151	175.45	▼	Press to scroll
28	PLU 28	103	23.140	186.36		down the line.
					¥	Press to change the next page
					FEED	Press to feed labels

4.2.7 TOTAL DESIGNATED PLU

1. Press the [DESIGNATE PLU] button.

 "Total Designated PLU" screen appears (Daily Total Menu is used in this example).

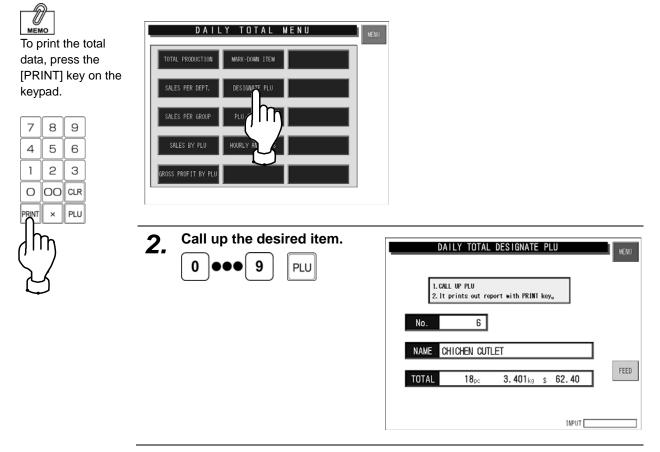


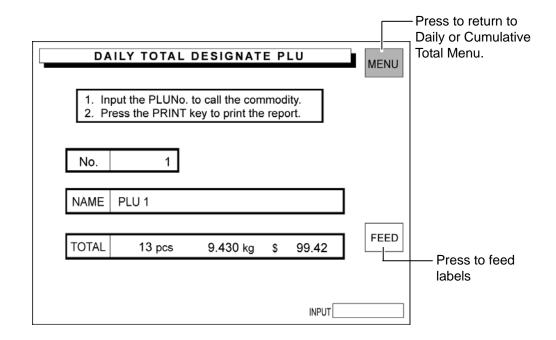

4.2.8 TOTAL PLU ANALYSIS

1. Press the [PLU ANALYSIS] button.

 "Daily Total PLU Analysis" screen appears (Daily Total Menu is used in this example).

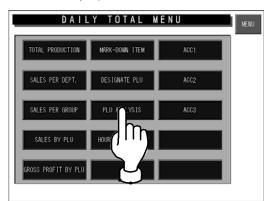


By group

Press the desired button to

select the analysis type.

GROUP

4_

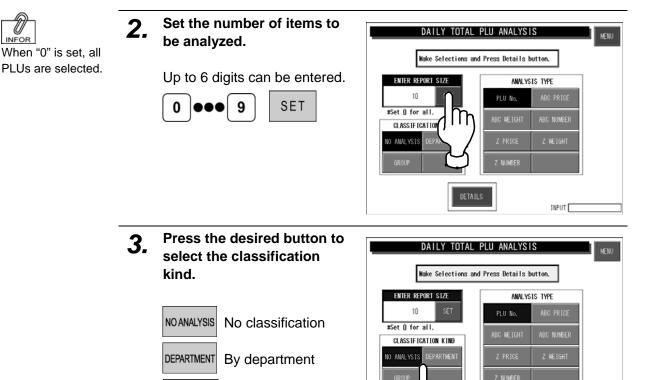


ENTER REPORT SIZE

10 SET #Set 0 for all. CLASSIFICATION KIND NO ANALYSIS DEPARTMEN

DAILY TOTAL PLU ANALYSIS

Wake Selections and Press Details button.

Z NUMBE

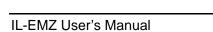


INPUT

ANALYSIS TYPE

In

INPUT

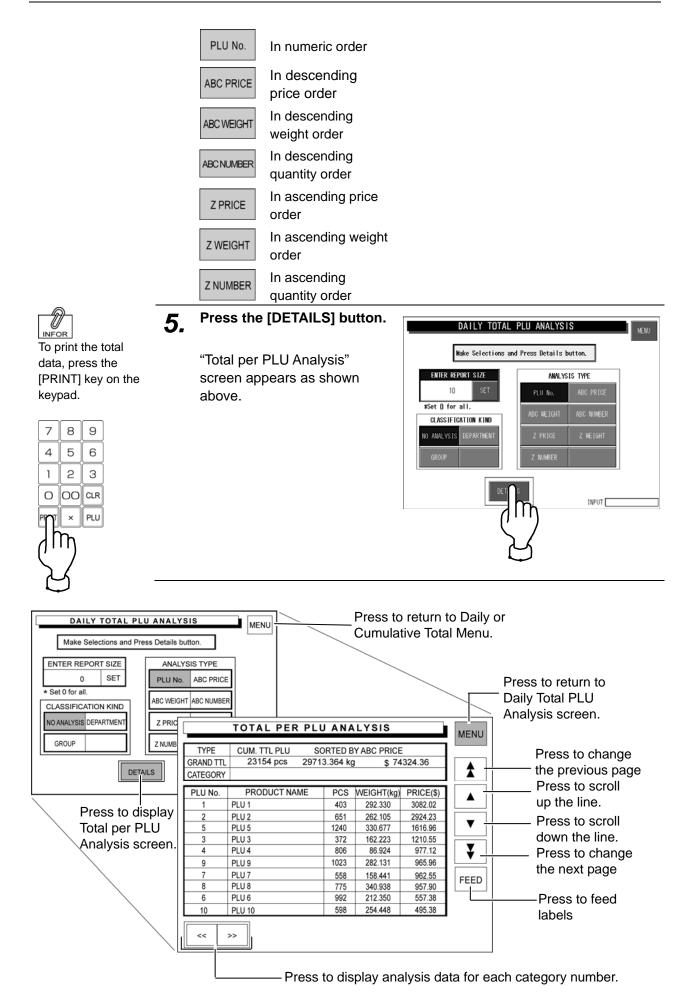


4.2.9 DAILY TOTAL HOURLY ANALYSIS




Press the [HOURLY ANALYSIS] button.

To print the total data, press the [PRINT] key on the keypad.

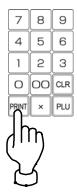




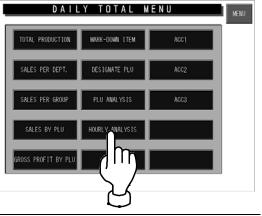

DAIL	Y TOTAL	. HOUR	LY AN/	ALYSIS		MENU	Press to return to Daily Menu.
GRAND TTL	748 pcs	955.	120 kg	\$ 2397	7.29		
HOURLY	PCS	%		50	100%		Press to change the previous page
9H - 10H	28	3.8					Press to scroll
10H - 11H	39	5.2					up the line.
11H - 12H	55	7.3					Press to scroll
12H - 13H	50	6.7	1				down the line.
13H - 14H	64	8.6					down the line.
14H - 15H	78	10.4	•				Press to change
15H - 16H	123	16.5					the next page
16H - 17H	131	17.5				FEED	
17H - 18H	92	12.3					Press to feed
18H - 19H	88	11.7					labels
PCS PRIC	Æ						


Press to select either "pieces" or "prices".

4.2.10 ACC

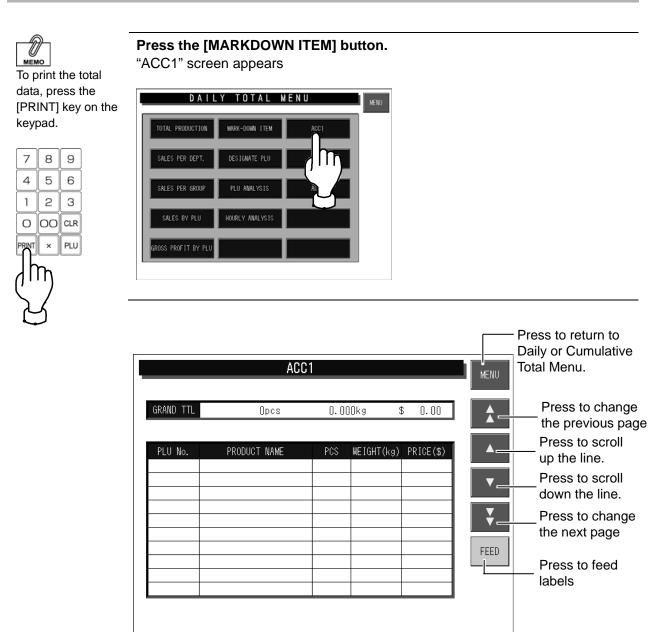

4.3 WEEKLY TOTAL

Totals of various transactions performed for a week can be obtained. Press the [Weekly] button on the Total Menu screen to display Weekly Total Menu.

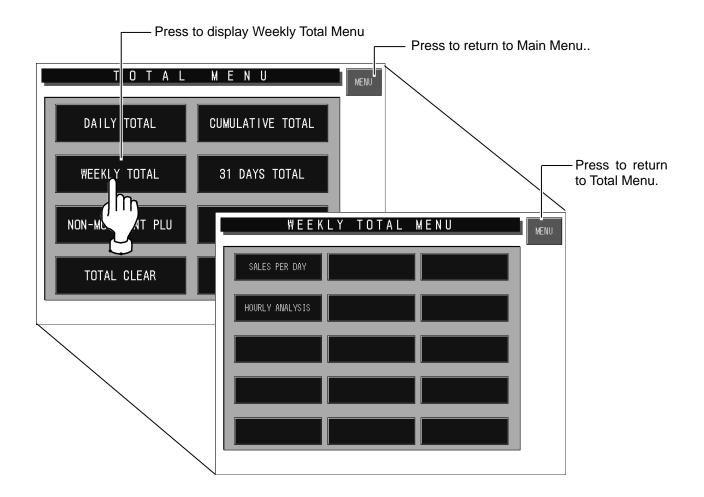

4.3.1 SALES PER DAYS OF THE WEEK




Press the [SALES PER DAY] button.

To print the total data, press the [PRINT] key on the keypad.

7 8 9 4 5 6 1 2 3 0 00 CLR PRNT × PLU


"Sales per Days of the Week" screen appears as shown above.

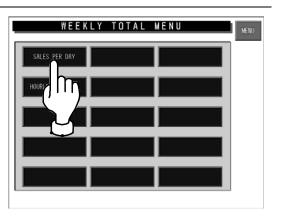


SA	5482 pcs 674	OF T		K 9831.45	MENU	Press to return to Weekly Total Menu.
No.	DAY	PCS	WEIGHT(kg)	PRICE(\$)		
1	SUNDAY	748	955.120	2397.29		
2	MONDAY	652	832.010	2036.64		
3	TUESDAY	684	816.205	2014.74		
4	WEDNESDAY	712	875.365	2635.80		
5	THURSDAY	813	975.654	3126.45		
6	FRIDAY	932	1045.789	3655.33		Press to feed
7	SATURDAY	941	1246.854	3965.20	FEED	the receipt.

4.3.2 HOURLY ANALYSIS OF THE WEEK

A day is delimited every hour, and the daily sales data either in price or quantity is displayed for each hourly zone in graphs.

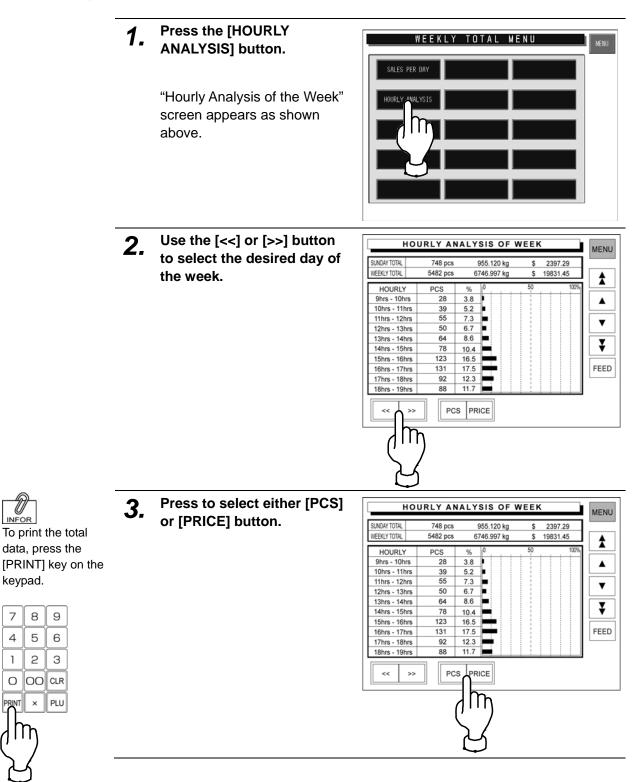


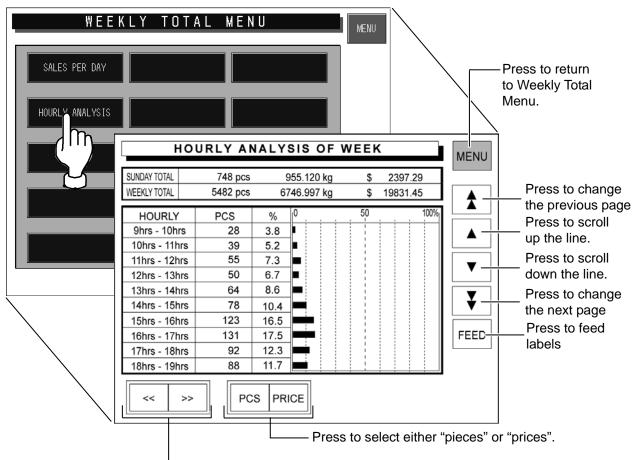


Press to change the day of the week.

4.4 31 DAYS TOTAL


Totals of transactions performed for a month period can be obtained. Press the [31 DAYS TOTAL] button on the Total Menu screen.

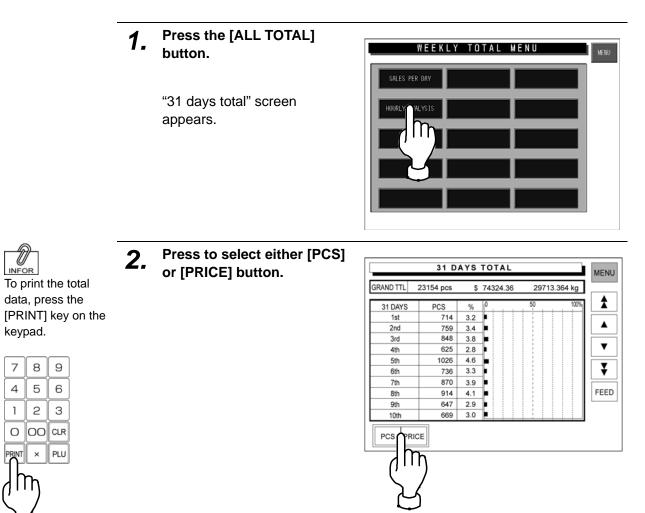


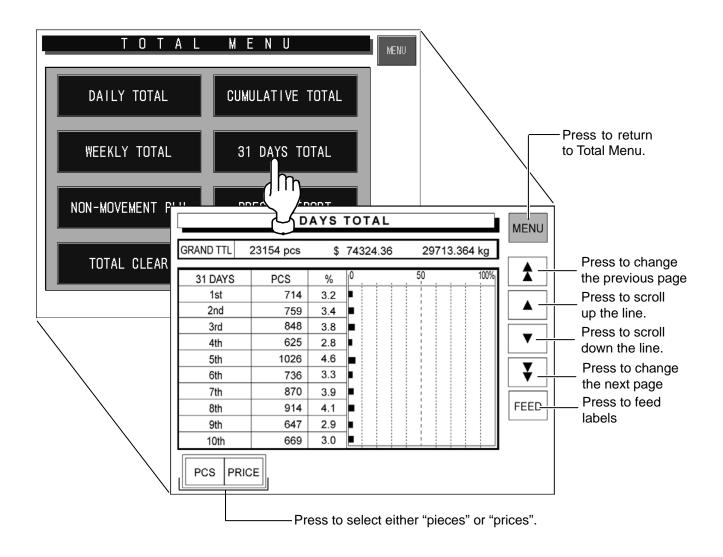

4.5 NON-MOVEMENT PLU

The list of PLU data that has not been moved for the specified period can be obtained. Press the [Non sales] button on the Total Menu screen to display Non-Movement PLU screen.

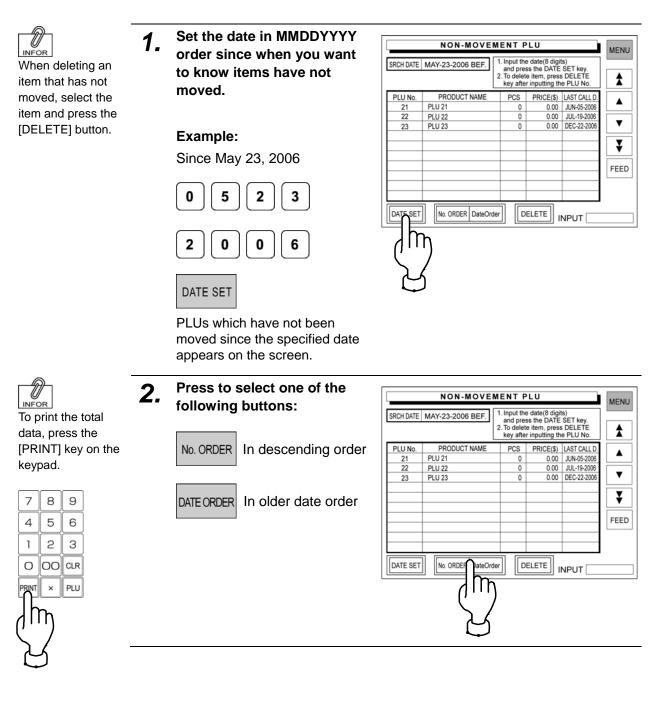

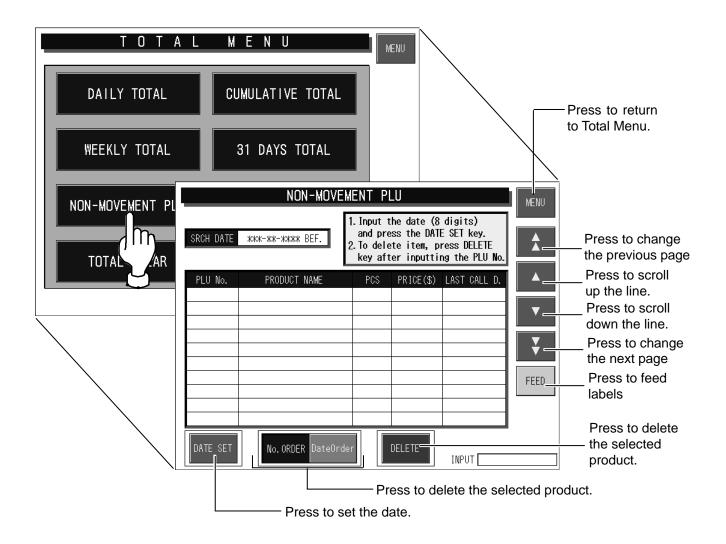


4.6 PRESET REPORT

This function is to combine desired totals and issue combined total reports.

Preset report is available for Daily and Cumulative totals.

Press the [Report print] button on the Total Menu screen to display Preset Report screen.

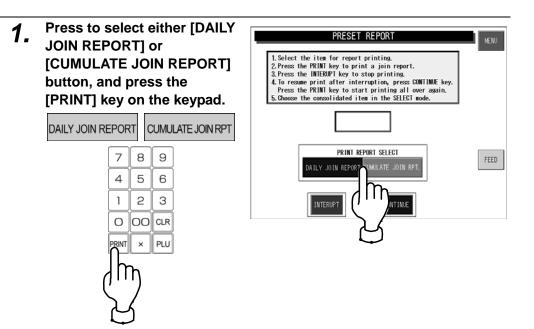

• To interrupt report printing, press the [INTERRUPT] button.




• To resume report printing, press the [CONTINUE] button.



• To start report printing from the beginning, press the [PRINT] key.




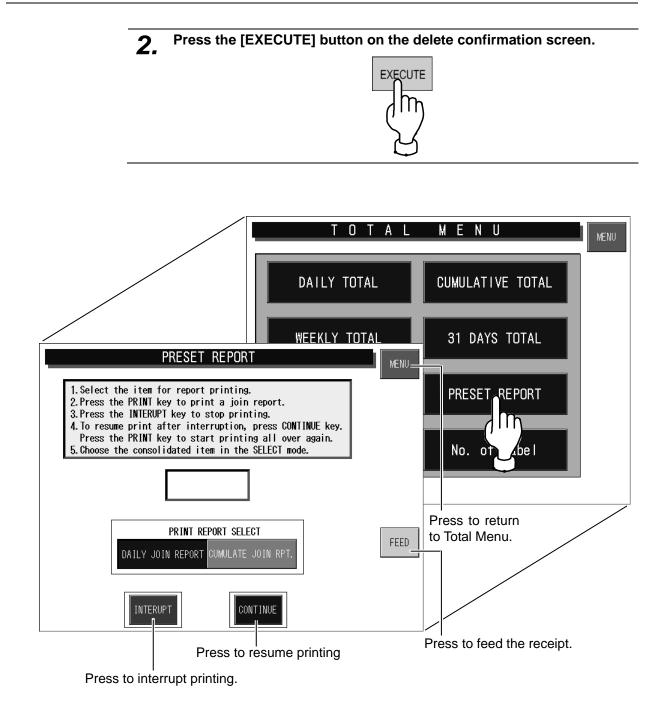


4.7 TOTAL CLEAR


This function is to clear the specified total data.

Press the [Total clear] button on the Total Menu screen to display Total Clear screen.

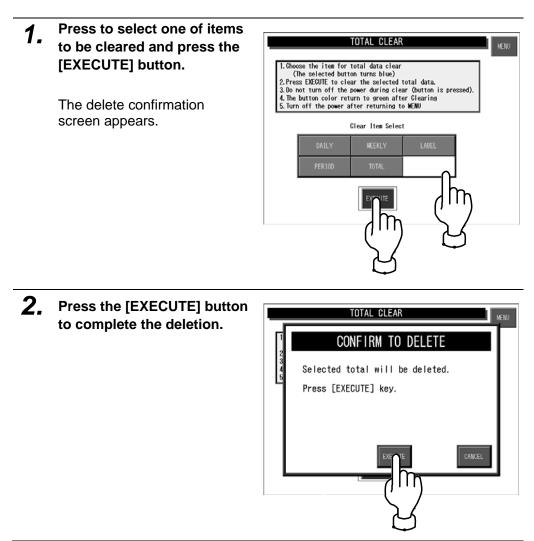

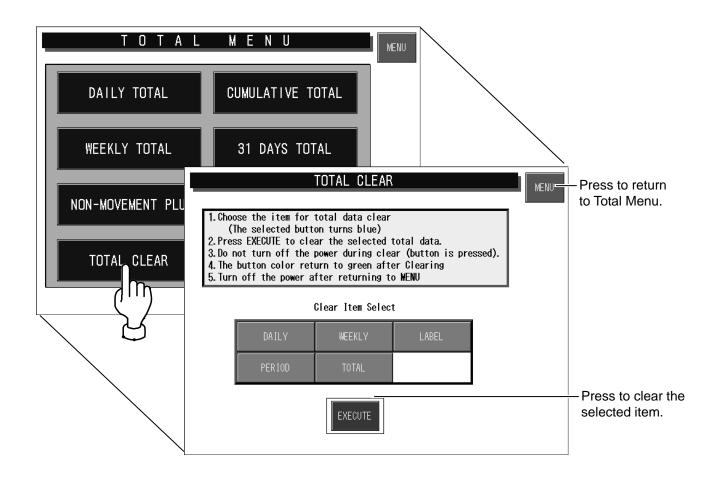


4.8 NUMBER OF LABELS

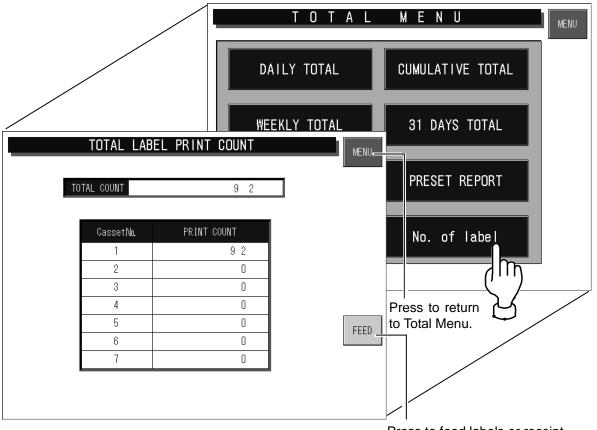


Press to feed labels or receipt.

This function checks and prints the number of issued labels.

Press the [No. of label] button on the Total Menu screen to display Total Label Print Count screen.

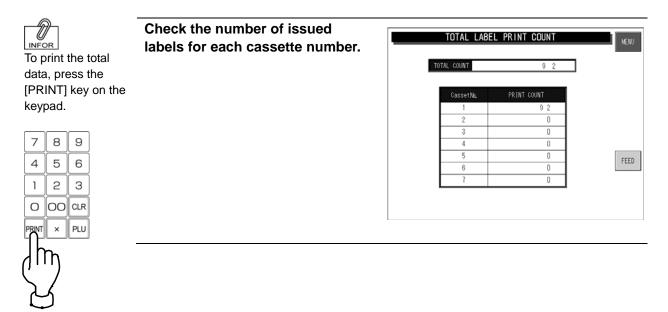


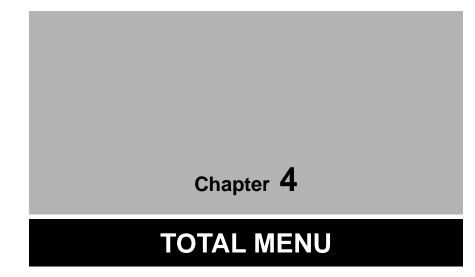

4.1 TOTAL MENU ENTRY


Various transaction totals can be obtained in Total Menu. Press the [MENU] button on the initial screen and press the [TOTAL] button on the Main Menu to enter Total Menu.

Note: When a password is programmed for accessing Total Menu, enter the 6-digit password number using the keypad before pressing the [TOTAL] button. See section 6-4 "Password Setting".

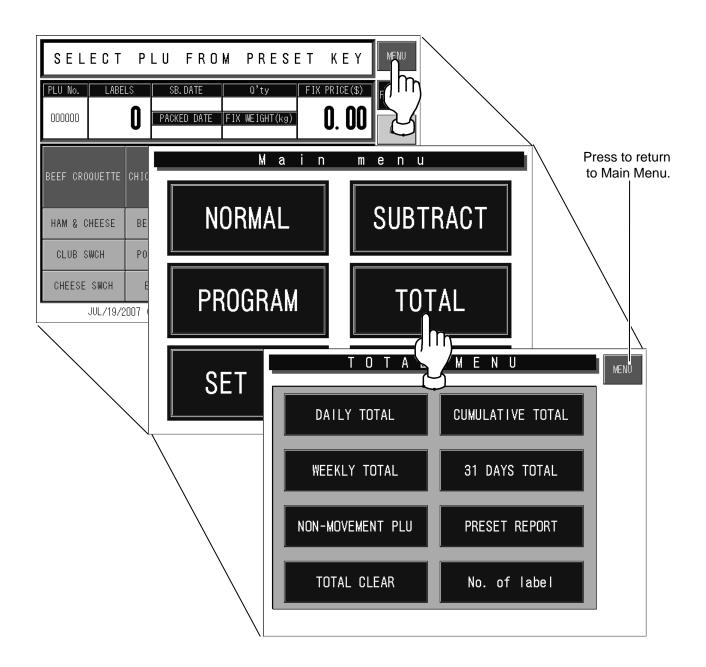


4.2 DAILY / CUMULATIVE TOTALS

Totals of various transactions performed on that day or for a certain period of time can be obtained. Press the [DAILY TOTAL] or [CUMULATIVE TOTAL] button on the Total Menu screen to display either Daily Total Menu or Cumulative Total Menu.

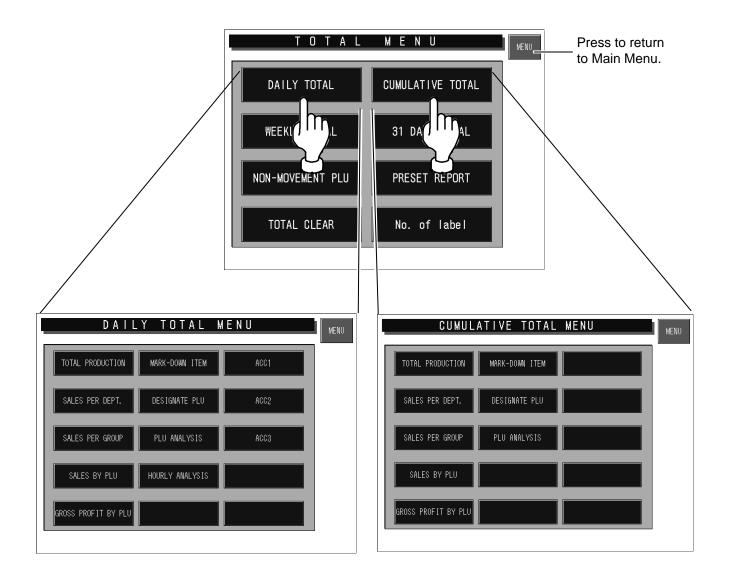


4.2.1 TOTAL PRODUCTION


To print the total data, press the [PRINT] key on the keypad.

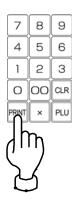

Press the [TOTAL PRODUCTION] button.

"Total Production" screen appears (Daily Total Menu is used in this example).

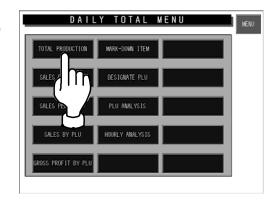


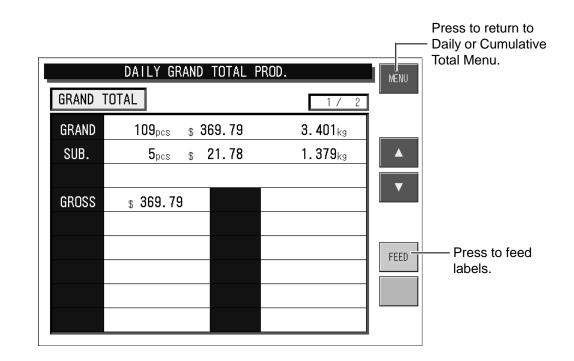

4.2.2 SALES PER DEPARTMENT




To print the total data, press the [PRINT] key on the keypad.

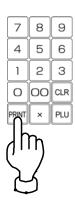

Press the [TOTAL SALES PER DEPT] button.

"Total Sales per Department" screen appears (Daily Total Menu is used in this example).

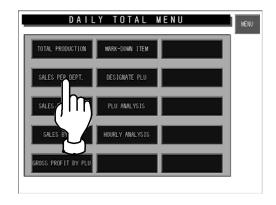

D	AILY TOTAL SAL	- Press to return to Daily or Cumulative Total Menu.				
GRAND TTL AVERAGE	748 pcs 95 1.277 kg/pcs	5.120 kg 3	g \$ 2 .20 \$/pcs	2397.29		Press to change the previous pag
CATEGORY	DEPARTMENT NAME	PCS	WEIGHT(kg)	PRICE(\$)		Press to scroll
1	DEPT. 1	120	153.774	385.97		up the line.
2	DEPT. 2	119	151.863	381.17	│ ▼ └	Press to scroll
3	DEPT. 3	144	184.337	462.68		down the line.
4	DEPT. 4	80	102.200	256.51	. ₹ .	Press to change
5	DEPT. 5	152	194.846	489.32		the next page
6	DEPT. 6	132	168.100	421.91	FEED	
						Press to feed
						labels

4.2.3 TOTAL SALES PER GROUP




Press the [SALES PER GROUP] button.

"Total Sales per Group" screen appears (Daily Total Menu is used in this example).

To print the total data, press the [PRINT] key on the keypad.



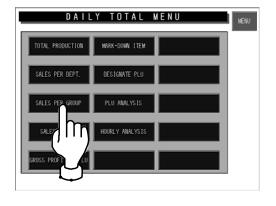


DA	ILY TOTAL SALE	Daily or Cumulative Total Menu.				
GRAND TTL AVERAGE	748 pcs 95 1.277 kg/pcs	5.120 kg 3	g \$ 2 .20 \$/pcs	2397.29		Press to change the previous pag
CATEGORY	GROUP NAME	PCS	WEIGHT(kg)	PRICE(\$)		Press to scroll
1	GROUP 1	63	79.430	199.42		up the line.
2	GROUP 2	68	78.455	194.33	I ▼ ⊥	Press to scroll
3	GROUP 3	75	95.233	239.05		down the line.
4	GROUP 4	41	52.804	131.52	│ ▼ ⊥	Press to change
5	GROUP 5	49	100.667	252.16		the next page
6	GROUP 6	65	86.850	217.98	FEED	
7	GROUP 7	42	95.111	231.05		Press to feed
8	GROUP 8	39	50.998	230.90		labels
9	GROUP 9	80	99.101	131.16		
10	GROUP 10	61	88.208	215.98		

4.2.4 TOTAL SALES BY PLU




To print the total data, press the [PRINT] key on the keypad.

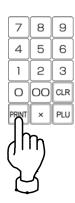

Press the [SALES BY PLU] button.

"Total Sales by PLU" screen appears (Daily Total Menu is used in this example).

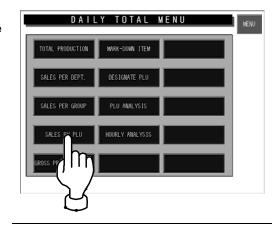

	DAILY TOTA	MENU	Press to return to Daily or Cumulative Total Menu.			
GRAND TTL	748 pcs	955.120 k	g \$	2397.29		Press to change the previous page
PLU No.	PRODUCT NAME	PCS	WEIGHT(kg)	PRICE(\$)		Press to scroll
1	PLU 1	13	9.430	99.42		up the line.
2	PLU 2	21	8.455	94.33	I ▼ _	Press to scroll
3	PLU 3	12	5.233	39.05		down the line.
4	PLU 4	26	2.804	31.52	. ▼ .	Press to change
5	PLU 5	40	10.667	52.16		the next page
6	PLU 6	32	6.850	17.98	FEED	
7	PLU 7	18	5.111	31.05		Press to feed
8	PLU 8	25	10.998	30.90		labels
9	PLU 9	33	9.101	31.16		
10	PLU 10	19	8.208	15.98		

4.2.5 TOTAL GROSS PROFIT BY PLU




Press the [GROSS PROFIT BY PLU] button.

"Total Gross Profit by PLU" screen appears (Daily Total Menu is used in this example).

To print the total data, press the [PRINT] key on the keypad.



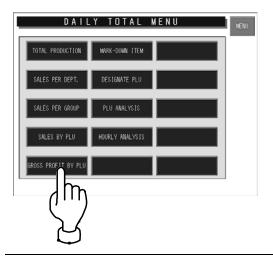


C	AILY TOTAL G	ROSSI	BY PLU		MENU	- Press to return to Daily or Cumulative Total Menu.
GRAND TTL	\$ 344372.65 TOTAL GRO	SS \$47523.	43 GROSS	RATE 13.8%		Press to change the previous page
PLU No.	PRODUCT NAME	GROSS%	GROSS(\$)	PRICE(\$)		Press to scroll
1	PLU 1	19.8	1974.29	9971.15		up the line.
2	PLU 2	12.6	1575.17	12501.31		Press to scroll
3	PLU 3	14.0	24.24	173.13		down the line.
4	PLU 4	10.3	51.78	502.72	▼ +	Press to change
5	PLU 5	12.4	1536.46	12390.84		the next page
6	PLU 6	18.8	862.03	4585.26	FEED	_
7	PLU 7	10.7	1324.24	12376.07		Press to feed
8	PLU 8	16.6	394.70	2377.73		labels
9	PLU 9	19.1	301.15	1577.73		
10	PLU 10	17.9	2222.92	12418.56		

4.2.6 TOTAL MARKDOWN ITEM




To print the total data, press the [PRINT] key on the keypad.

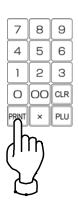

Press the [MARKDOWN ITEM] button.

"Total Markdown Item" screen appears (Daily Total Menu is used in this example).

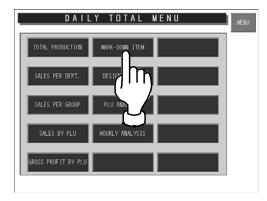



DA	VILY TOTAL M	Press to return to Daily or Cumulative Total Menu.				
GRAND TTL	255 pcs	46.611 kg	g \$	514.11		Press to change the previous page
PLU No.	PRODUCT NAME	PCS	WEIGHT(kg)	PRICE(\$)		Press to scroll up the line.
15	PLU 15	62	4.320	152.30		·
21	PLU 21	90	19.151	175.45		Press to scroll
28	PLU 28	103	23.140	186.36		down the line.
					¥	Press to change the next page
					FEED	Press to feed labels

4.2.7 TOTAL DESIGNATED PLU

1. Press the [DESIGNATE PLU] button.

 "Total Designated PLU" screen appears (Daily Total Menu is used in this example).

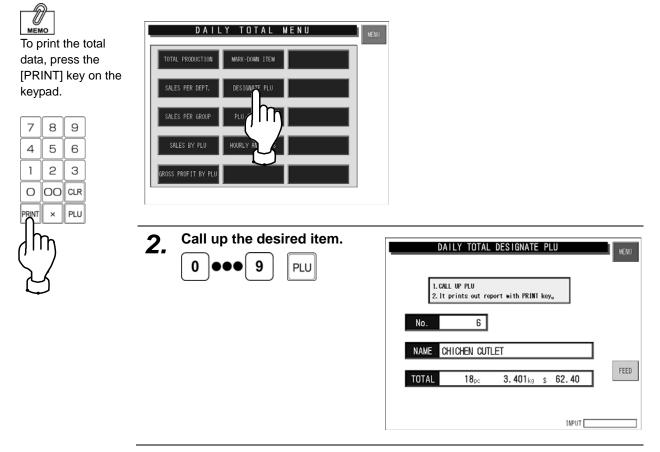


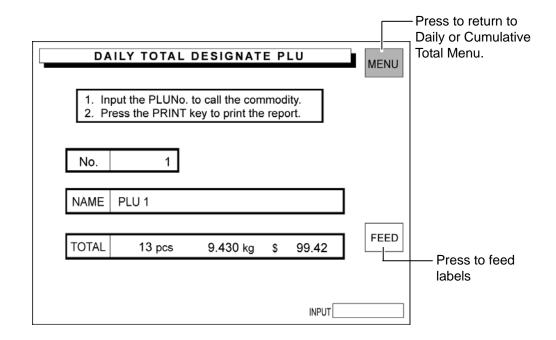

4.2.8 TOTAL PLU ANALYSIS

1. Press the [PLU ANALYSIS] button.

 "Daily Total PLU Analysis" screen appears (Daily Total Menu is used in this example).

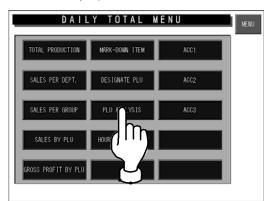


By group

Press the desired button to

select the analysis type.

GROUP

4_

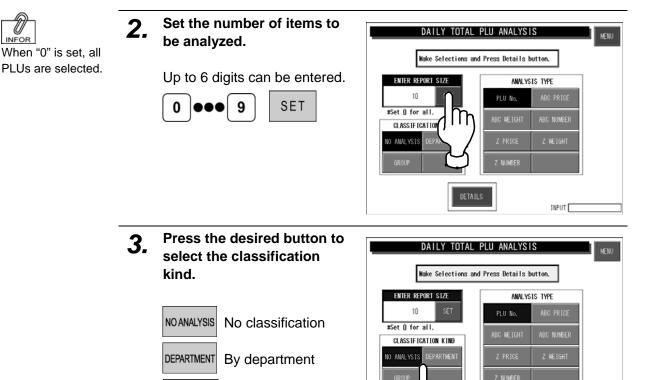


ENTER REPORT SIZE

10 SET #Set 0 for all. CLASSIFICATION KIND NO ANALYSIS DEPARTMEN

DAILY TOTAL PLU ANALYSIS

Wake Selections and Press Details button.

Z NUMBE

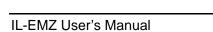


INPUT

ANALYSIS TYPE

In

INPUT

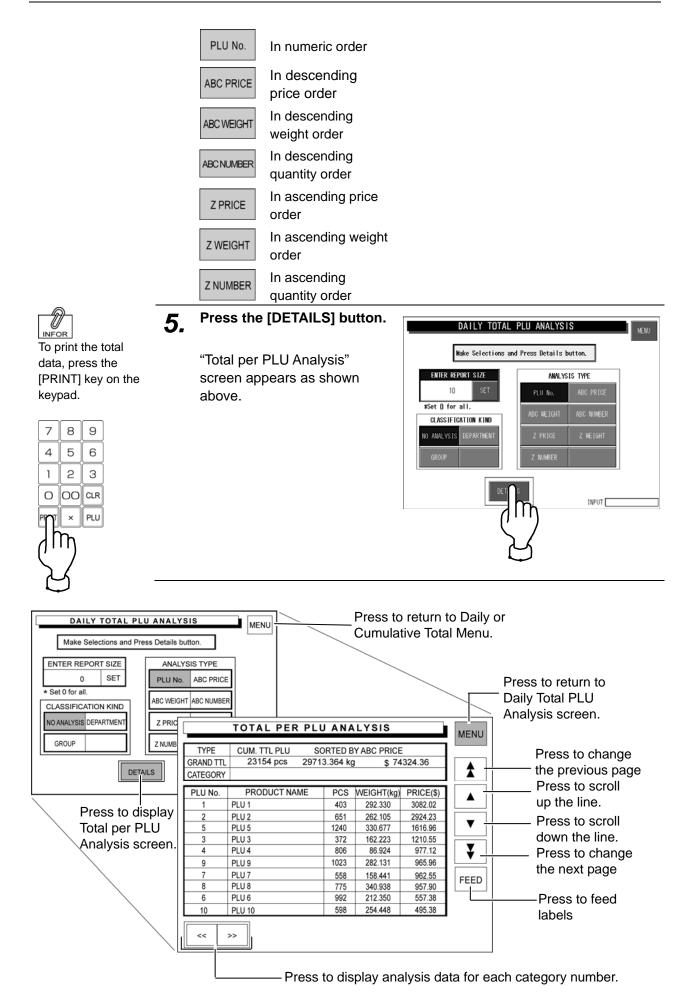


4.2.9 DAILY TOTAL HOURLY ANALYSIS




Press the [HOURLY ANALYSIS] button.

To print the total data, press the [PRINT] key on the keypad.

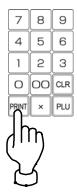




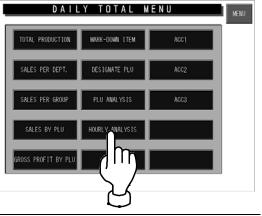

DAIL	Y TOTAL	. HOUR	LYAN	ALYSIS		MENU	Press to return to Daily Menu.
GRAND TTL	748 pcs	955.	120 kg	\$ 2397	7.29		
HOURLY	PCS	%		50	100%		Press to change the previous page
9H - 10H	28	3.8					Press to scroll
10H - 11H	39	5.2					up the line.
11H - 12H	55	7.3					Press to scroll
12H - 13H	50	6.7	1				down the line.
13H - 14H	64	8.6					down the line.
14H - 15H	78	10.4	•				Press to change
15H - 16H	123	16.5					the next page
16H - 17H	131	17.5				FEED	
17H - 18H	92	12.3					Press to feed
18H - 19H	88	11.7					labels
PCS PRIC	Æ						


Press to select either "pieces" or "prices".

4.2.10 ACC

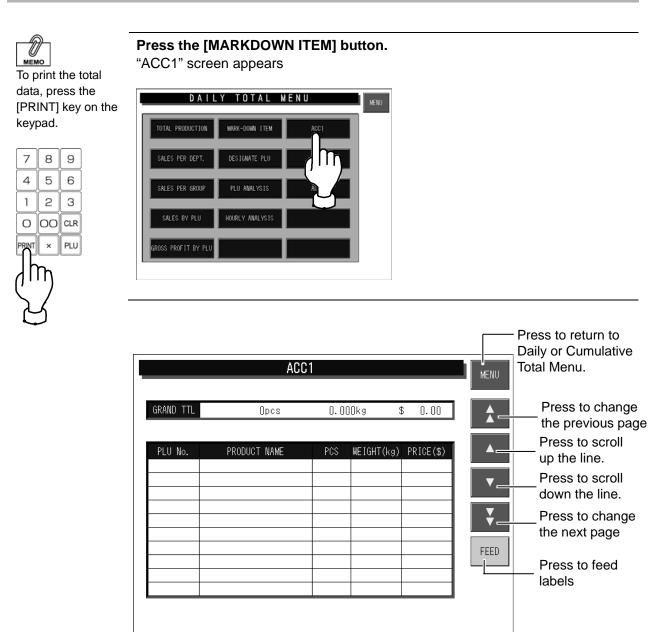

4.3 WEEKLY TOTAL

Totals of various transactions performed for a week can be obtained. Press the [Weekly] button on the Total Menu screen to display Weekly Total Menu.

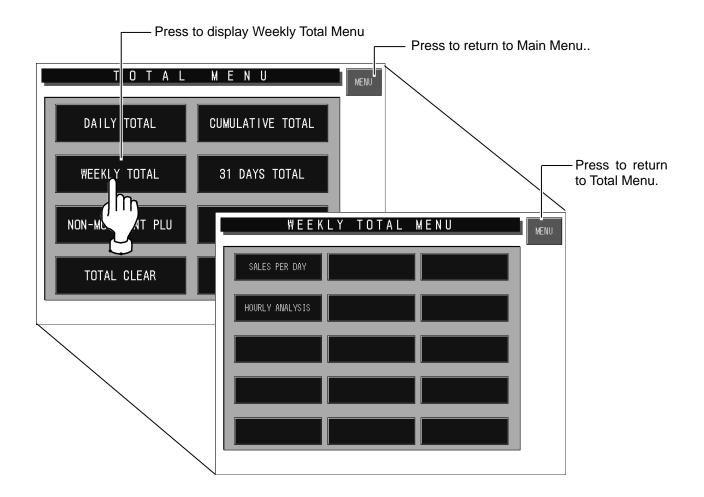

4.3.1 SALES PER DAYS OF THE WEEK




Press the [SALES PER DAY] button.

To print the total data, press the [PRINT] key on the keypad.

7 8 9 4 5 6 1 2 3 0 00 CLR PRNT × PLU


"Sales per Days of the Week" screen appears as shown above.

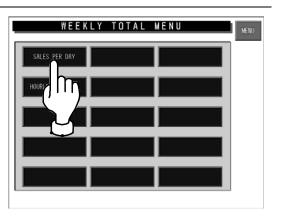


SA	5482 pcs 674	OF T		K 9831.45	MENU	Press to return to Weekly Total Menu.
No.	DAY	PCS	WEIGHT(kg)	PRICE(\$)		
1	SUNDAY	748	955.120	2397.29		
2	MONDAY	652	832.010	2036.64		
3	TUESDAY	684	816.205	2014.74		
4	WEDNESDAY	712	875.365	2635.80		
5	THURSDAY	813	975.654	3126.45		
6	FRIDAY	932	1045.789	3655.33		Press to feed
7	SATURDAY	941	1246.854	3965.20	FEED	the receipt.

4.3.2 HOURLY ANALYSIS OF THE WEEK

A day is delimited every hour, and the daily sales data either in price or quantity is displayed for each hourly zone in graphs.

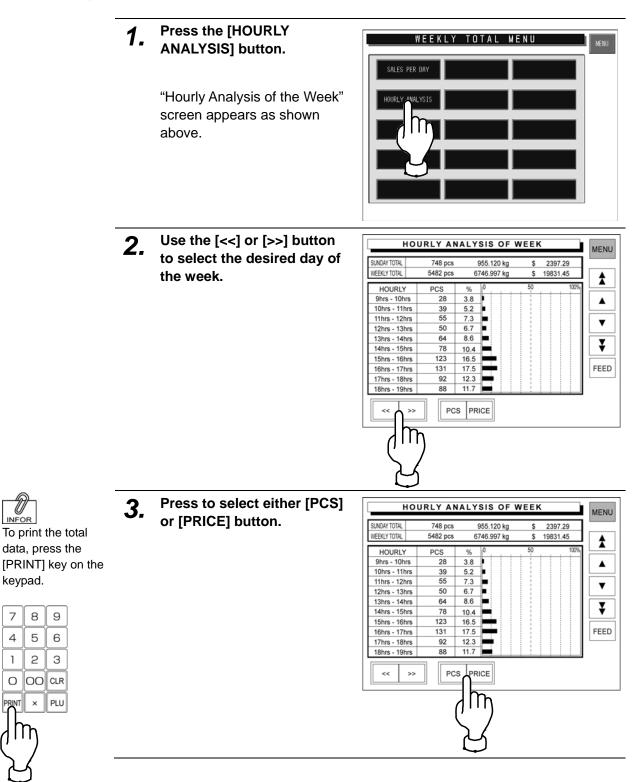


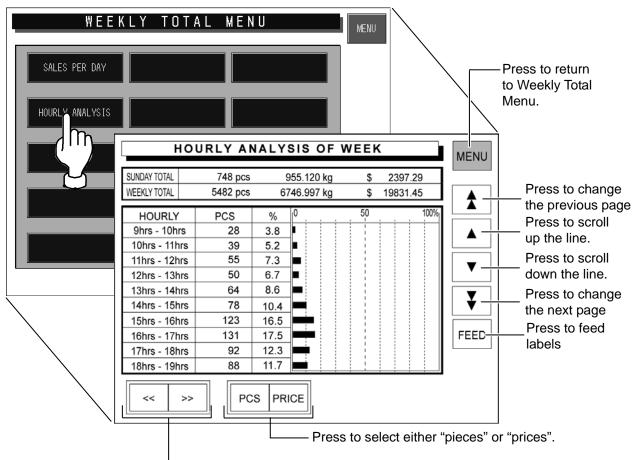


Press to change the day of the week.

4.4 31 DAYS TOTAL


Totals of transactions performed for a month period can be obtained. Press the [31 DAYS TOTAL] button on the Total Menu screen.

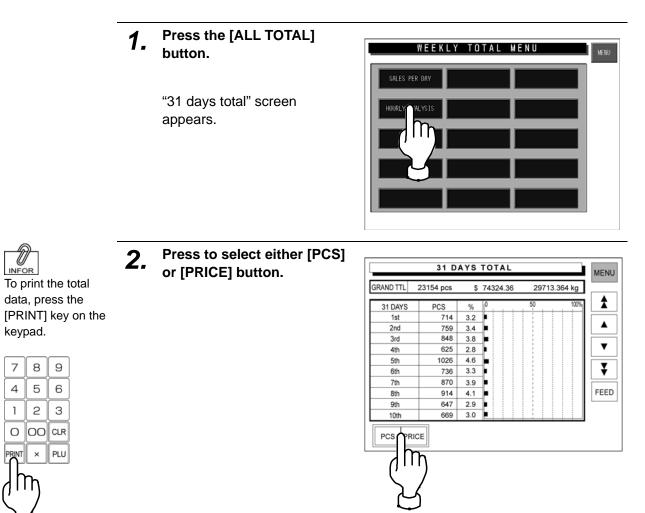


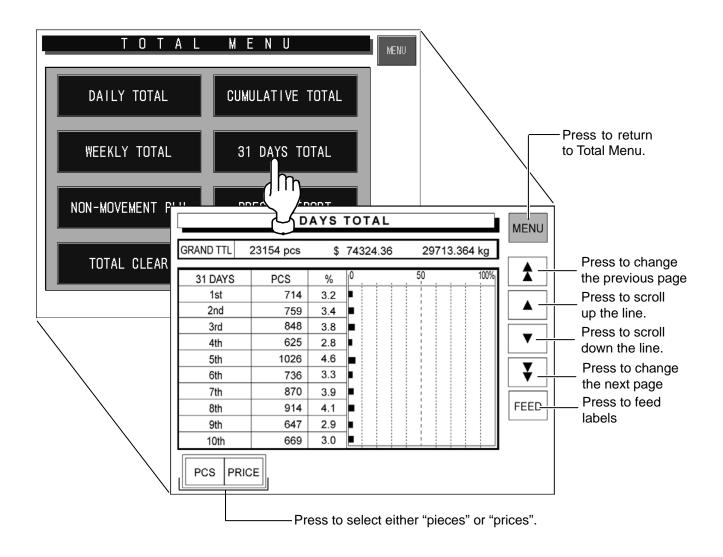

4.5 NON-MOVEMENT PLU

The list of PLU data that has not been moved for the specified period can be obtained. Press the [Non sales] button on the Total Menu screen to display Non-Movement PLU screen.

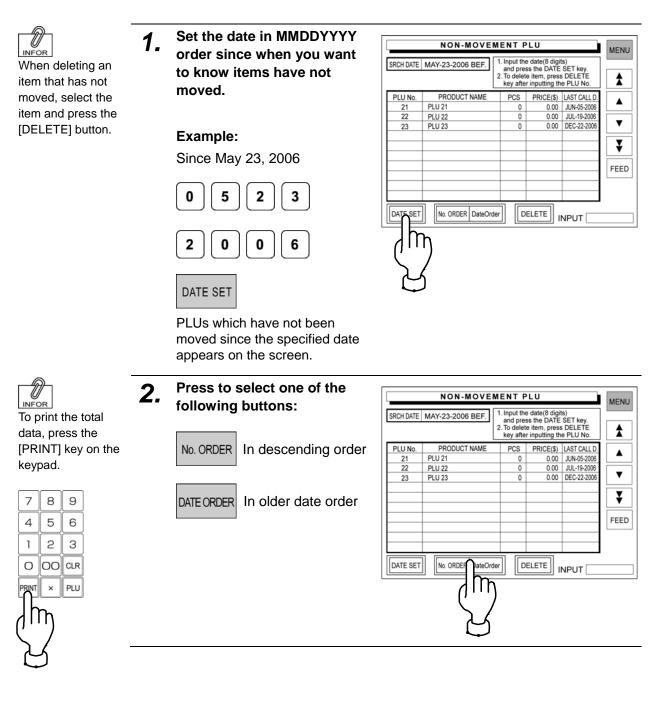

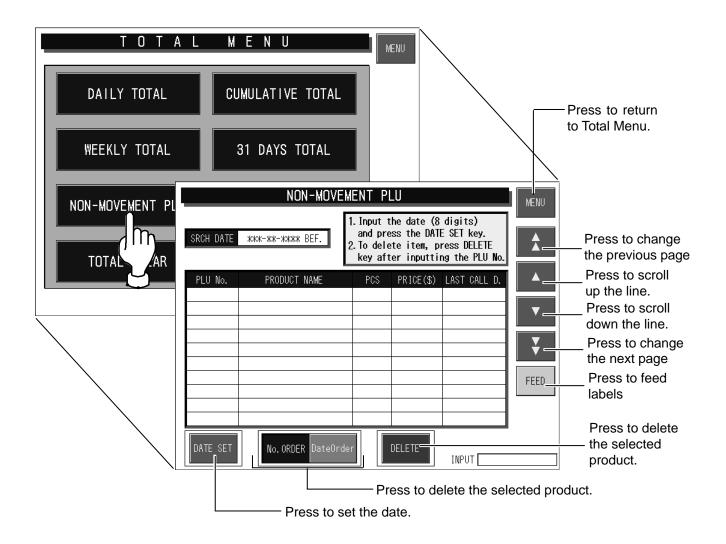


4.6 PRESET REPORT

This function is to combine desired totals and issue combined total reports.

Preset report is available for Daily and Cumulative totals.

Press the [Report print] button on the Total Menu screen to display Preset Report screen.

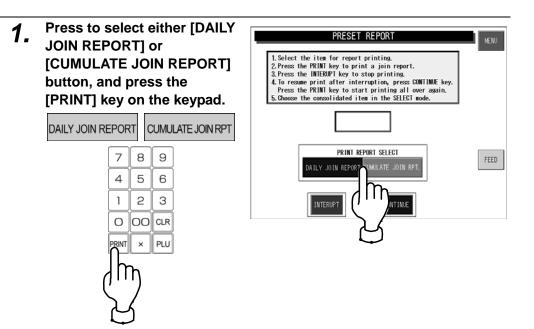

• To interrupt report printing, press the [INTERRUPT] button.




• To resume report printing, press the [CONTINUE] button.



• To start report printing from the beginning, press the [PRINT] key.




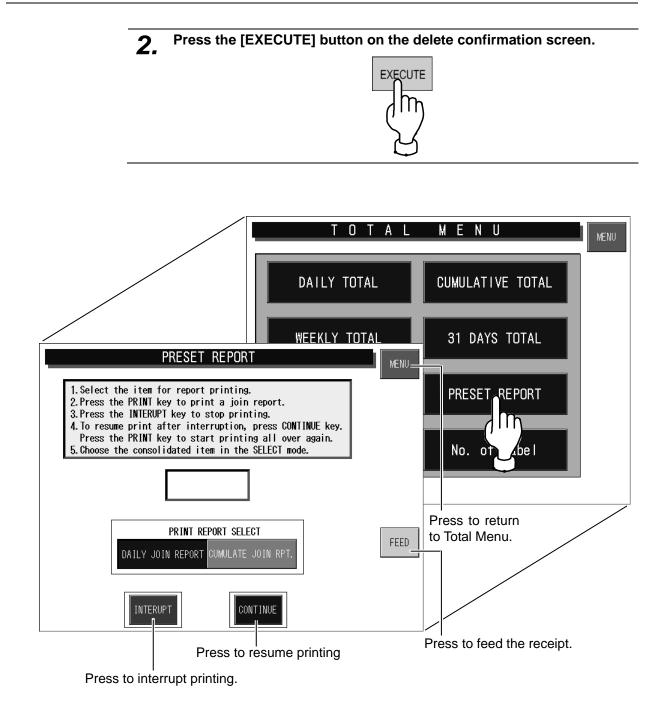


4.7 TOTAL CLEAR


This function is to clear the specified total data.

Press the [Total clear] button on the Total Menu screen to display Total Clear screen.

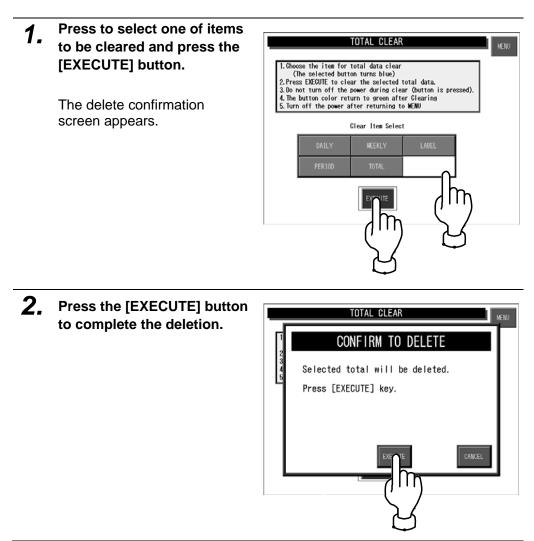

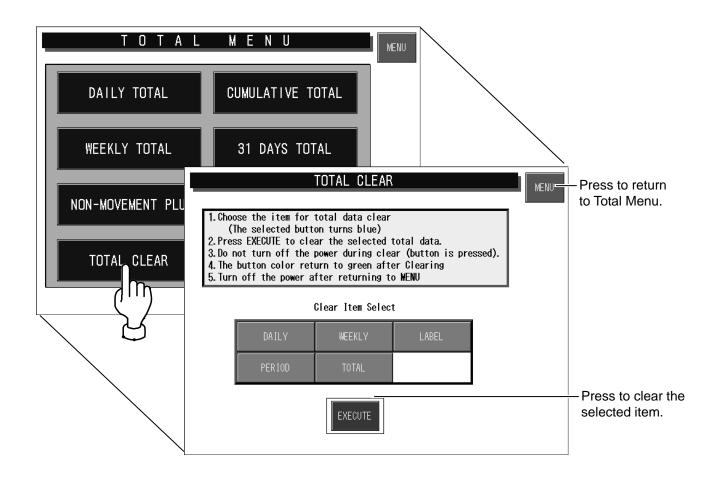


4.8 NUMBER OF LABELS

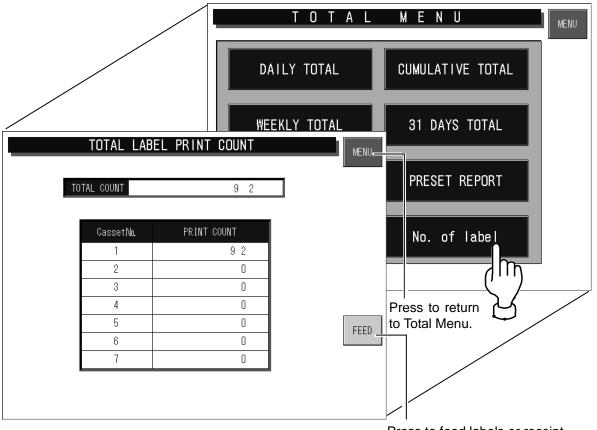

Press to feed labels or receipt.

This function checks and prints the number of issued labels.

Press the [No. of label] button on the Total Menu screen to display Total Label Print Count screen.

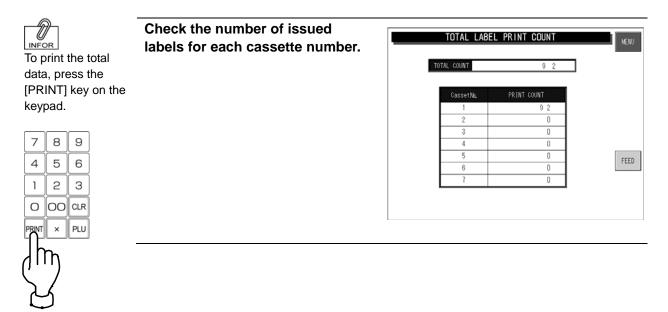


Chapter 5

PROGRAM MENU

5.1 PROGRAM MENU ENTRY

Program Menu is used to register various preset data required for daily operations. Press the [MENU] button on the initial screen and press the [PROGRAM] button on the Main Menu to enter Program Menu.

See section 6-4 "Password Setting".

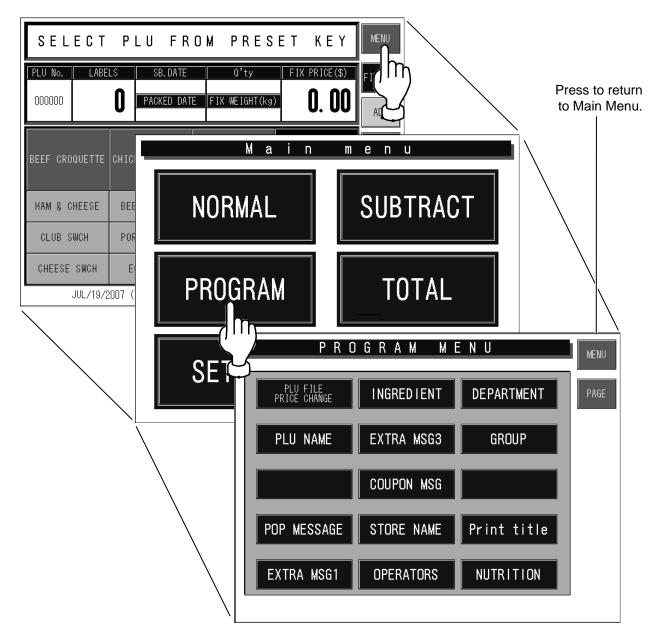


Note: When a password is programmed for accessing Program Menu, enter the 6-digit password number using the keypad before pressing the [PROGRAM] button.

5.2 ITEM DATA REGISTRATION

Product names and the associated data can be registered.

5.2.1 CHANGING UNIT/FIXED/MARKDOWN PRICES

You can change the unit price, fixed price, and special price. When the product data is not registered, register the data according to 5.2.2 "Registering Product Data".

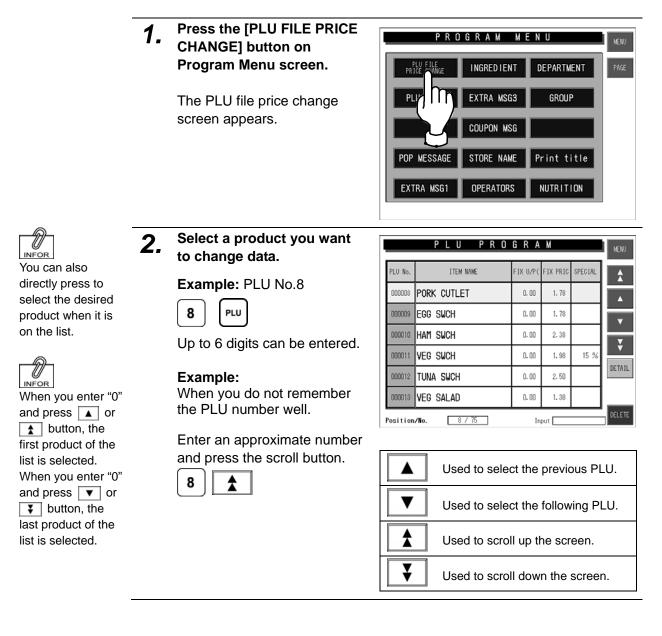



When you set the unit price, the fixed price will become "0", and when you set the fixed price, the unit price will become "0".



To release the special price setting, enter "0" and press the [SPECIAL] column.

3. Enter a price you want to change and press the corresponding field.

Example:

Change the fixed unit price to \$1.00.




Example:


Change the fixed price to \$3.00.



Example: Change the special price to \$2.00.



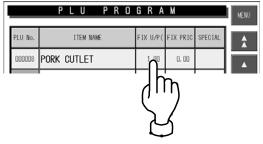


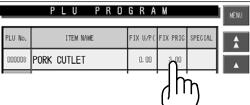

			\sim	/	
	PLU PRO	GRA	М		MENU
PLU No.	ITEM NAME	FIX U/P(FIX PRIC	SPECIAL	
000008	PORK CUTLET	0, 00	3.00	2 - 11 5	
				٦F	Ŋ
				ك	5

4. Press the [MENU] button on the screen to finish settings of the unit price, fixed price and special price.


PLU No.	ITEM NAME	FIX U/P(FIX PRIC	SPECIAL
000001	BEEF CROQUETTE	0.00	7.58	1.23 -
000002	CROQUETTE	0.00	3. 58	
000003	HAM & CHEESE	0.00	3.98	
000004	CRAB SWCH	0.00	3.68	
000005	CHEESE SWCH	0.00	2.58	
000006	CHICHEN CUTLET	0.00	2.38	

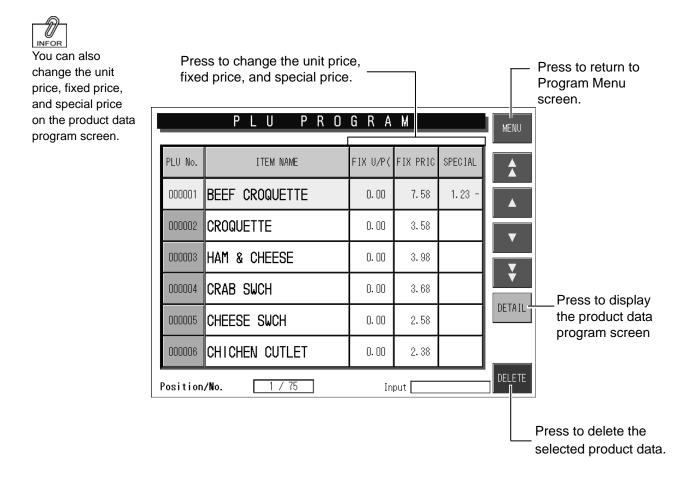

5.2.2 REGISTERING PRODUCT DATA

- 1. Press the [PLU FILE PRICE
 - CHANGE] button on Program Menu screen.

The PLU file price change screen appears.

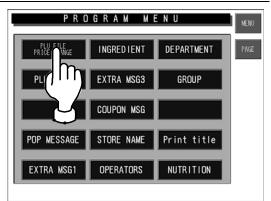

2. Enter a PLU number.

Up to 6 digits can be entered.

	PLU PRO	GRA	М		MENU
PLU No.	ITEM NAME	FIX U/P(FIX PRIC	SPECIAL	*
000001	BEEF CROQUETTE	0.00	7.58	1.23 -	
000002	CROQUETTE	0.00	3.58		Ţ
000003	HAM & CHEESE	0.00	3.98		
000004	CRAB SWCH	0.00	3.68		•
000005	CHEESE SWCH	0.00	2.58		DETAIL
000006	CHICHEN CUTLET	0.00	2.38		
Position	n/No. 1775	In	put 📃		DELETE

Example:

Create a new product data.

Enter the PLU number and press the [PLU] key on the keypad.



The item data registration screen appears.

Example:

Change a product data that has been already registered.

Enter the PLU number and press the [PLU] key on the keypad.



Confirm that the product is selected on the screen, and press the [DETAIL] button.

DETAIL

The item data registration screen appears.

II	Ţ	ΕM	1	N .	A M	Ε				RETURN
_										ERASE
PLU No. 000001 TOTAL CHAR 000	Q	U	E	R	٠	Y	U		0	P
LINE 001	A	S		F	G	H	J	K		
REMAINING 1022 STYLE N/N	¢	Z	X	C		B	N	M		
FONTSIZE # 7	Ñ	\$	7.	&	Ō	?		$\overline{\Sigma}$		
COPY LINE DELETE	SP	ē	ē	*	Ø	ê	Ō	Ō		
SHIFT FONT OFF # 7	STYLE	1	DELET	E	1	BKSP/	ACE	NEWL I	NE	SET
INSERT	STYLE	2	-	D	Ļ	-		INPUT		

	PLU PRO	GRA	М		MENU
PLU No.	ITEM NAME	FIX U/P(FIX PRIC	SPECIAL	
000001	BEEF CROQUETTE	0.00	7.58	1.23 -	
000002	CROQUETTE	0.00	3.58		Ţ
000003	HAM & CHEESE	0.00	3.98		Ţ
000004	CRAB SWCH	0.00	3.68		
000005	CHEESE SWCH	0.00	2.58		DETAIL
000006	CHICHEN CUTLET	0.00	2.38		/ IT
Position	/No. 5 / 75	In	put 🦳		





See "Item Data Registration Screens 1/3 - 3/3" on the following pages for more information. 3.

Register necessary items for the selected product.

000005		CHEESE	SWCH		EDIT	Jh
FIX U/P	1.20	CODE	0:REF	POPN.	0	19
FIX PRICE	0.00	FLAG REF	O:SYSTEM	ORIGIN No.	0	ג ן
∽ PRICE M	1:M PRICE	POS FLAG	02	INGRE No.	0	
M PRICE	0.95	POS CODE	0000000000	COMMENT No.	0	
SYMBOLE	():NONE	ITEM CODE	00000000	TEMPN0.	0	1
PCS	0	EXP. PERIOD	5 days	TEMPNo.	0	
BACKPRTSEL	0:REF	REG CODE	0	NUTRITION No.	0	1




	ΙT	ΕM	DA	ΤA		BACK
000005	1	CHEESE	SWCH		EDIT	
EXP. DATE	0:REF	PRINT MODE	1:PRNT	U/P MODE	2:%mode	יייק
EXP TIME	0:REF	TOTAL COR	O:NON	U/P	0.00	$\sum $
EXP. SELECT	0:REF	PRTSELCT	0:REF	FIX WEIGHT	0.000	
EXP. TIME	:	BAR PRNT	1:YES	TAX No.	0	
EXP.DATE P	0:REF	FORMAT NO.	0	STORE No.	0	
EXP TIME P	0:REF	IMAGE	0			
EXP. TIME	OH later					
PAGE 2	2 / 3			INPUT		DELETE

PAGE

4. Finish the data registration.


BACK

The data save confirmation screen appears.

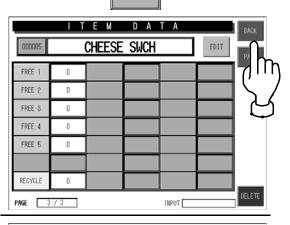

5. Press the [EXECUTE] button to save the data.

The data is saved and the display returns to the PLU program screen.

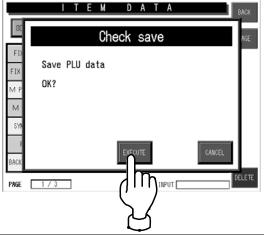

6 .	Press the [MENU] button to complete the data		PLU PRO	GRA	M	
	registration.	PLU No.	ITEM NAME	FIX U/P(FIX PRIC	SPECIAL
	-	000001	BEEF CROQUETTE	0.00	7.58	1.23 -
		000002	CROQUETTE	0.00	3. 58	
	The display returns to	000003	HAM & CHEESE	0.00	3.98	
	Program Menu screen.	000004	CRAB SWCH	0.00	3.68	
		000005	CHEESE SWCH	0.00	2.58	
		000006	CHICHEN CUTLET	0.00	2.38	
		Position	n/No. 5775	Ir	nput	

■ Item Data Registration Screen 1/3

Input examples are summarized in the following table.

Product name is d Press to call up								display the ame edit
	000005		e m Cheese	d a SWCH	T A	EDIT	BACK -	Press to return to the PLU program screen. Press to change to the
	FIX U/P	1.20	CODE	0:REF	POP№.	D		next screen.
	FIX PRICE	0.00	FLAG REF	O:SYSTEM	ORIGIN No.	O		
	M PRICE M	1:M PRICE	POS FLAG	02	INGRE No.	O		
	M PRICE	0.95	POS CODE	0000000000	COMMENT No.	O		
	SYMBOLE	O:NONE	ITEM CODE	00000000	TEMPNo.	O		
	PCS	O	EXP. PERIOD	5 days	TEMPNo.	O		
	BACKPRTSEL	0:REF	REG CODE	0	NUTRITION No.	O		
	PAGE 1	/ 3			INPUT		DELETE	


Data	Example	Operation			
Product Name	Register a product name.	 Press the [EDIT] button to display the product name edit screen. Enter the product name. See Appendix "Text Editing" for more information. To return to the item data registration screen, press the [RETURN] button. 			
FIX U/P Fixed Unit Price	Register the fixed unit price "\$5.00".	Up to 5 digits can be entered. 5 00 FIX U/P When the unit price is input, the fixed price is calculated by the unit price multiplied by the fixed weight.			
FIX PRICE Fixed Price	Register the fixed price "\$8.00".	Up to 5 digits can be entered. 8 00 FIX PRICE			
M PRICE MODE Markdown Price Mode	Select the markdown method.	When the [M PRICE MODE] field is pressed, the selection screen will appear. NO No markdown MPRICE Special price -\$ Amount discount (-\$) -% Percent discount (-%)			
M PRICE Markdown Price	Register the special price "\$7.20" for the product with its usual price "\$8.00". * The markdown method must have been selected.	When "NONE" is selected in the markdown price mode, you can not enter a numeric value. Special price (Max. 5 digits) 7 2 0 M PRICE Amount minus (-\$)(Max. 5 digits) 8 0 M PRICE Percent minus (-%) (Max. 2 digits) 1 0 M PRICE			
SYMBOL Symbol	Select "PC."	Press the [SYMBOL] field to display the selection screen and press to select the [PC.] field.			

Data	Example	Operation
	Register "3 pieces" for the fixed price product.	Quantity can be entered up to 4 digits. 3 PCS When the quantity print is not required. 0 PCS
PCS Pieces	Register "1/2" for the fixed price product.	Press the [PCS] field to display the fraction input screen. Numeric value 1-9 can be entered for each denominator and numerator. 1 2 PCS
BACKPTRSEL Back Printer Selection	Select the bottom label printing.	When the [BACK PRINTER SELECT] field is pressed, the selection screen will appear. REF Refer to set data NO No bottom label issue BARCODE Barcode print INGRE Ingredient print ING+BAR Ingredient & barcode print ALL All print except barcode ALL+BAR All print including barcode
CODE Code System	Select the barcode system.	When the [CODE] field is pressed, the selection screen will appear. REF Refer to set data. Non-PLU13 Non-PLU 13 digits Non-PLU8 Non-PLU 8 digits PLU13 PLU 13 digits PLU8 PLU 8 digits

Data	Example	Operation			
		When the [FLAG REF] field is pressed, the selection screen will appear.			
FLAG REF Flag Reference	Select the flag reference.	SYSTEM Refer to system.			
		TEMPROG Refer to product registration			
POS FLAG POS Flag	Register the POS flag "2".	Up to 2 digits can be entered. 2 POS FLAG			
POS CODE POS Code	Register the POS code "1234567890".	Up to 10 digits can be entered. 1 2 3 4 5 6 7 8 9 0 POS CODE			
ITEM CODE Item Code	Register the POS code "12345678".	Up to 8 digits can be entered. 1 2 3 4 5 6 7 8 ITEM CODE			
EXP. PERIOD Expiry Period	Register the expiry period "2 days".	Up to 4 digits can be entered. 2 EXP. PERIOD			
REG. CODE Register Code	Register the register code "12".	Up to 3 digits can be entered. 1 2 REG. CODE			
POP NO. POP Number	Register the POP number "450".	Up to 3 digits can be entered. 4 5 0 POP NO.			
ORIGIN NO. Origin Number	Register the origin number "635".	Up to 3 digits can be entered. 6 3 5 ORIGIN NO. * Origin names must have been registered.			
INGRE NO. Ingredient Number	Register the ingredient number "1621".	Up to 4 digits can be entered. 1 6 2 1 INGRE NO. * Ingredient names must have been registered.			
COMMENT NO. Comment Number	Register the comment number "53".	Up to 2 digits can be entered. 5 3 COMMENT NO. * Comments must have been registered.			
TEMP NO. Temperature Number	Register the storage temperature number "94".	Up to 2 digits can be entered. 9 4 TEMP NO. * Storage temperatures must have been registered.			
STORAGE Storage Method	Register the storage method number "29".	Up to 2 digits can be entered. 2 9 STORAGE * Storage methods must have been registered.			
NUTRITION NO. Nutrition Number	Register the nutrition number "29".	Up to 2 digits can be entered. 2 9 NUTRITION NO. * Nutrition messages must have been registered.			

■ Item Data Registration Screen 2/3

Input examples are summarized in the following table.

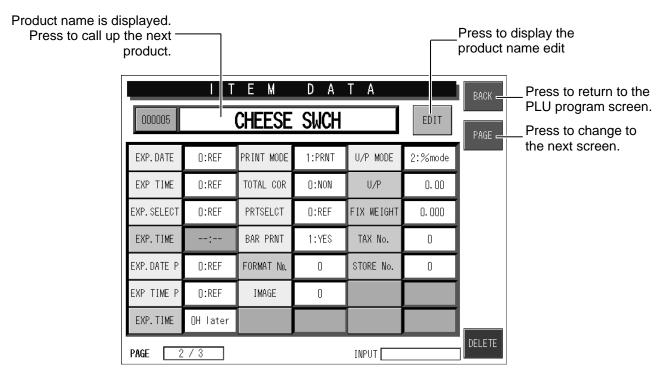

Data	Example	Operation			
	Select whether or not to	When the [PACK DATE PRINT] field is pressed, the selection screen will appear.			
PACK DATE P		REF Refer to set data.			
Pack Date Print	print the date on each label.	YES Print the date on each label.			
		NO No date print			
	Select whether or not to print the time on each label.	When the [PACK TIME PRINT] field is pressed, the selection screen will appear.			
PACK TIME P		REF Refer to set data.			
Pack Time Print		YES Print the time on each label.			
		NO No time print			
	Select the pack time.	When the [PACK TIME SELECT] field is pressed, the selection screen will appear.			
P TIME SELECT		REF Refer to set data.			
Pack Time Select		REF Use the set time.			
		DESIG Use the internal clock.			

Data	Example	Operation
	Set the pack time "13:00".	Use a round-the-clock time (4 digits).
PACK TIME Pack Time Set	* The time can be entered only when "Designate" is selected.	1 3 00 PACK TIME * Nutrition messages must have been registered.
		When the [EXPIRY DATE PRINT] field is pressed, the selection screen will appear.
EXP. DATE P	Select whether or not to print the date on each	REF Refer to set data.
Expiry Date Print	label.	YES Print the date on each label.
		NO No date print
		When the [EXPIRY TIME PRINT] field is pressed, the selection screen will appear.
EXP. TIME P	Select whether or not to print the time on each	REF Refer to set data.
Expiry Time Print	label.	YES Print the time on each label.
		NO No time print
	Set the expiry time "5 hours" later than the	Up to 4 digits can be entered.
EXP. TIME	pack time.	5 EXP. TIME
Expiry Time	* Time can be entered only when "Designate" is selected.	
		When the [PRINT MODE] field is pressed, the selection screen will appear.
PRINT MODE	Select the print mode	PRINT Issue labels are issue.
Print Mode	Select the print mode.	NO Label issue is prohibited.
		NO ADD Issue labels but not add the data to totals.
	Select whether or not to collect totals.	When the [TOTAL COLLECTION] field is pressed, the selection screen will appear.
TOTALCOL Total Collection	* Used in on-line	NO Not collect totals.
	specification.	YES Collect totals
		When the [PRINT SELECT] field is pressed, the selection screen will appear.
PRTSELECT	Select whether or not to	REF Refer to set data.
Print Select	print top labels.	PRINT Issue top labels.
		NO Prohibit to issue top labels.

Data	Example	Operation
BAR PRINT Barcode Print	Select whether or not to print barcode labels on top labels.	When the [BAR PRINT] field is pressed, the selection screen will appear. NO No print YES Print
FORMAT No. Format Number	Register the format number "72".	Up to 2 digits can be entered. 7 2 FORMAT No.
IMAGE Image Number	Input the image number "10".	Up to 2 digits can be entered. 1 0 IMAGE When the [IMAGE No.] field is pressed, the detailed image screen will appear.
U/P MODE Cost Unit Price Mode	Select the cost unit price mode.	When the [U/P MODE] field is pressed, the selection screen will appear. 1: \$MODE Amount mode 2: %MODE Percent mode
U/P Cost Unit Price	Register the cost unit price "\$1.50" for the "\$3.00" selling price product. * The cost unit price mode must have been selected.	When the [U/P] field is pressed, the selection screen will appear. Amount (\$) mode (max. 5 digits) 1 5 0 U/P Percent (%) mode (max. 2 digits) 5 0 U/P
FIX WEIGHT Fix Weight	Register the fixed weight "160g".	Up to 5 digits can be entered. 1 6 0 FIX WEIGHT
TAX No.Register the tax numberTax Number"1".		The numeric value 0 – 9 can be entered. 1 TAX No. * Tax rates must have been registered.
STORE No. Store Number	Register the store number "20".	Up to 4 digits can be entered. 2 0 STORE No. * Store information must have been registered.

■ Item Data Registration Screen 3/3

Input examples are summarized in the following table.

Product name is disp Press to call up the r product.								display the name edit
	000005		t e m Cheese	d a SWCH	T A	EDIT	BACK PAGE	Press to return to the PLU program screen. Press to change to
	FREE 1	0						the next screen.
	FREE 2	0						
	FREE 3	0						
	FREE 4	0						
	FREE 5	0						
	RECYCLE	0						
	PAGE 3	/ 3			INPUT		DELETE	


Product	Example	Operation
FREE 1-5 Free message 1-5	Register the free message number "20".	Up to 2 digits can be entered. 2 0 FREE 1-5 * Free messages must have been registered.


5.3 PRODUCT NAME REGISTRATION

This section explains the product name registration procedure.

You can register a product name when registering each product, and also register product names collectively.


Example: Register "Beef Cutlet Special" in PLU No.7.

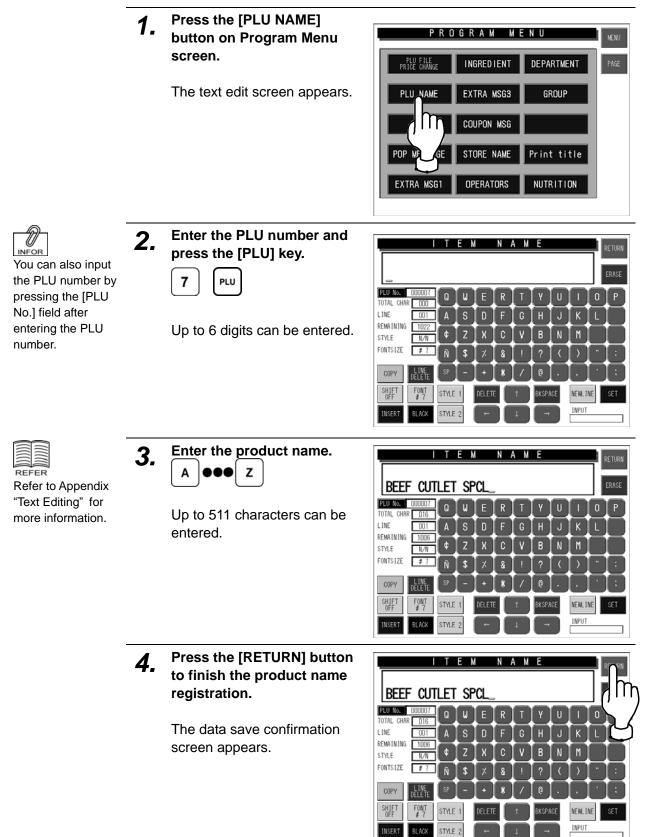

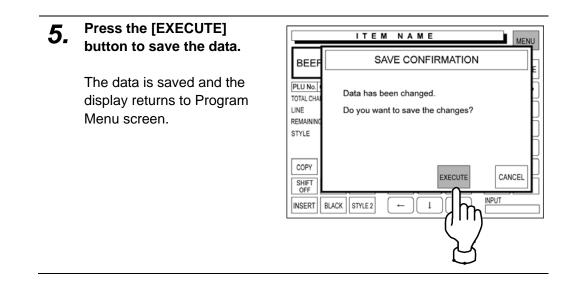

INGREDIENT NAME REGISTRATION 5.4

This section explains the ingredient name registration procedure.

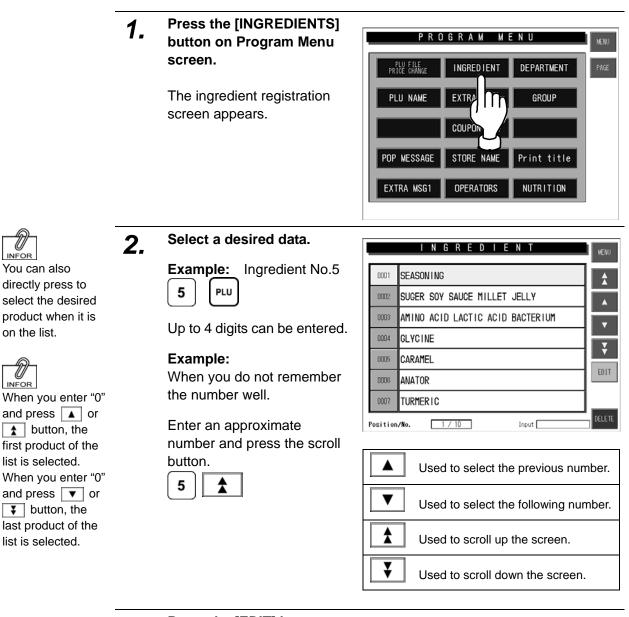

3. Press the [EDIT] button on the screen.


The text edit screen appears.

	INGREDIENT	MENU
0001	SEASONING	*
0002	SUGER SOY SAUCE MILLET JELLY	
0003	AMINO ACID LACTIC ACID BACTERIUM	Ţ
0004	GLYCINE	
0005	CARAMEL	Ť.
0006	ANATOR	
0007	TURMERIC	լիր
Position	n/No. 1 / 10 Input	
		\mathcal{C}

INFOR

on the list.

INFOR

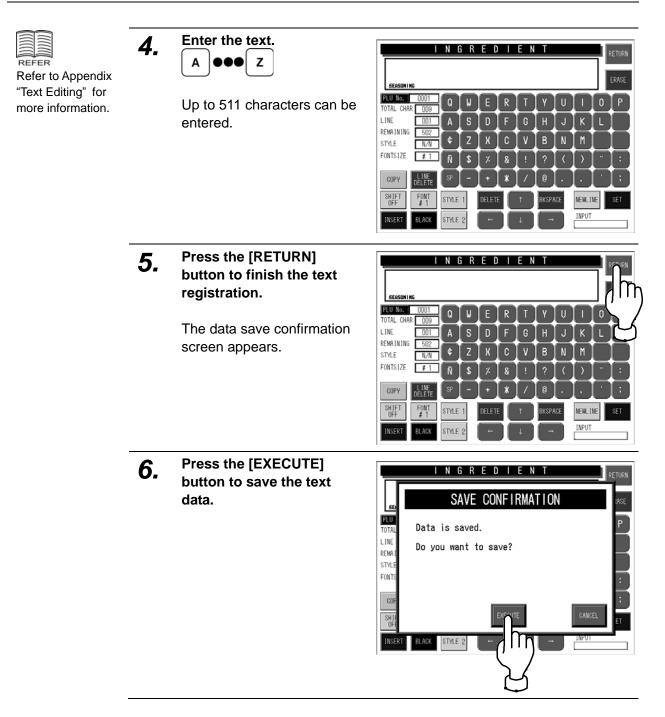

			Press to return to Program Menu screen.
	INGREDIENT	MENU	
0001	SEASONING		
0002	SUGER SOY SAUCE MILLET JELLY		
0003	AMINO ACID LACTIC ACID BACTERIUM		
0004	GLYCINE		
0005	CARAMEL		Press to display the
0006	ANATOR		text edit screen.
0007	TURMERIC	1	
Positio	n/No. 1 / 10 Input	DELETE	Press to delete the selected data.


5.5 POP MESSAGE REGISTRATION

POP message can be registered within the range from message numbers 7 through 999. Message numbers 1 through 6 are default settings as follows:

	DISPLAY POP	PLIST (28)
_		
001	SPECIAL !	
002	ON SALE	
003	DISCOUNTED	
004	ADVERTISED	
005	REFRIGERATE	
006	GOOD BUY	
		14 ITEM 28 ITEM INPUT

1. Press the [POP MESSAGE] button on Program Menu screen.

The POP message registration screen appears.

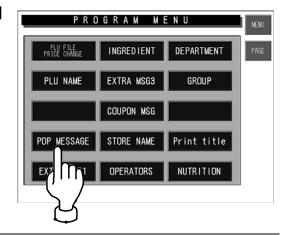

2. Enter the message number and press the [PLU] key on the keypad.

Example: Message No.7



	٤N
ERASE	ε
	,
Ñ \$ % & ! ? < > " :	
COPY SP - + * / @ . , ' ;	
SHIFT OFF FONT #3 STYLE 1 DELETE 1 BKSPACE NEWLINE FIX	
INSERT BLACK STYLE 2 ← 1 → INPUT	




Refer to Appendix "Text Editing" for more information.


2 5	Enter the text.			
J.	Α		z	

Up to 75 characters can be entered.


Press the [RETURN] button to finish the text edit.

	POP REGISTRATION	RET RN
RECOMM]7m
PLU No. 007 TOTAL CHAR 011 LINE 001	QWERTYUI ASDFGHJK	
REMAINING 068 STYLE N/N	€ZXCVBNM ÑS%&!?<>	
COPY	N \$ % & ! ? > SP - + ★ / @ . ,	
SHIFT OFF F3 INSERT BLACK	STYLE 1 DELETE ↑ BKSPACE NEWLI STYLE 2 ← ↓ → INPUT	NE FIX

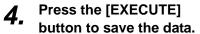

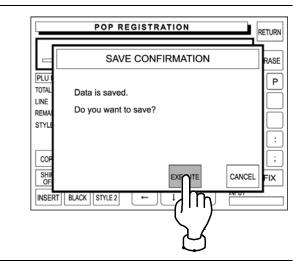

The same procedure can be applied for the following registrations.

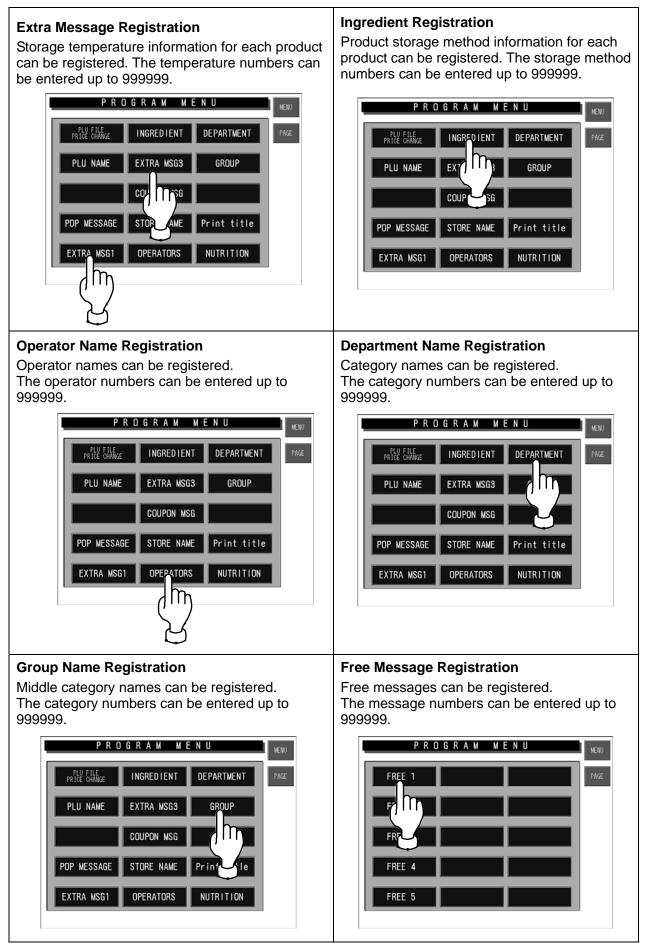



5.6 STORE NAME/ADDRESS REGISTRATION

This section explains the store name and address registration procedures. These names and addresses will be printed on labels.

5.6.1 Store Name Registration

Example: Register the store name "SUPER ISHIDA" in Store No.1.

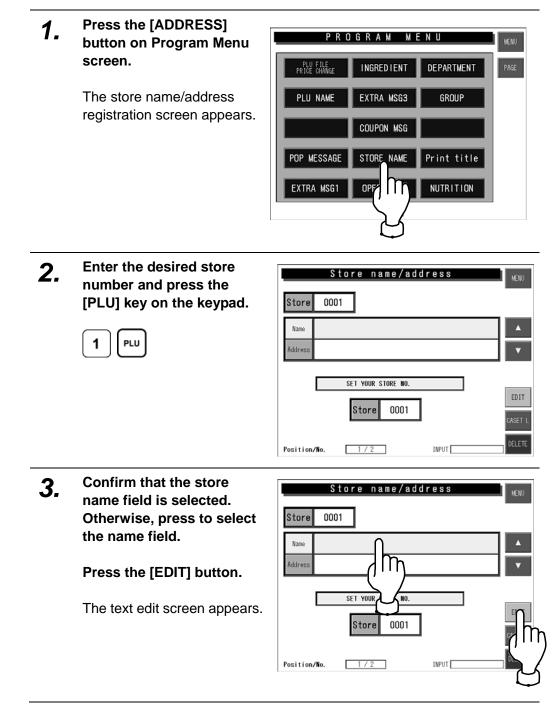


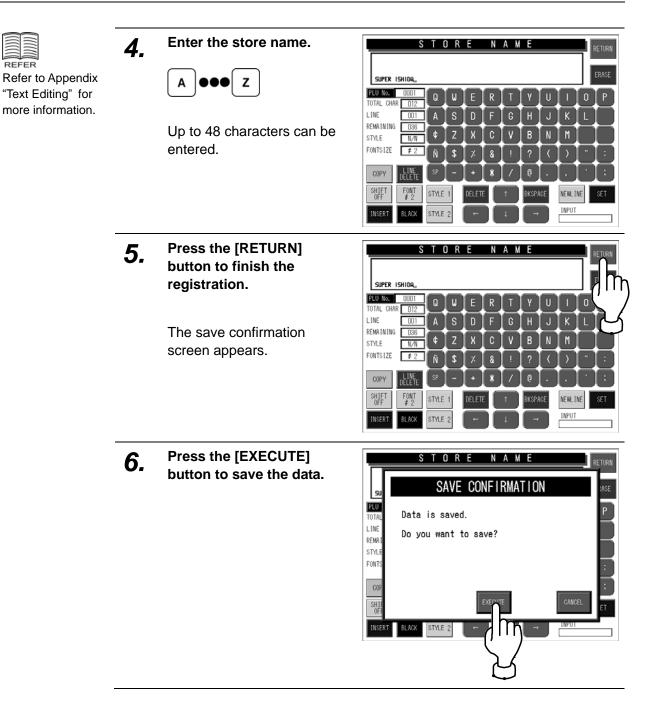


	Press to return to Program Menu screen.
Store name/address	MENU
Name SUPER ISHIDA Address SHOGOIN SAKYO-KU KYOTO JAPAN	Press to display the previous screen.
SET YOUR STORE NO. Store 0001 Position/No. 1/1 INPUT	EDIT Press to display the text edit screen. When no numeric value is entered: The list of store numbers linked with cassettes is displayed. When a numeric value is entered: The specific store number is displayed. Press to return to Program Menu screen.

5.6.2 Store Address Registration

Example: Register the store address "BIWAKO SHIGA JAPAN".

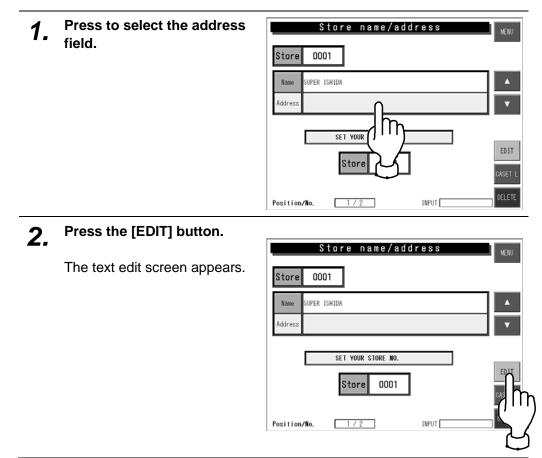


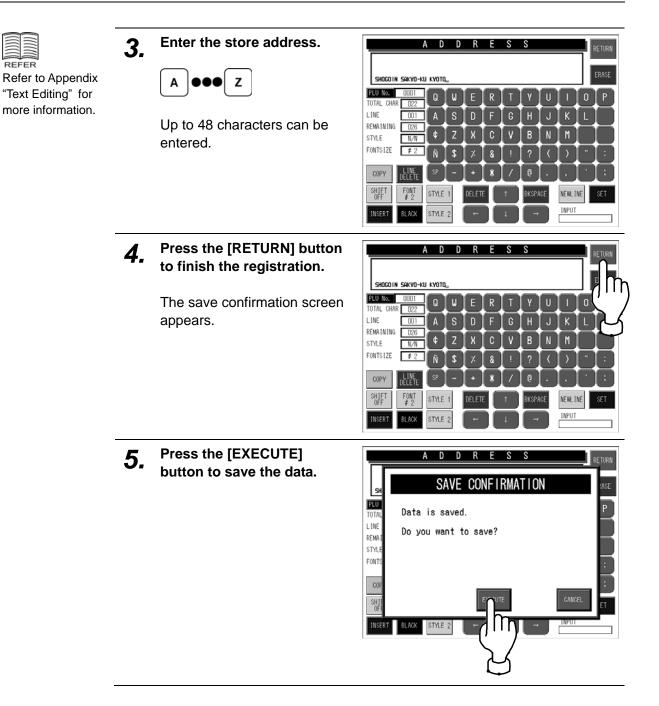

REFER


5.6.3 Cassette Link Registration

Example: Set the store number "1" to link with the cassette number "2".

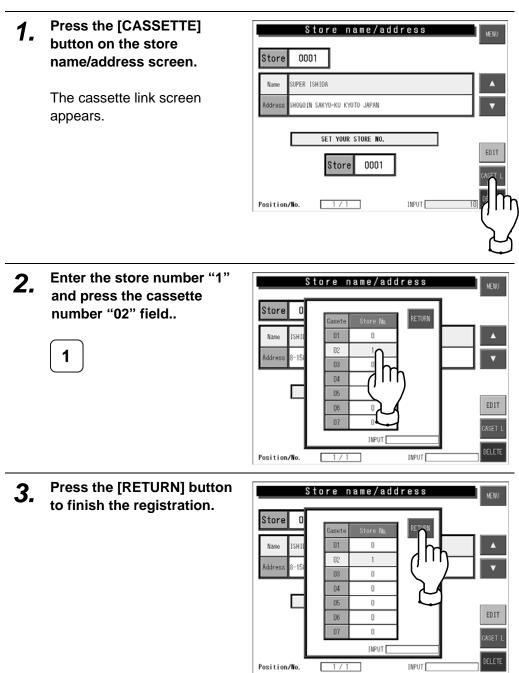

5.6.4 Your Store Registration

Example: Set the store number "2" of which data will be printed on labels.

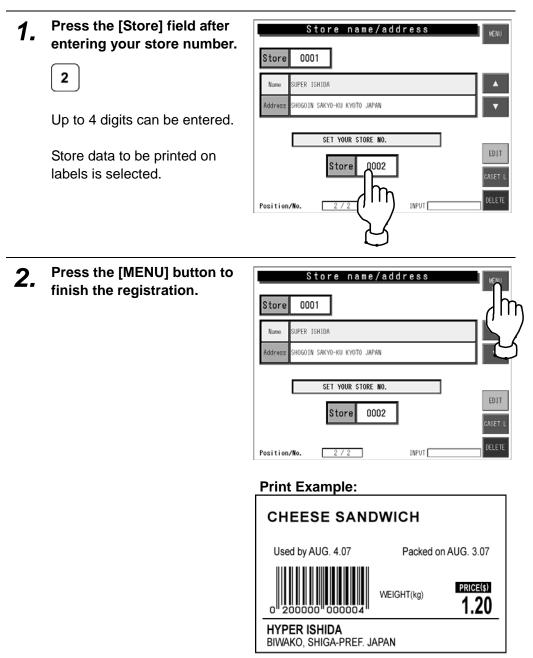


5.7 PRINT TITLE REGISTRATION

This section explains how to register the header and footer message to be printed on receipts.

5.7.1 Print Title Registration


1.	Press the [PRINT TITLE] button on the Program Menu. The print title screen appears.	PROGRAMMENU PLU program Origin Category PLU name Temperature M Category Ingredients Keep method POP Address Print title Comment Operator NU
2.	Press to select the header field.	PRINT TITLE RECEIPT PRINT TITLE HEADER FOOTER IOTAL LABEL PRINT TITLE PLU No. 000000 TITLE PLU NO. It prints out set up PLU no. If set up PLU no. is 0, last PLU name is printed. INPUT
3.	Press the [EDIT] button.	PRINT TITLE MENU
	The text edit screen appears.	RECEIPT PRINT TITLE HEADER FOOTER TOTAL LABEL PRINT TITLE SELECT TITLE OR PLU NO. TITLE PLU No. 0000000 TITLE PLU NO. It prints out set up PLU no. If set up PLU no. is 0, last PLU name is printed. INPUT

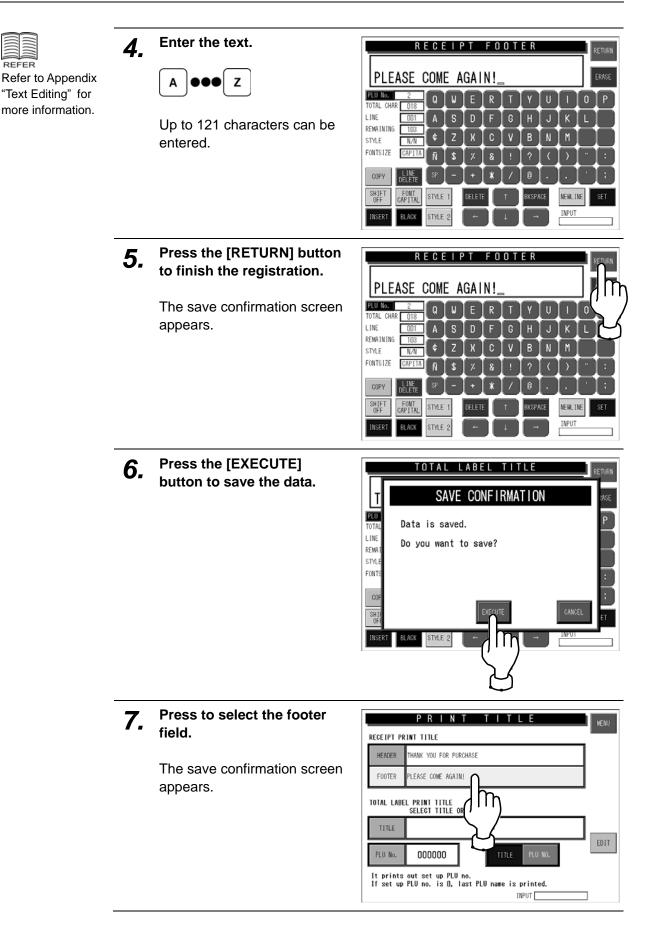

REFER

8.	Press the [EDIT] button.	
01	The text edit screen appears.	RECEIPT PRINT TITLE HEADER THANK YOU FOR PURCHASE FOOTER PLEASE COME AGAIN!
		TOTAL LABEL PRINT TITLE SELECT TITLE OR PLU NO. TITLE
		PLU No. 000000 TITLE PLU NO. It prints out set up PLU no. If set up PLU no. is 0, last PLU name is printed. INPUT


9 Repeat steps 4 through 6.

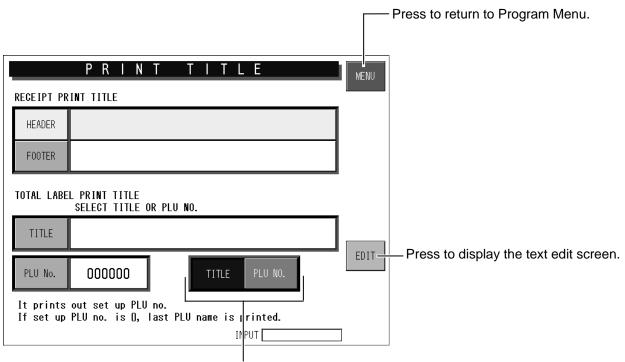



Press to select the print title to be printed on the total labels.

5.8 NUTRITION REGISTRATION

This section explains how to register the nutrition information to be printed on receipts.

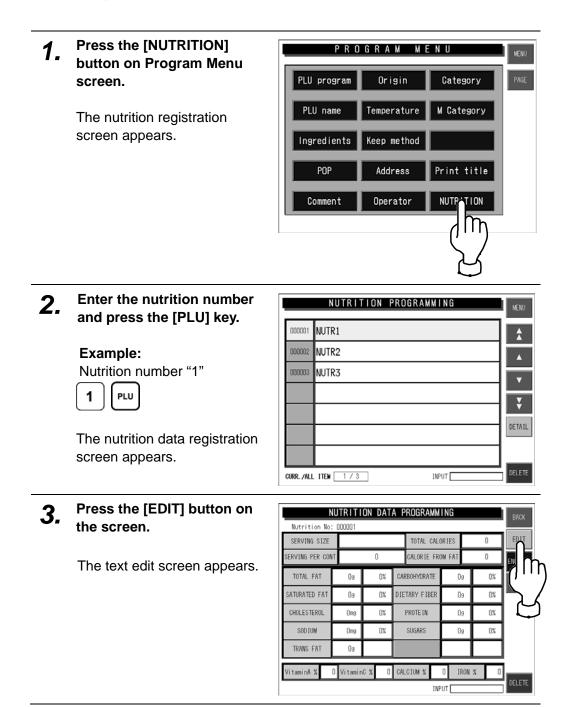

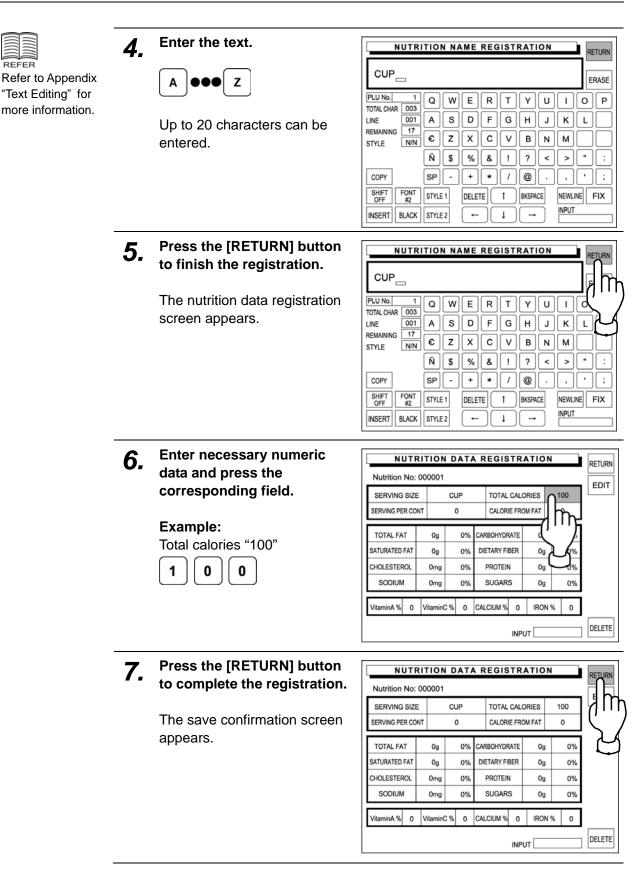


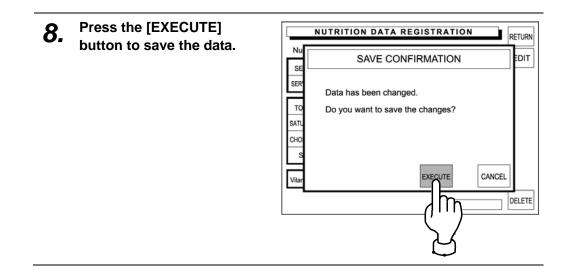

FREE MESSAGE 1 – 5 REGISTRATION 5.9

Any message such as cooking recipe, calorie, etc. can be freely registered.

	1.	Press the [FREE] button on Program Menu screen. The free message registration screen appears.	PROGRAM MENU FREE 1 FREE 4 FREE 5
	2.	Enter the message number and press the [PLU] key. Example:	
		Message No. "1" 1 PLU The free message registration screen appears.	CURR/ALL ITEM 1/1 INPUT DELETE
REFER Refer to Appendix "Text Editing" for more information.	3.	Enter the text. A ••• Z Up to 2046 characters can be entered. When the text editing is complete, press the [RETURN] button. RETURN	$\begin{tabular}{ c c c c c c c c c c c c c c c c c c c$
	4.	Press the [MENU] button to complete all registrations.	FREE MESSAGE REGISTRATION MENU 000001 MESSAGE 1 Image: Comparison of the second sec

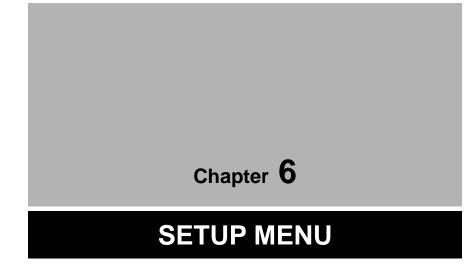


6.1 SETUP MENU ENTRY

Setup Menu is used to register data required for setting up the machine. Press the [MENU] button on the initial screen and press the [SET UP] button on the Main Menu to enter Setup Menu screen.


Note: When a password is programmed for accessing Setup Menu, enter the 6-digit password number using the keypad before pressing the [SET UP] button.


See section 6-4 "Password Setting".

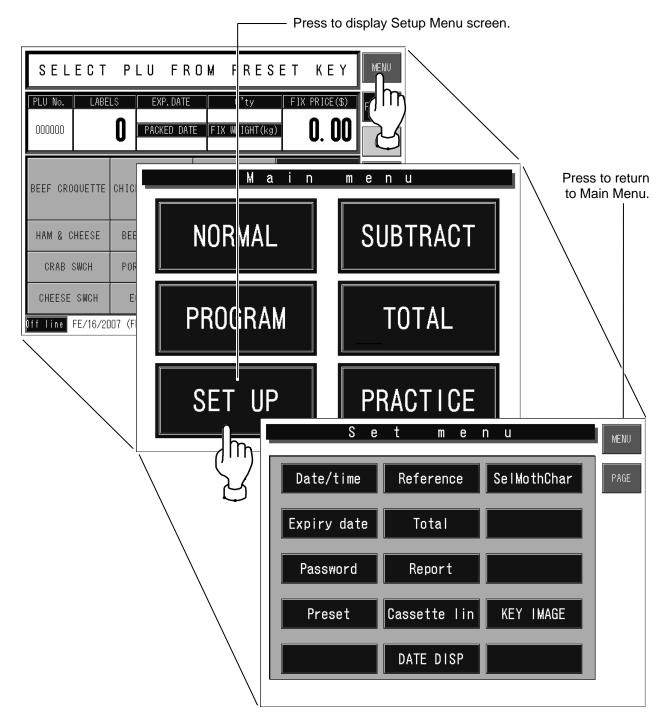

6.2 DATE / TIME SETTING


When setting the date and time, press the [DATE/TIME] button on the Setup Menu to display Date/Time setup screen.

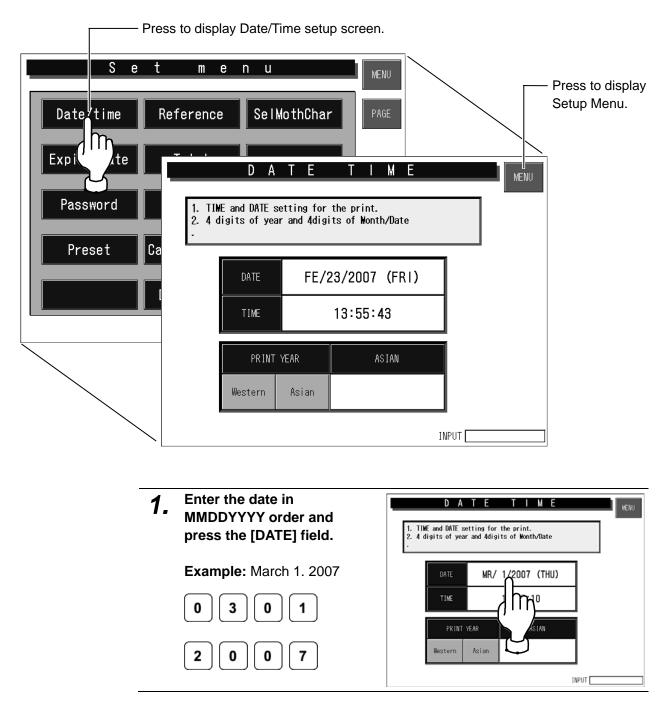

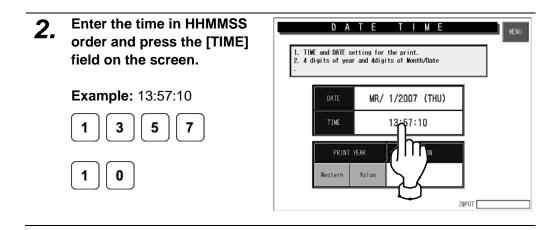

6.3 EXPIRY DATE SETTING

When setting the expiry date, press the [EXPIRY DATE] button on the Setup Menu to display Expiry Period setup screen.

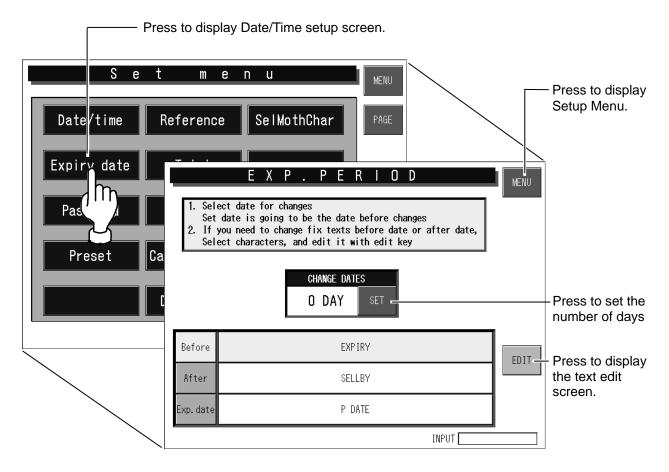


1. Enter the number of days to change the period text.

Example:

4 days to change the text.

4

3 days after the pack date will become the best-before date, and 4 days after the pack date will become the use-by date.

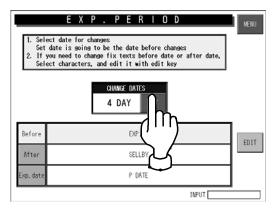


2. Check the character lines of "Before change", "After change" and "Pack date".

When editing the text, press the [EDIT] button after pressing either "Before change", "After change" or "Pack date" button.




The text edit screen appears.

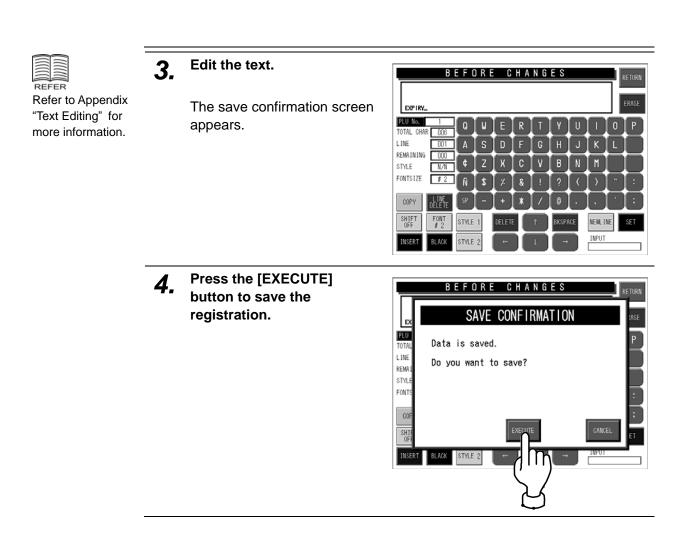



6.4 PASSWORD SETTING

When setting a password number for the selected modes, press the [PASSWORD] button on the Setup Menu to display Password Number setup screen.

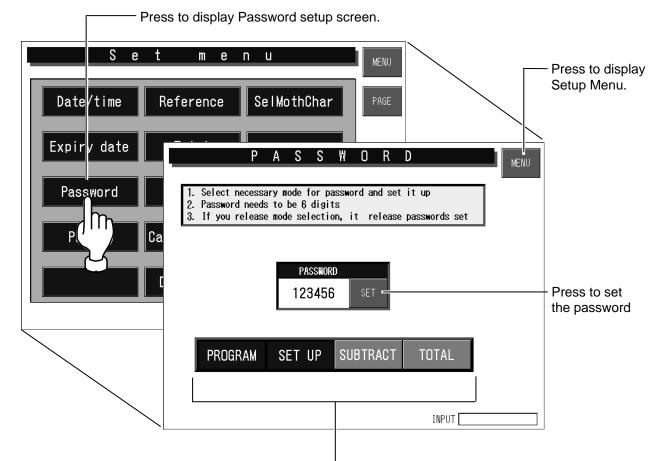


Press to select desired modes that require password number input.

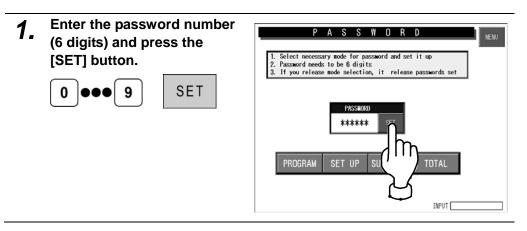

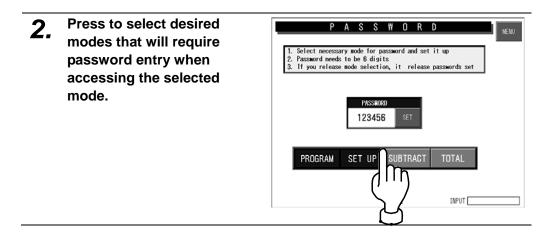

6.5 PRESET KEY SETTING

When setting preset keys, press the [PRESET] button on the Setup Menu to display the first Preset Key setup screen.

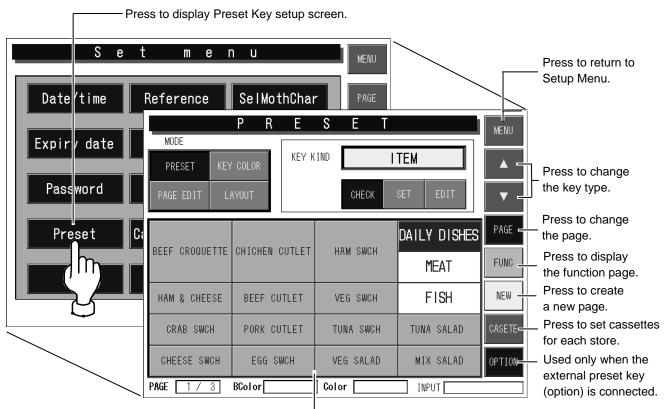


Preset page Press to allocate preset keys, or change the key color and size.

6.5.1 CREATING NEW PRESET PAGE

- 1. Press the [NEW] button to
 - create a new page.

The new page appears.

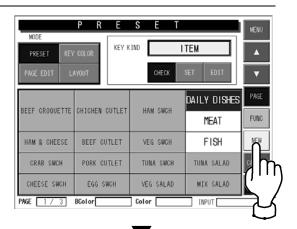

MODE	PR	E S	ΕT		MENU
PRESET	KEY COLOR	KEY KIND	ITEM		A
PAGE EDIT	LAYOUT		CHECK SET	EDIT	•
					PAGE
					FUNC
					NEW
					CASETE
PAGE 8 /	7 BColor	Col	or 📃	INPUT 🗌	

- **2.** Allocate preset keys on the new page.
 - To register preset keys, refer to 6.5.4 "Setting Preset Keys".
 - To color preset keys, refer to 6.5.5 "Coloring Preset Keys".
 - To copy a preset page, refer to 6.5.6 "Copying Preset Key Page".
 - To delete a preset page, refer to 6.5.7 "Deleting Preset Keys".
 - To change the size of preset keys, refer to 6.5.8 "Changing Preset Key Size".

6.5.2 CHANGING PRESET PAGE


1.	Select the page you want to change.	MODE PRESET KE	P R E		ITEM			
	Example: Change page 3.	PAGE EDIT L	AYOUT	CHECK	SET EDIT			
	3 PAGE	BEEF CROQUETTE	CHICHEN CUTLET	HAM SWCH	DAILY DISHE MEAT			
	Page 3 screen appears.	HAM & CHEESE	BEEF CUTLET	VEG SWCH	FISH			
		CRAB SWCH	PORK CUTLET	TUNA SWCH	TUNA SALAD			
		CHEESE SWCH	EGG SWCH	VEG SALAD	MIX SALAD			
		PAGE 1 / 3	BColor	Color	INPUT			
2.	Change the preset page.							
	■To register preset keys, refer to 6.5.4 "Setting Preset Keys".							
	■To color preset keys, refer to 6.5.5 "Coloring Preset Keys".							
	■To copy a preset page, refer to 6.5.6 "Copying Preset Key Page".							
	■To delete a preset page, refer t	to 6.5.7 "Del	eting Pres	set Keys'				
	■To change the size of preset ke Size".	eys, refer to	6.5.8 "Ch	anging P	Preset Key			

6.5.3 SETTING FUNCTION PAGE

It is convenient to register functions used in usual operations on the function page.

1. Press the [FUNC] button.

The function page appears.

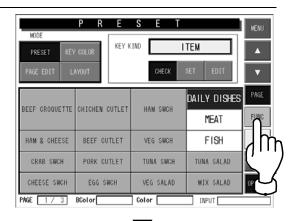

			•			
	P R	Е	S I	ΕT		MENU
MODE			_			
PRESET KEY	COLOR	KEY K	IND	Г	TEM	
	RYOUT		C	HECK	SET EDIT	•
- \$	- %	6	MAR	KDWN	DATE	
REGISTEROO	P O 000			gin DO	TOTAL	FUNC
Temp 00	Metho 00			ment O	VOID	
						ASETE
PAGE 0 / 0	BColor] Color		INPUT	

- **2.** Allocate preset keys on the page.
 - To register preset keys, refer to 6.5.4 "Setting Preset Keys".
 - To color preset keys, refer to 6.5.5 "Coloring Preset Keys".
 - To change the size of preset keys, refer to 6.5.8 "Changing Preset Key Size".

6.5.4 SETTING PRESET KEYS

This section explains how to allocate preset keys, edit the display names, and confirm the key types.

Allocating Preset Keys

				Pres	s to disp	ay the preset key list.
	P R ' color ayout	E Key K		TEM SET EDIT	MENU	Press to select the key type.
BEEF CROQUETTE	CHICHEN C	UTLET	HAM SWCH	DAILY DISHES MEAT	PAGE FUNC	Press to allocate
HAM & CHEESE	BEEF CUT	ſLET	VEG SWCH	FISH		the preset key.
CRAB SWCH	PORK CUT	FLET	TUNA SWCH	TUNA SALAD	CASETE	
CHEESE SWCH	EGG SW	CH	VEG SALAD	MIX SALAD	OPTION	
PAGE 1 / 3	BColor		Color	INPUT		

This field shows the current page and the total number of pages.

Confirm that the preset more is selected. If not selected, press to see the [PRESET] button. The preset mode is selected.	IENU A PAGE FUNC
·	

PAGE 1/3 BColor


2. Press to select the [SET] button.

Now, you can register preset keys.

MODE PRESET	KEY COLOR	KEY KIND	ITEM		
PRESET	LAYOUT		CHECK SET	EDIT	▼
			S	ĥ	PAGE FUNC
					CASSET

COLOR [

] INPUT[

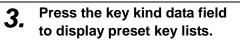

The first page of preset key list appears.

MODE	PR	ESE	T		MENU
PRESET PAGE EDIT	KEY COLOR	KEY KIND		™ T	▲ ▼
				Y	PAGE
					NEW
PAGE 1/	3 BColor		LOR		CASSETT




Press the [PAGE] button repeatedly to change pages until the desired preset key type is found on the list.

4. Press the [PAGE] button to change the list when necessary.

	PRES	E T MENU
ľ	Select one fro	m below F BACK
РА	ITEM	
	KEY IMAGE	TEN
	PRNT	HAY AGE
BEE	M PRICE	ORIGIN
	-\$	REPEAT
HP	-%	REVISE
	EXP. DATE	SETE
C	POS	TION
PAGE	POP	SUBTRACT

	PRES	E T MENU
ľ	Select one fro	m below PAGE BACK
PA	ADD	FREE 3
		FREE 4
		FREE 5
BEE	TOTAL	SEND
_	CALC	RECEIVE
HA	FORMAT	JOURNAL
	IMAGE	RESEND
C	FREE 1	GROUPE
PAGE	FREE 2	BOOK

		▼	
_	PRES	ET	MENU
	Select one fro	m below PAGE BACK	A
PA	BOOK	3	
	PCS	4	
	FEED	5	AGE
BEE	No.	6	UNC
	BARCODE	7	
HP	STORE No.	8	IEW
	0	9	SETE
C	1	00	TION
PAGE	2	DEL	

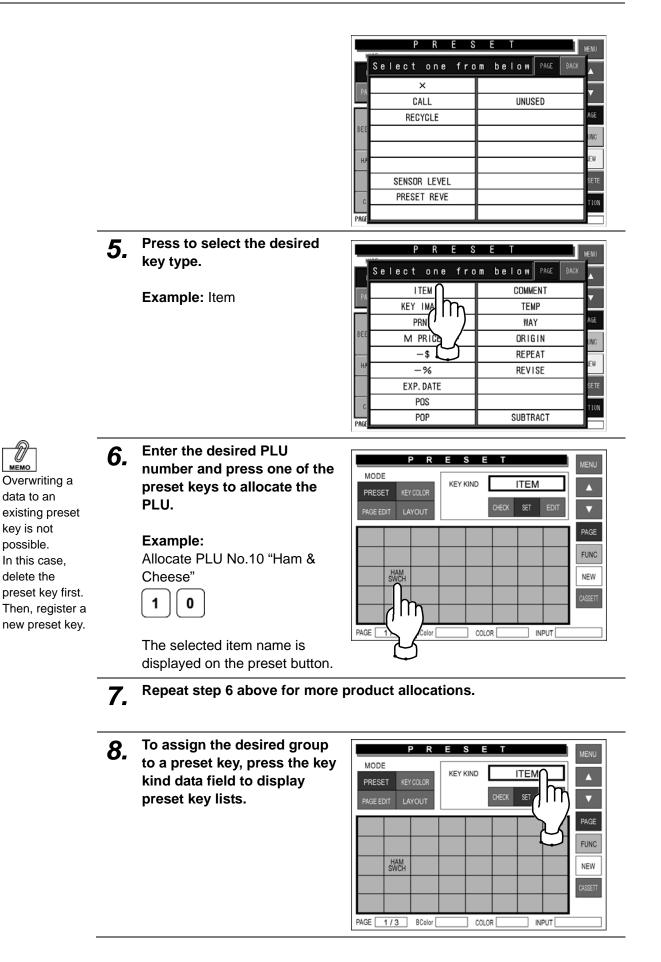

9. Press the [PAGE] button to change the list until you find the [GROUP] button on the list.

	Р	R	Е	S	Е	T		MENU
Ľ	Select	one	fr	om	b e	low	PAGE BACI	< A
PA	11	ΈM				COMME		
	KEY	IMAGE				TEM	h	
	PF	RNT		Г		₩A	L /	AGE
BEE	M	RICE		Γ		ORIGI	\mathcal{N}	UNC
	-	-\$		Г		REPEA		
HP	-	%		Т		REVIS	E	IEW
	EXP.	DATE		Г				SETE
6	Р	OS		Г				TION
PAGE	Р	OP				SUBTRA	CT	

Press to select the [GROUP] button.

_	P R E S	E T I I
_	PRES	
	Select one fro	m below PAGE BACK
PA	ADD	FREE 3
		FREE 4
		FREE 5 AGE
BEE	TOTAL	SEND
	CALC	RECEIVE
HA	FORMAT	JOURNAL
	IMAGE	RESEND
C	FREE 1	GROUPE
PAGE	FREE 2	BOC
1 marg		
		لم
		\sim

PRESET

KEY KIND

COLOR

GROUP

CHECK SET EDIT

INPUT [

Δ

PAGE

FUNC

NEW

MODE

PRESET

HAM SWCH

BColor [

PAGE 1/3

10. Enter the desired group number and press one of the preset keys to allocate the group.

Example: Allocate Group No.4 "Daily Dishes"

4

The selected group name is displayed on the preset button.

11. Repeat step 10 above for more group allocations.

6.5.5 **SETTING PRESET KEYS**

Editing Preset Key Names

_

You can change preset key names such as product names and group names. The registered name data will not be changed by this procedure.

	Г	— Press	to displa	y the prese	et key list.
P R E S E T MODE MODE KEY KIND CHECK CHECK PAGE EDIT LAYOUT CHECK CHECK BEEF CROQUETTE CHICHEN CUTLET HAM SWCH	DAILY		US typ	e to select e to be edi	
HAM & CHEESE BEEF	SET	N A M			TURN ASE
CRAB SWCH PORK CHEESE SWCH EGG PAGE 1 7 3 BColor REMAINING D48 COPY DELETE SP SHIFT FONT SHIFT FONT SHIFT BLACK STYLE		R T F G C V & ! ★ /	YU HJ BN ?(@. BKSPACE	IO KL M) " , " NEWLINE INPUT	
1. Confirm that the preset mode is selected. If not selected, press to select the [PRESET] button. The preset mode is selected.	PA LA BEEF TTE HAM & CHEESE CRAB SWCH CHEESE SWCH	P R E calor yout chichen cutlet beef cutlet Pork cutlet EGG swcH BCotor	СНЕСК	ROUPE SET EDIT DAILY DISHES LUNCH BOX FISH TUNA SALAD MIX SALAD INPUT	MENU A PAGE FUNC NEW CASETE OPTION

2. Press to select the [EDIT] button.

MODE	PRE	S E T		MENU
	COLOR KEY	KIND GR	OUPE	
PAGE EDIT L	AYOUT	CHECK	SET ED	▼
	OUTOURN OUT F		DAILY	PAGE
BEEF GROOUETTE	CHICHEN COTLE	F HAM SWCH	LUNCA.	FUNC
HAM & CHEESE	BEEF CUTLET	VEG SWCH	FIS	NEW
CRAB SWCH	PORK CUTLET	TUNA SWCH	TUNA SALAD	CASETE
CHEESE SWCH	EGG SWCH	VEG SALAD	MIX SALAD	OPTION
PAGE 1/3	BColor	Color	INPUT	

3. Confirm that the [GROUP] is selected in the key kind data field.

If not selected, press the key kind data field to display the preset key list and press to select the [GROUP] button.

	PRES	E T MENU
	Select one fro	m below Page BACK
РА	ITEM	
	KEY IMAGE	
	PRNT	HAY AGE
BEE	M PRICE	
	-\$	REPEAT
HA	-%	REVISE
	EXP. DATE	SETE
C	POS	TION
PAGE	POP	SUBTRACT


		•
	PRES	E T MENU
ľ	Select one fro	m below PAGE BACK
PA	ADD	FREE 3
		FREE 4
		FREE 5 AGE
BEE	TOTAL	SEND
	CALC	RECEIVE
ΗP	FORMAT	JOURNAL
	IMAGE	RESEND
C	FREE 1	GROUPE
PAGE	FREE 2	BOC
		\searrow /
		<pre>M</pre>

4. Press to select the group button of which name is to be changed.

Example: Lunch Box


The text edit screen appears.

MODE		P R	Е	S	Е	T			MENU
PRESET	KEY	COLOR	KEY K	IND		GR	OUPE		
PAGE EDIT	U	AYOUT			CHECK		SET	EDIT	•
BEEF CROQUE	TTE	CHICHEN	CUTLET	Н	AM SWCH			DISHES	FUNC
HAM & CHEE	SE	BEEF C	UTLET	V	EG SWCH	(F	m	NEW
CRAB SWC	H	PORK C	UTLET	TU	INA SWCI	Н	TUN		CASETE
CHEESE SW	CH	EGG S	SWCH	VE	G SALAI	D	MIX	\mathcal{A}	OPTION
PAGE 17	3	BColor] Colo	r 🗌		INPU		

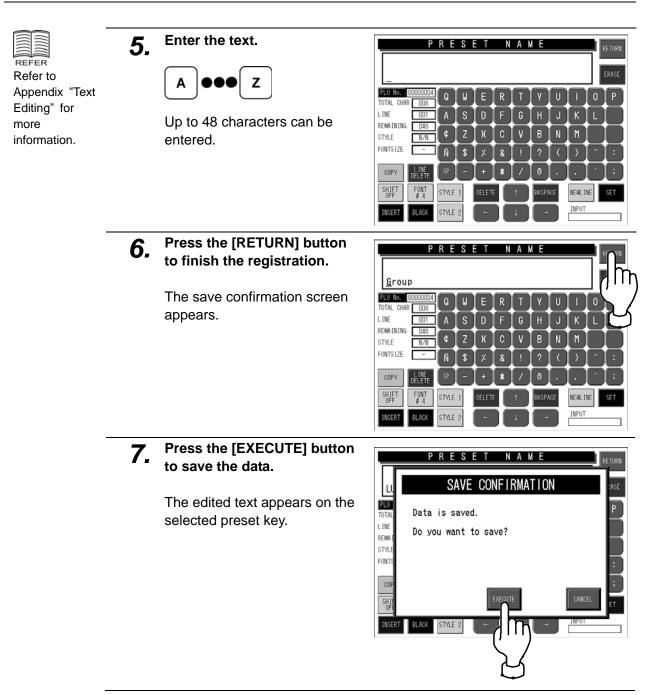

Checking Preset Key Type

You can check the type of preset key that is displayed.

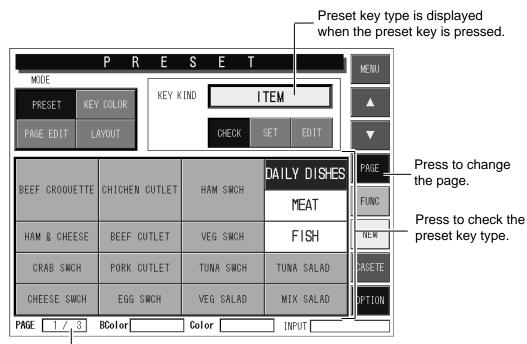

- This field shows the current page and the total number of pages.


1. Check that the preset mode is selected. If not selected, press to select the [PRESET] button.

The preset mode is selected. When the preset mode is selected, the [CHECK] button is also selected.


Е S Е MENU KEY KIND ITEM Δ CHECK 7 DAILY DISHES CHICHEN CUTLET HAM SWCH FUNC MEAT BEEF CUTLET VEG SWCH FISH NEW HAM & CHEESE CRAR SHCH PORK CUTLET TUNA SWCH TUNA SALAD MIX SALAD CHEESE SWCH EGG SWCH VEG SALAD OPTION PAGE 1/3 BColor Color INPUT

2. Press the desired preset key to check its key type.

"GROUP (01)" appears in the key kind data field.

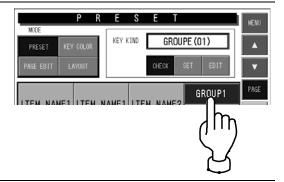

6.5.5 COLORING PRESET KEYS

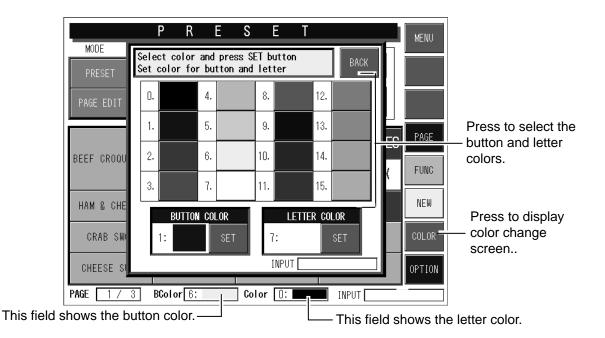

1. Press the [KEY COLOR] button to select the color change mode.


The message "COLOR" appears in the key kind display field.

MODE PRESET KEY PAGE EDIT L		S E T	DLOR	MENU
BEEF CROQUETTE		HAM SWCH	DAILY DISHES LUNCH BOX	PAGE FUNC
HAM & CHEESE	BEEF CUTLET	VEG SWCH	FISH	NEW
CRAB SWCH	PORK CUTLET	TUNA SWCH	TUNA SALAD	COLOR
CHEESE SWCH	EGG SWCH	VEG SALAD	MIX SALAD	OPTION
PAGE 1/3	BColor 6:	Color 🛛:	INPUT	

2. Press the [COLOR] button.

The color list appears.

	PRE	S E T		MENU
	/ COLOR	CC	DLOR	
	CHICHEN CUTLET	HAM SWCH	DAILY DISHES	PAGE
HAM & CHEESE	BEEF CUTLET	VEG SWCH	LUNCH BOX	FUNC
CRAB SWCH	PORK CUTLET	TUNA SWCH	TUNA SALAD	
CHEESE SWCH	EGG SWCH	VEG SALAD	MIX SALAD	
PAGE 1/3	BColor 6:	Color ():	INPUT	[_] \

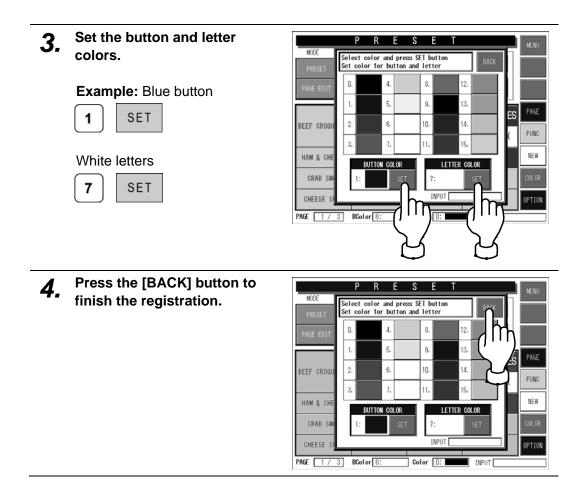

6.5.6 COPYING PRESET KEY PAGE


MODE	PR	E S	E T	MENU	
PRESET PAGE EDIT	KEY COLOR LAYOUT	PROCESS	PAGE COPY		Press to select the page editing process.
				PAGE -	Press to change the page.
				COPY	Press to copy the preset page.
				CASETE OPTION	
PAGE 4 /	3 BColor	Colo	or INPUT		


1. Check that the preset mode is selected and press the [NEW] button.

A new page is created on the screen.

MODE	PRE	SET		MENU
	COLOR KEY I		TEM EDIT	▲ ▼
			DAILY DISHES	PAGE
BEEF CROQUETTE	CHICHEN CUTLET	HAM SWCH	MEAT	FUNC
HAM & CHEESE	BEEF CUTLET	VEG SWCH	FISH	Ln
CRAB SWCH	PORK CUTLET	TUNA SWCH	TUNA SALAD	
CHEESE SWCH	EGG SWCH	VEG SALAD	MIX SALAD	K /
PAGE 1/3	BColor	Color	INPUT	-L

- 2. Press the [PAGE EDIT] button to select the page edit mode.
- 3. Select the message "PAGE COPY" in the process field by using the [▲] and [▼] buttons.

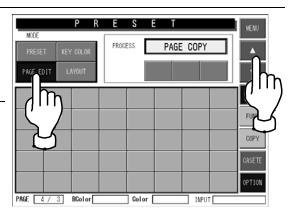

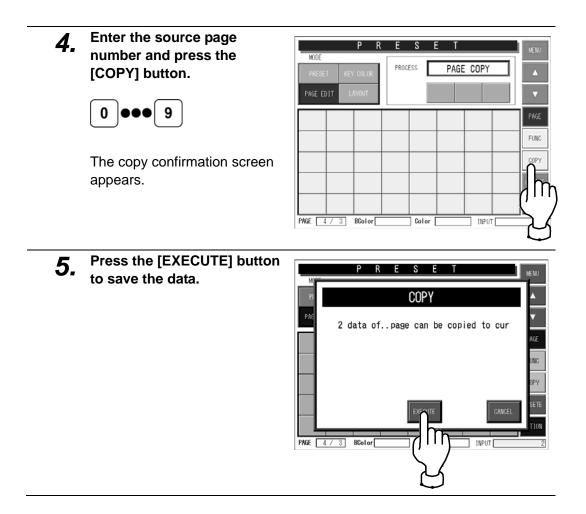


6.5.7 DELETING PRESET PAGE

	PRE	SET	E DEL	MENU	Press to select the page editing process.
BEEF CROQUETTE	CHICHEN CUTLET	HAM SWCH	DAILY DISHES LUNCH BOX	PAGE -	Press to change the page.
HAM & CHEESE	BEEF CUTLET	VEG SWCH	FISH	DEL -	Press to delete the preset page.
CRAB SWCH	PORK CUTLET	TUNA SWCH	TUNA SALAD	CASETE	
CHEESE SWCH	EGG SWCH	VEG SALAD	MIX SALAD	OPTION	
PAGE 1 / 3	BColor	Color	INPUT		

- Press the [PAGE EDIT] button to select the page edit mode.
- Select the message "PAGE DEL" in the process field by using the [▲] and [▼] buttons.

3.

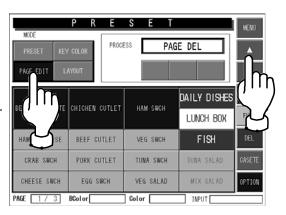

Select the desired page you P R E S E want to delete by using the MODE [PAGE] buttons. PROCESS PAGE DEL PAGE EDIT DAILY DISHES LUNCH BOX BEEF CUTLET FISH HAM & CHEESE VEG SWCH CRAB SWCH PORK CUTLET TUNA SWCH TUNA SALAD

CHEESE SWCH

PAGE 1 / 3 BColor

EGG SWCH


V

MIX SALAD

] INPUT

VEG SALAD

Color

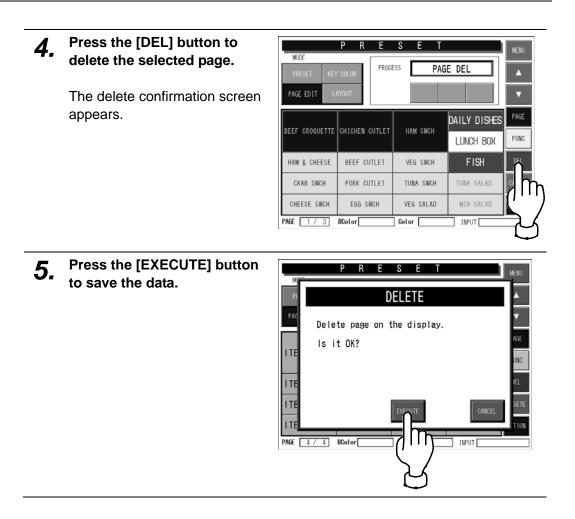


6.5.8 CHANGING PRESET KEY SIZE

NODE	P R E	S E T		MENU	
MODE PRESET KEY	' COLOR	CHAN	GE SIZE		
PAGE EDIT L	AYOUT SI	ZEL	M S		Press to select the key size.
			DAILY DISHES	PAGE	
BEEF CROQUETTE	CHICHEN CUILET	HAM SWCH	LUNCH BOX	FUNC	Drace to change the
HAM & CHEESE	BEEF CUTLET	VEG SWCH	FISH	INEW	Press to change the preset key size.
CRAB SWCH	PORK CUTLET	TUNA SWCH	TUNA SALAD	CASETE	
CHEESE SWCH	EGG SWCH	VEG SALAD	MIX SALAD	PTION	
PAGE 1 / 3	BColor	Color	INPUT	_	

1. Press the [LAYOUT] button to select the layout mode and press to select the desired key size.

The message "CHANGE SIZE" appears in the process field.

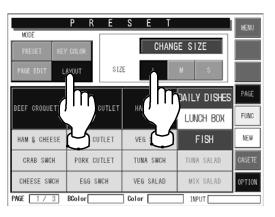

Press the desired preset key 2. R MOD to change the size. CHANGE SIZE SIZE DAILY DISHES BEEF CROQUETTE CHICHEN CUTLET HAM SWCH FUNC LUNCH BOX FISH NEW HAM & CHEESE BEEF CUTLET CRAB SWCH PORK CUTLET TUNA SALAD m CHEESE SWCH EGG SWCH MIX SALAD OPTION

PAGE 1 / 3 BColor

INPUT [

6.5.9 LINKING PRESET PAGE WITH CASSETTE

1. Press the [CASSETTE] button.

The cassette link preset setup screen appears.


	PRE	S E T		MENU
	' COLOR AYOUT \$12		GE SIZE	
BEEF CROQUETTE	CHICHEN CUTLET	HAM SWCH	DAILY DISHES LUNCH BOX	PAGE
HAM & CHEESE	BEEF CUTLET	VEG_SWC	FISH	NEW
CRAB SWCH	PORK CUTLET	TUNA SW CH	TUNA SALAD	CASETE
CHEESE SWCH	EGG SWCH	VEG SALAD	MIX SALAD	
PAGE 1 / 3	BColor	Color	INPUT	<u> </u>
				िरि

2. Enter the desired preset page number and press the cassette number field on the screen.


Example:

2

Set the second preset page to link with the cassette number "0 1".

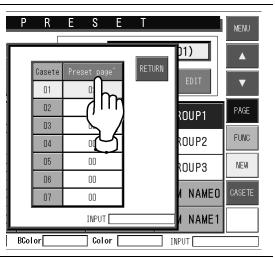


3. Press the [RETURN] button to save the data.

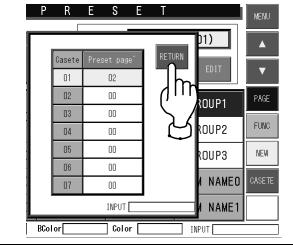

6.6 REFERENCE DATA SETTING

When setting various reference data, press the [REFERENCE] button on the Setup Menu to display Reference Data setup screen.

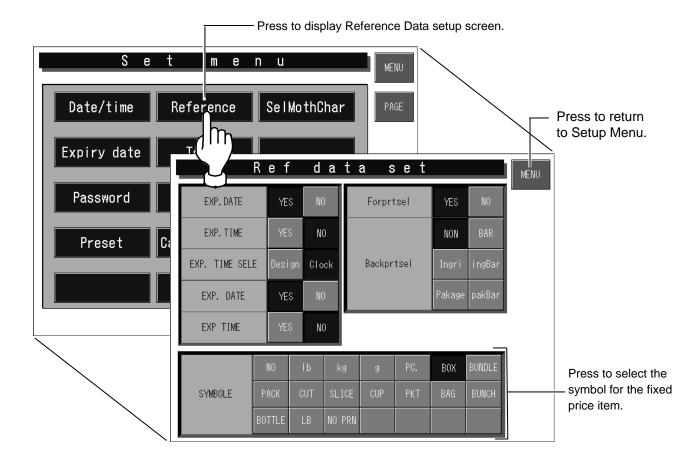


Setting Method for Each Item

Item	Operation		
Pack date print	YES Pack date is printed on labels.		
Fack date print	NO Pack date is not printed on labels.		
Pack time print	YES Pack time is printed on labels.		
	NO Pack time is not printed on labels.		
Pack time select	Design Designated time is used.		
Fack little select	Clock Internal clock is used.		
Evoiny data print	YES Expiry date is printed on labels.		
Expiry date print	NO Expiry date is not printed on labels.		
Expiry time print	YES Expiry time is printed on labels.		
Expiry time print	NO Expiry time is not printed on labels.		
Fore printer select	YES Top labels are printed.		
Pore primer select	NO Top labels are not printed.		
	NON Bottom labels are not printed.		
	BAR Bottom labels are printed with barcodes.		
Back printer select	Ingre Bottom labels are printed with ingredient data.		
	IngBar Bottom labels are printed with ingredient data and barcodes.		
	Package Bottom labels are printed with package information		
	PakBar Prints barcodes and package information on bottom labels.		
Symbol select	Select the symbol for the fixed price product.		

6.7 TOTAL SETTING

When setting various data for totals, press the [TOTAL] button on the Setup Menu to display Total Setup screen.

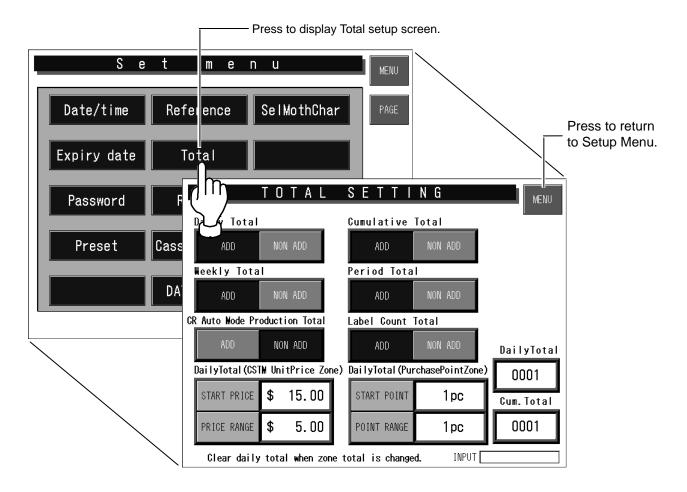


Setting Method for Each Item

ltem	Operation		
Deily total	ADD	Production results are added to this total.	
Daily total	NON ADD	Production results are not added to this total.	
	ADD	Production results are added to this total I.	
Cumulative total	NON ADD	Production results are not added to this total I.	
	ADD	Production results are added to this total.	
Weekly total	NON ADD	Production results are not added to this total.	
Period total	ADD	Production results are added to this total.	
	NON ADD	Production results are not added to this total.	

Item	Operation		
CR auto mode	ADD	Production result in continuous labeling is added to this total.	
production total	NON ADD	Production result in continuous labeling is not added to this total.	
Label count total	ADD	The number of issued labels is added to this total.	
	NON ADD	The number of issued labels is not added to this total.	
		Up to 6 digits can be entered. Example: Start price \$5.00	
	START PRICE	5 00 START PRICE	
Daily total (CSTM		NOTE Make sure to perform daily total clear immediately after changing the start time.	
unit price zone)		Up to 6 digits can be entered. Example: Price range \$3.00	
	PRICE RANGE	3 00 START PRICE	
		NOTE Make sure to perform daily total clear immediately after changing the price range.	
		Up to 2 digits can be entered. Example: Start point "1"	
	START POINT	1 START POINT	
Daily total		NOTE Make sure to perform daily total clear immediately after changing the start point.	
(Purchase point zone)		Up to 6 digits can be entered. Example: Point range "2"	
	POINT RANGE	2 POINT RANGE	
		NOTE Make sure to perform daily total clear immediately after changing the point range.	
Daily total	Daily total counter This counter is increased by one whenever total data is cleared after the issue of daily preset report.		
Cumulative total	Ve total Cumulative total counter This counter is increased by one whenever total data is cleared after the issue of cumulative preset report.		

6.8 PRESET REPORT SETTING

When selecting preset reports, press the [REPORT] button on the Setup Menu to display Preset Report setup screen.

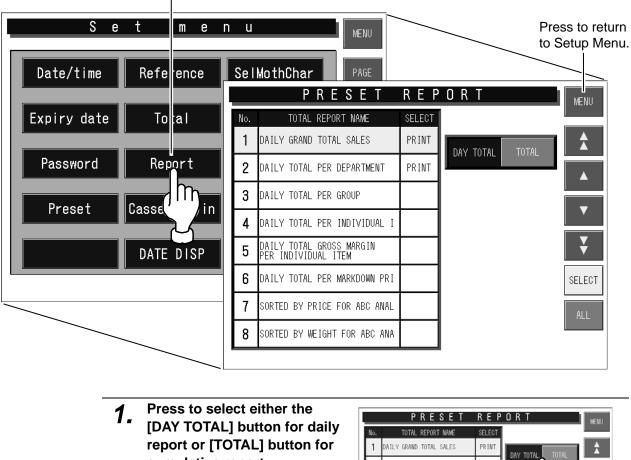

Press to display Preset Report setting screen.

 [DAY TOTAL] button for daily report or [TOTAL] button for cumulative report.
 No.
 TOTAL REPORT NAME
 SELECT

 1
 DAILY GRAND TOTAL SALES
 PRINT

 2
 DAILY TOTAL PER DEPARTMENT
 PRINT

 3
 DAILY TOTAL PER GROUP
 4

 4
 DAILY TOTAL PER INDIVIDUAL 1
 5

 5
 DAILY TOTAL GROSS MARGIN
 FER INDIVIDUAL 1

 6
 DAILY TOTAL PER MARKDOWN PRI
 7

 7
 SORTED BY PRICE FOR ABC ANAL

8

SORTED BY WEIGHT FOR ABC ANA

Select totals to be linked by 2. PRESET REPORT using the $[\bigstar]$ $[\blacktriangledown]$ $[\blacktriangle]$ TOTAL REPORT NAME buttons. A 1 DATEX GRAND TOTAL SALES PRINT PRINT 2 DATLY TOTAL PER DEPARTMENT 3 AILY TOTAL PER GROUP 4 DAILY TOTAL PER INDIVIDUAL 1 DAILY TOTAL GROSS MARGIN PER INDIVIDUAL ITEM 5 6 DAILY TOTAL PER MARKDOWN PRI 7 SORTED BY PRICE FOR ABC ANAL 8 SORTED BY WEIGHT FOR ABC ANA

1 î î

¥

SELECT




3. Press the [SELECT] button to select totals to be linked.

The message "PRINT" is displayed in the select column.

6.9 CASSETTE LINK SETTING

When setting the cassette link data, press the [CASSETTE LINK] button on the Setup Menu to display Cassette Link setup screen.

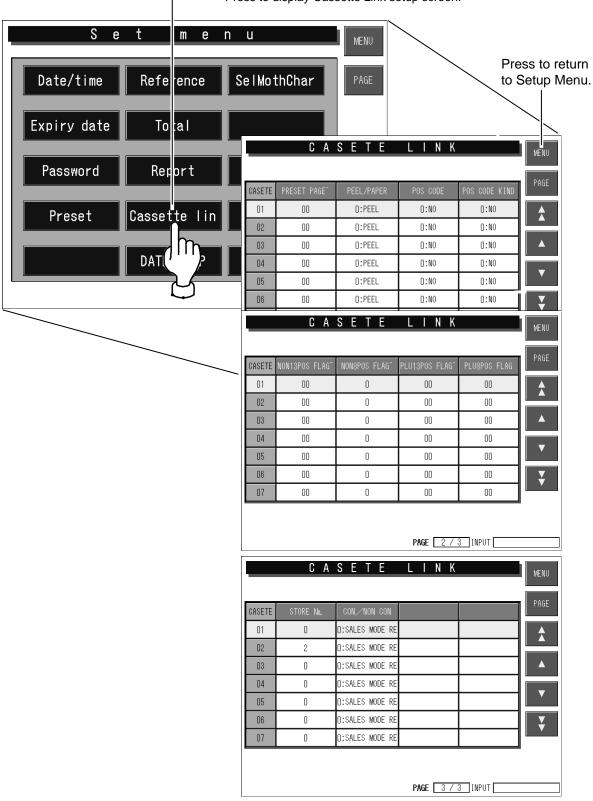

- Press to display Cassette Link setup screen.

Setting Method for Each Item

Item	Example	Operation
PRESET PAGE Preset page	Set the second page to the cassette number "1".	Up to page 99 can be entered. 2 PRESET PAGE
		Press this button to display the selection screen.
PEEL/PAPER Peel/Paper	Select the labeling method.	PEEL When issuing and peeling labels
		PAPER When issuing labels with backing paper.
		Press this button to display the selection screen.
	Select the POS code system.	NON POS code system is not set.
		NON PLU 13 Non PLU 13 system is set.
POS CODE POS code		NON PLU 8 Non PLU 8 system is set.
		PLU 13 PLU 13 system is set.
		PLU 8 system is set.

Item	Example	Operation
		Press this button to display the selection screen.
	Select the POS code type.	No SET UP POS code type is not set.
		STD 5 dig POS code type is not set.
POS CODE KIND POS code kind		C/P6dig Standard 5-digit is set.
		F/G6dig 6-digit including check-price is set.
		C/P Price 5 dig 6-digit including F/G is set.
		Code 5P6 6-digit code and 5-digit price are set.
NON 13 POS FLAG	Set the Nen DLLL 12 DOS	Up to 99 can be entered.
Non-PLU 13 POS flag	Set the Non-PLU 13 POS flag "2".	2 NON 13 POS FLAG
NON 8 POSFLAG	Set the Non-PLU 8 POS	Up to 9 can be entered.
Non-PLU 8 POS flag	flag "2".	2 NON 8 POSFLAG
PLU 13 POSFLAG	Set the PLU 13 POS flag	Up to 99 can be entered.
PLU 13 POS flag	"49".	4 9 PLU 13 POSFLAG
PLU 8 POS FLAG	Set the PLU 8 POS flag	Up to 9 can be entered.
PLU 8 POS flag	"4".	4 PLU8POSFLAG
STORE No.		Up to 9999 can be entered.
Store number	Set the store number "5".	5 STORE No.
		Press this button to display the selection screen.
CON/NON CON	Select to issue either multiple labels (continual)	SALES MODE REF Sales mode setting is referred to.
Continual/ Non-continual	or one label (non-continual)	No CON Label are not continuously issued.
		CON Labels are continuously issued.



44 SANNO-CHO, SHOGOIN, SAKYO-KU KYOTO, 606-8392 JAPAN PHONE: 81-75-771-4141 FACSIMILE: 81-75-751-1634 URL: http://www.ishidajapan.com Design and specifications are subject to change without notice.