

Operator Card - 482-AG Livestock Scale Indicator Quick Start

Refer to the 482-AG Technical Manual (PN 167281) for more detailed instructions.

Manuals are available on our web site at www.ricelake.com/manuals


This quick start guide is for use by service technicians and scale users of the 482-AG livestock scale indicator.




- Failure to heed may result in serious injury or death.*
- Do not allow minors/inexperienced people to operate.*
- Do not operate without all shields and guards in place.*
- Do not use for purposes other than weight taking.*
- Do not use any load bearing component that is worn beyond 5% of the original dimension.*
- Do not use this product if any components are cracked.*
- Do not exceed the rated load limit of the unit.*
- Do not make alterations or modifications to the unit.*
- Do not remove or obscure warning labels.*
- Keep body and loose clothing away from moving parts.*



Electric shock hazard. Only qualified service personnel should operate the equipment. Refer all repairs and modifications to qualified service technicians.

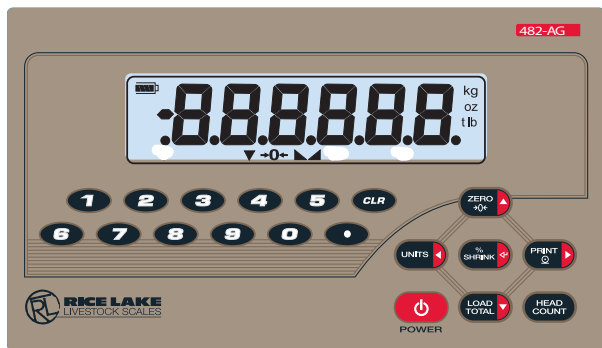



Power the Scale

Press  to turn the indicator on or off.



Enter Shrink

The shrink value is applied to the gross weight and is limited to 0.0-99.0 percent.


1. Enter a shrink value, using the numeric keypad.
2. Press .


A shrink factor can be entered at any time, but only the last shrink factor entered prior to pressing  will be applied to all of the groups making up the load

 
Head Count

1. Load the first group of animals onto the scale.
2. Enter the head count, using the numeric keypad.
3. Press . The group information is sent to the printer.
4. Press  if a reprint of the individual group ticket is required.
5. Repeat Step 2 through Step 4 for each group included in the load.

Load Total

Press . When all groups for the load have been weighed, the load ticket data is sent to the printer, there is no reprint feature. A new load can now be started.

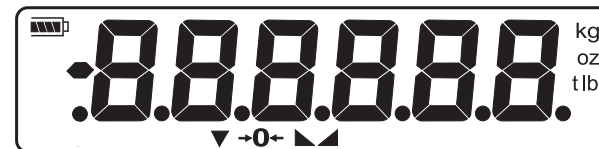

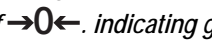When the first group of a load is complete, an arrow displays, the left of , indicating groups are being weighed for a load.



If the unit enters the power standby mode and is powered back on, it indicates the unit is still collecting load data and the previous group data total has been saved.