Selection for Unit Price Auto Clear

(Serial number B01060 and higher)



Technical Bulletins can be viewed or downloaded from the Rice Lake Weighing Systems retail distributor site at www.ricelake.com/retail

1. Press and hold CHANGE while turning on the scale.

Do not release CHANGE until the scale version displays.


2. Press and hold zero until *SEtUP* displays.

3. Press **3** to enter *USUAL* Mode.

4. Press **6**, the weight display shows *good*.

5. The setting has changed. Turn off the scale.



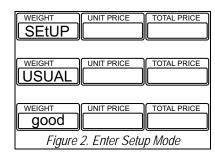

Note

To avoid unforeseen consequences make sure to change the digits based on the setting instruction.



© Rice Lake Weighing Systems Specifications subject to change without notice. Rice Lake Weighing Systems is an ISO 9001 registered company.

230 W. Coleman St. • Rice Lake, WI 54868 • USA
U.S. 800-472-6703 • Canada/Mexico 800-321-6703 • International 715-234-9171 • Europe +31 (0)26 472 1319