

BENCH SCALES

# BenchPro™ BP-P, BP-S, BP-R

Caster Model



BenchPro BP-P



BenchPro BP-S



BenchPro BP-R

## Part Number/Price

Part#	Description	Price
174782	Power supply	Consult
179191	Primary operator display	Consult
174786	USB cable	Consult
197759	10 ft cable, RS232 DB9M to DB9F	Consult
<b>BP-S</b>		
196554	Main PCB, BP-S/BP-SB/BP-SR Shipping	Consult
174879	Model BP 1214-75S	Consult
179680	Load cell for PN 174879	Consult
179185	Scale foot for PN 174879	Consult
182993	Model BP 1216-75S	Consult
91731	Load cell for 182993	Consult
182391	Model BP 1818-50S	Consult
91684	Load cell for 182391	Consult
182378	Model BP 1818-75S	Consult
91686	Load cell for PN 182378	Consult
182382	Model BP 1818-150S	Consult
182395	Model BP 2020-150S	Consult
182399	Model BP 2424-150S	Consult
91688	Load cell for PN 182382, 182395, 182399	Consult
19141	Scale foot for PN 182993, 182391, 182378, 182382, 182395, 182399	Consult
182414	PCB with shipping software	Consult
214462	Screw, Seal, SS-2320 (12 x 14 in scale only)	Consult
<b>BP-SB</b>		
196554	Main PCB, BP-S/BP-SB/BP-SR Shipping	Consult
182995	Model BP 1216-75S	Consult
91731	Load cell for 182995	Consult
182393	Model BP 1818-50S	Consult
91684	Load cell for 182393	Consult
182380	Model BP 1818-75S	Consult
91686	Load cell for PN 182380	Consult
182384	Model BP 1818-150S	Consult
182397	Model BP 2020-150S	Consult
182401	Model BP 2424-150S	Consult
91688	Load cell for PN 182384, 182397, 182401	Consult
19141	Foot, Bench Scale 3/8-16NC	Consult
182414	PCB with shipping software	Consult
<b>BP-SR</b>		
196554	Main PCB, BP-S/BP-SB/BP-SR Shipping	Consult
182996	Model BP 1216-75S	Consult
91731	Load cell for 182996	Consult
182394	Model BP 1818-50S	Consult
91684	Load cell for 182394	Consult
182381	Model BP 1818-75S	Consult
91686	Load cell for PN 182381	Consult
182386	Model BP 1818-150S	Consult
182398	Model BP 2020-150S	Consult
182402	Model BP 2424-150S	Consult
91688	Load cell for PN 182386, 182398, 182402	Consult
19141	Foot, Bench Scale 3/8-16NC	Consult
182414	PCB with shipping software	Consult
<b>BP-P</b>		
179648	Main PCB, BP-P Postal	Consult
187832	Model BP-P 1214-35 kg capacity triple range	Consult
195741	Model BP-P 1214-35 kg capacity triple interval	Consult
192361	Model BP-P 1214-70 lb capacity dual range	Consult
195742	Model BP-P 1214-70 lb capacity dual interval	Consult
187833	Load cell	Consult
179185	Scale foot	Consult
182416	PCB with postal software	Consult
214462	Screw, Seal, SS-2320	Consult
<b>BP-R</b>		
179651	Main PCB, BP-R Retail	Consult