Rice Lake Mechanical Chair Scale Unpacking Instructions

PN 172098, 172099

Please use the following instructions to unpack the Rice Lake Mechanical Chair Scale. Equipment needed to unpack the scale includes:

- Wire or box cutter to cut the strapping material
- Phillips head screw driver

There are various steps involved with removing the packaging material.

- 1. Visually inspect the packaging for any damage. If the packaging has been damaged in shipment, notify Rice Lake Weighing Systems and the shipper immediately.
- 2. Once the cardboard cover has been removed, take out the cardboard inserts (#18 and #19 shown below), located at the two sides of the top cover.
- 3. Remove the arm rests (#17 second armrest is located on opposite side of carton).
- 4. Cut the strapping material which holds the chair in place (#16).
- 5. Remove the bottom base cardboard packaging (#14).







- 6. Remove screws holding the four supporting upright iron frames (#5) and the connecting bottom metal frame (#7).
- 7. Unscrew and remove the upper iron support frame (#2) and lift off the four connecting iron supports (#5) that hold it together.
- 8. Remove the upper cover strip (#3).



- 9. Remove the footrest (#6).
- 10. Remove the upper cover packaging (#4).
- 11. All together, tilt the inside cardboard (#13), transport handle (#12) and molded chair (#8) upward. Then, remove from the assembly.



- 12. Remove the molded chair (#8) and then remove the transport handle (#12).
- 13. Remove the scale platform (#9) and the scale frame (#10) at the same time.
- 14. Remove the pillar (#13).
- 15. Retain the packaging material.



© Rice Lake Weighing Systems Specifications subject to change without notice. Rice Lake Weighing Systems is an ISO 9001 registered company. 230 W. Coleman St. • Rice Lake, WI 54868 • USA U.S. 800-472-6703 • Canada/Mexico 800-321-6703 • International 715-234-9171 • Europe +31 (0)26 472 1319

www.ricelake.com www.ricelake.mx www.ricelake.eu www.ricelake.co.in m.ricelake.com