

ISHIDA WM-Nano Film Feeder Belt Replacement



Overview


This manual covers disassembly of the WM-Nano Table Top Automatic Wrapper for the purpose of replacing the Film Feeder belts.

Tools


- Phillips screwdrivers: extended shaft & stubby
- Small flat blade screwdriver
- 7mm wrench / nut driver
- 8mm wrench / nut driver

Procedure


- 1. Shut off the main power switch and disconnect the power cord from the outlet.
- 2. Remove the film roll.
- 3. Disconnect the Uni-7 cables:
 - Scale cable → left side of Uni-7
 - Power cord → under the Uni-7
 - Wrapper comms → under the Uni-7
- 4. Remove the Uni-7.
- 5. Remove the remaining cables from the cable clamps.
- 6. Remove the left, front cover (three screws). See Figure 1.

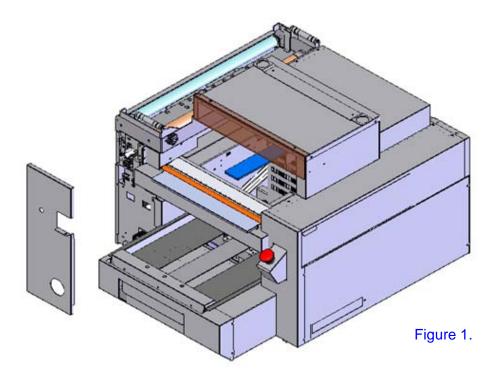


7. Remove the right, front cover (three screws). See Figure 2.

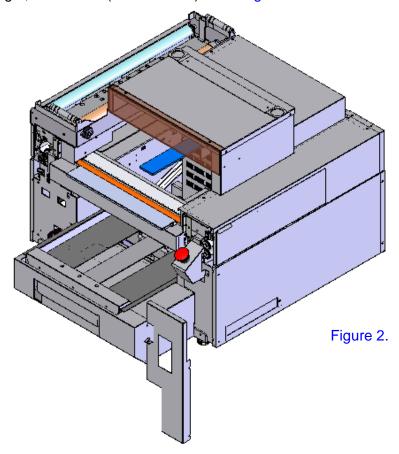


8. Remove the front, center cover -- below the exit heater roller (loosen four screws). See Figure 3.

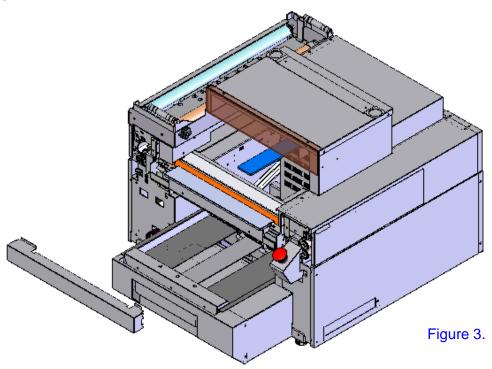


9. Remove the right side cover (loosen four screws). See Figure 4.

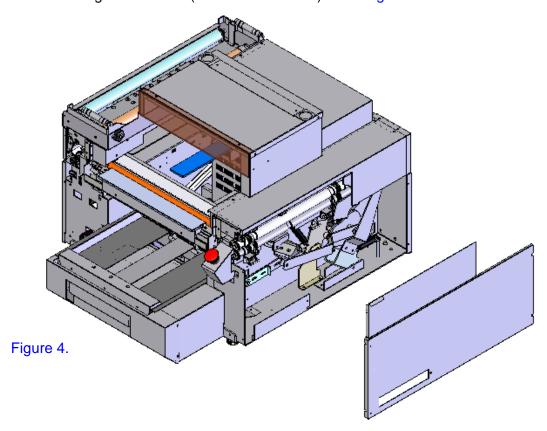


10. Remove the left side cover (loosen four screws). See Figure 5.

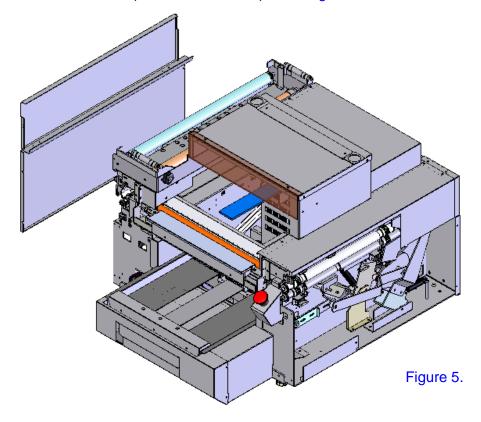


11. Remove the rear, upper cover (seven screws). See Figure 6.

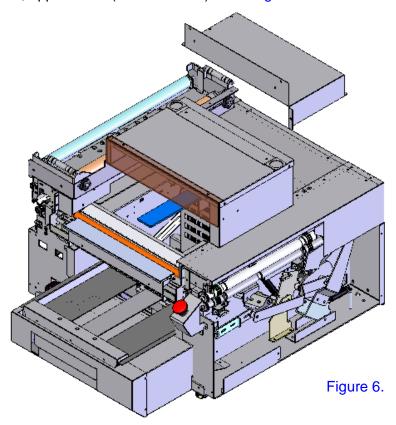


12. Remove the second rear, upper cover (four screws). See Figure 7.

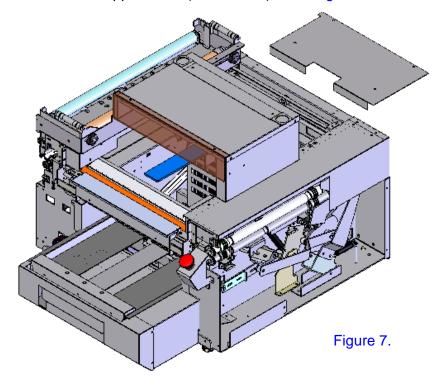


13. Remove the upper, right cover (five screws). See Figure 8.

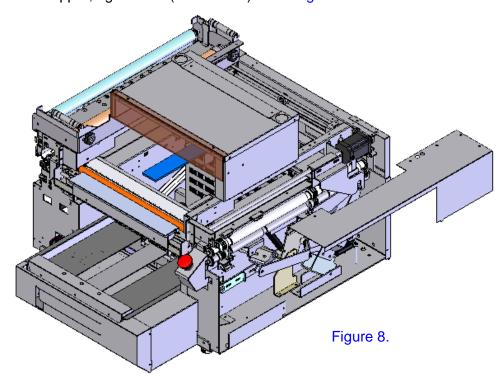

14. Remove the three rear covers (six screws). See Figure 9.

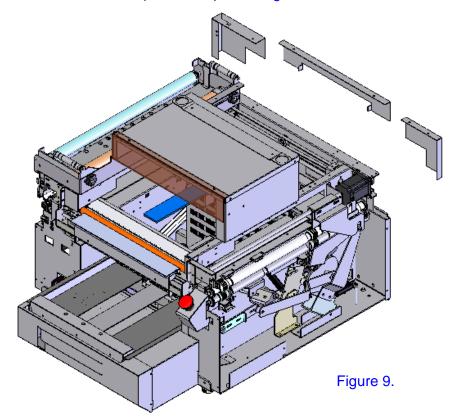

15. Remove the rear, lower cover (six screws). See Figure 10.

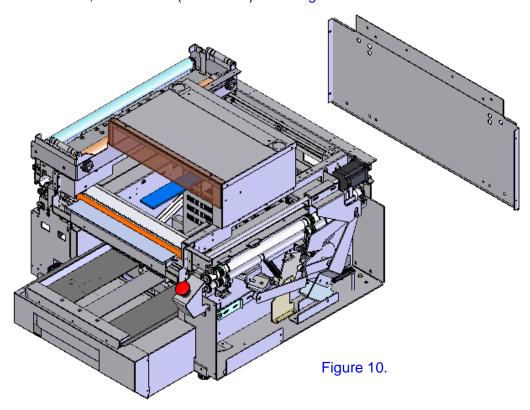

16. Disconnect the three connectors at the front, left as indicated by the blue circle (X6P/X6F, B14, and R1). See Figure 11.

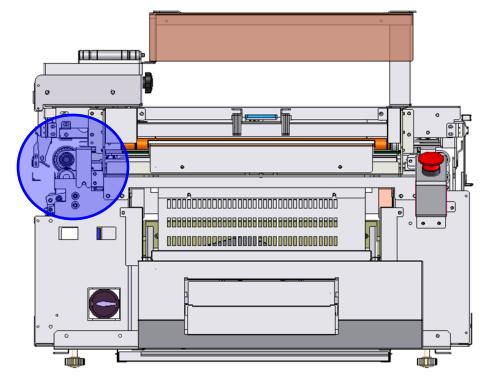


Figure 11.

17. Disconnect four connectors at the rear left and right as indicated by the blue circles. Left: X4P/X4R and M3R/M3. Right: X2P/X2R and X3P/X3R. See Figure 12.

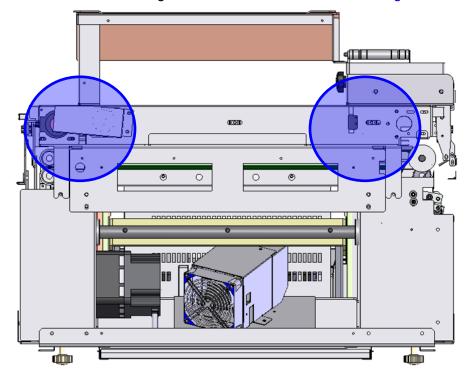


Figure 12.

18. Loosen two screws securing the Film Feeder Drive motor bracket and slip the drive belt off the Polished Roller Film Feed drive gear as indicated by the blue arrow. See Figure 13.

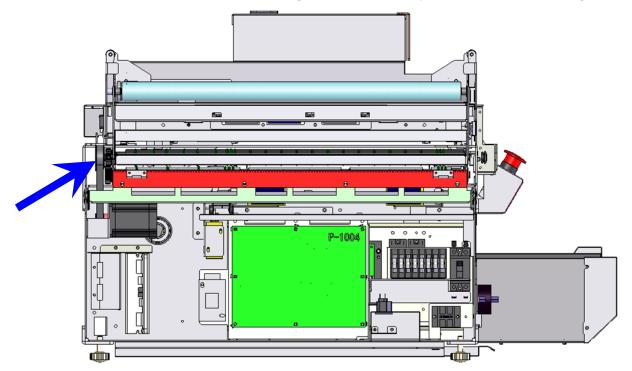


Figure 13.

19. Pull up the release lever as indicated by the blue circle and pull the entire Top assembly forward one inch to disengage. See Figures 14 and 15.



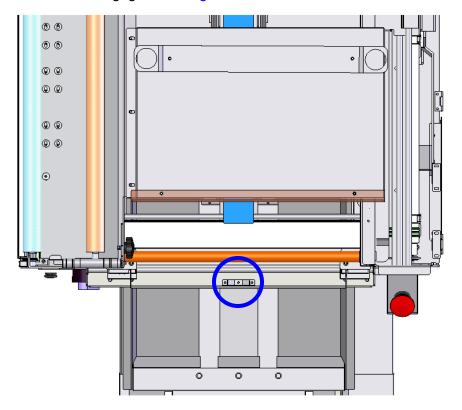


Figure 14.

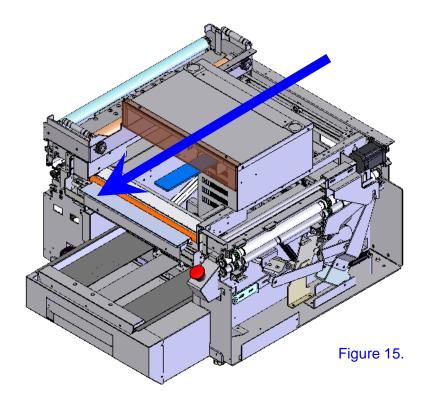

20. Lift the Top assembly (see Figure 16) off the main body (see Figure 17).


CAUTION The Top assembly is heavy and awkward. It should be removed by two people.

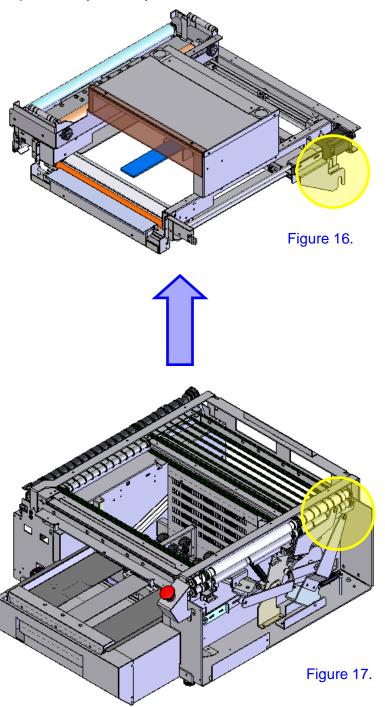




When reassembling the Top assembly carefully engage the Discharge Pusher and Rear Folder with the drive arms as indicated by the yellow circles.

- 21. Dismount the E. Stop switch assembly as indicated by the yellow arrow. See Figure 18.
- 22. Loosen four bolts (8mm) indicated by the blue arrows then remove the two guide rails.

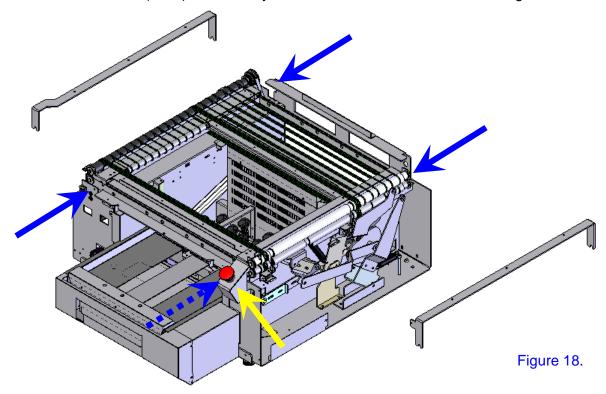

23. Remove four bolts (7mm) indicated by the blue arrows. See Figure 19.

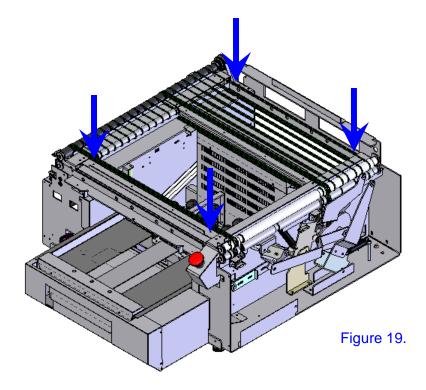

24. Remove the Film Feeder unit. See Figure 20.

CAUTION Avoid the Film Cutter Blade when removing the Film Feeder unit.



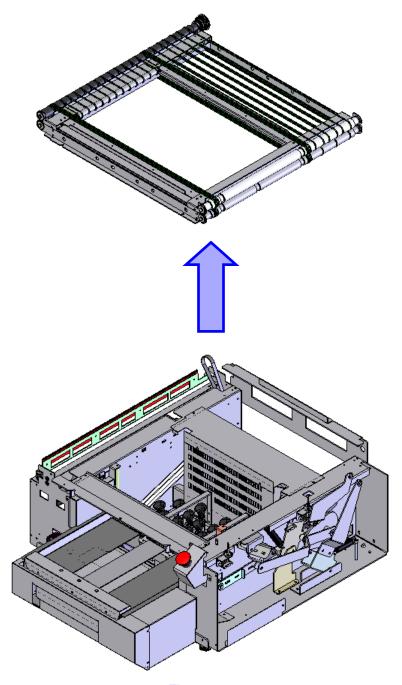


Figure 20.

25. Loosen the four bolts (7mm) indicated by the blue arrows to separate the Upper and Lower Film Feeder sections. See Figure 21.

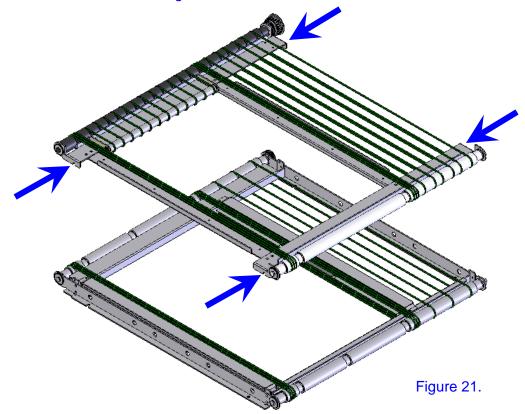

26. Replace the Film Feeder belts as needed. See Figure 22.

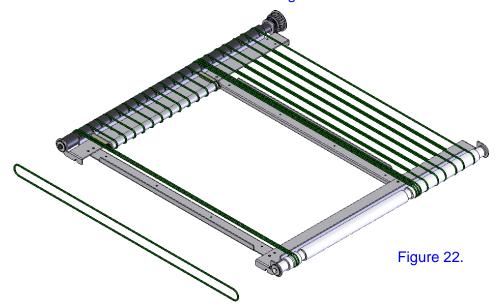

27. Reassemble the WM-Nano in the reverse order and test operation.