Interchange 920i[®]/1280 Database Management Software **Designing an Export Job File**

A custom job file can be set up for each indicator database. Manually click on individual job files to run its automatic export or setup.

Use the following steps to design an export job file.

- 1. Open the Interchange software program.
- 2. Click on **Communications** on the top toolbar and select **Connect**. The system will connect to the indicator and upload the current database structure.
- 3. Click on Tools on the top toolbar and select Export Job Wizard. Follow the listed instructions in Figure 1.
- 4. Select the desired connection method and press Next.

Sector Se	b will use. The commun	ictions settings in the	
 RS-232 RS-485 Networking Target Address TCP/IP Networking Target Address Port 	198.168.0.31 8000	-	
Help Canc	el < <u>B</u> ack	<u>N</u> ext >	Einish

Figure 1. Enter Connection Method

5. Select the Database Table that the upload should be applied to and press Next.

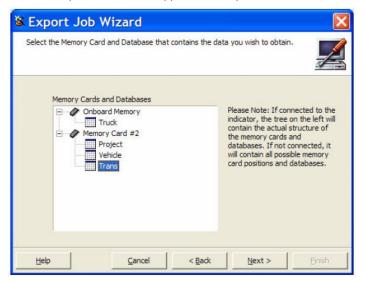


Figure 2. Select Memory Card and Database



6. Select the uploaded file type to save and press Next.

🛎 Export Job Wizard	
Select the file type for the exported database contents.	
Tab Delimited Text File (.txt) Extensible Markup Language (.xml) Microsoft Excel 97/2000 (.xls) HTML Web Page (.htm)	
Help Cancel < Back	Enish

Figure 3. Select the Exported Database Contents File Type

7. Select the **Export Directory** and **Filename**. By clicking on the **Automatically generate filename based on time and date** feature, will generate a unique file name. Press **Next** to continue.

🛎 Export	Job Wizard	
Enter the file	name and location to store the exported data on your local computer.	
	Export Directory C: \Uploads	
	Filename	
	Transactions	
Help	Cancel < Back Next >	Einish

Figure 4. Enter File Name and Location



8. Select the destination for the exported file and press Next.

🛎 Export Job Wizard	X
Enter the destination for the exported file.	
 Local File Send via E-Mail Upload to FTP Server 	
Help Cancel < Back Next >	Einish

Figure 5. Enter Destination Location

9. Select whether or not to clear the database after a successful upload of files and press Next.

🛎 Export Jo	b Wizard			
Select the check b	oox to clear the database	e of data after the ji	ob is finished.	
	☑ Clear the database	after completion		
Help	Gancel	< <u>B</u> ack	Next >	Einish

Figure 6. Database Clear After Uploading Files



10. Verify that all parameters are set up correctly. If so, press Finish.

🋎 Exp	oort Job Wiz	ard	
		ne for this job and save it to disk. You can then the Windows Task Scheduler or other method.	
Job	Summary		
Pa	arameter	Value	~
6	Connection Method	TCP/IP Network	
6	Network Address	198.168.0.31	
6	TCP Port	8000	
6	Memory Card	Card #2	
6	Database	Trans	
6	Export Type	Tab Delimited Text	_
6	Export Directory	C:\Uploads	
6	Export Filename	Transactions	
6	Export Destination	Local File	
6	E-Mail Address		~
[<u>H</u> el		Cancel < Back Next >	Einish

Figure 7. Parameter Checklist

11. Enter the desired Job Filename and the desired Location, pressing Save when done.

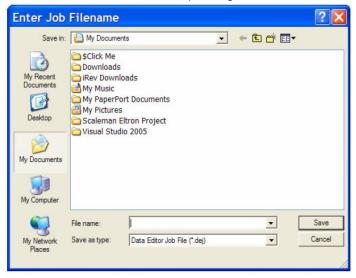


Figure 8. Job Filename Location



© Rice Lake Weighing Systems Specifications subject to change without notice. Rice Lake Weighing Systems is an ISO 9001 registered company.

230 W. Coleman St. • Rice Lake, WI 54868 • USA U.S. 800-472-6703 • Canada/Mexico 800-321-6703 • International 715-234-9171 • Europe +31 (0)26 472 1319