

Update Indicator Firmware

If required, update the indicator firmware version to 1.05. Firmware is available for download at: <https://www.ricelake.com/480>.

1. Download the new firmware .hex file V1.05.
2. Connect the flash cable (PN 165379) between the PC and the indicator by plugging into J14 on the CPU board.



Note

Ensure the cable is plugged in correctly, otherwise the reflash will not work. The indicator display will shut down when the flash cable is plugged in.

3. Load and open the 480FlashLoader.exe program.
4. Select the serial port that is connected to on the PC.
5. Navigate to the .hex file that needs to be loaded.
6. Click the **Load** key in the program to start the reflash.

Install USB Virtual Comm Port Driver on a PC

If required, update the indicator firmware version to 1.05. Firmware is available for download at: <https://www.ricelake.com/480>.

Download the new firmware .hex file V1.05.

Cables available for use with option:

- USB Cable with Cord Grip, Type A Female Connector, 6' (20 cm) (PN 164602)
- USB Cable with Cord Grip, Type A Male Connector, 6' (200 cm) (PN 167707)
- USB Cable with Cord Grip, Type B Male Connector, 6' (200 cm) (PN 167708)
- Ethernet Cable with Cord Grip, RJ45 Connector, 6' (200 cm) (PN 164604)



© Rice Lake Weighing Systems Specifications subject to change without notice.
Rice Lake Weighing Systems is an ISO 9001 registered company.

230 W. Coleman St. • Rice Lake, WI 54868 • USA
U.S. 800-472-6703 • Canada/Mexico 800-321-6703 • International 715-234-9171 • Europe +31 (0)26 472 1319