



Disabling Tare Auto Clear

(Serial number B01060 and higher)




Technical Bulletins can be viewed or downloaded from the Rice Lake Weighing Systems retail distributor site at www.ricelake.com/retail

- Press and hold  while turning on the scale.
Do not release  until the scale version displays.

WEIGHT	UNIT PRICE	TOTAL PRICE
6.3	-4-	-1-

Figure 1. Version of Scale Display


- Press and hold  until *SETUP* displays.

- Press  to enter *USUAL* Mode.

- Press , the A/D value displays.

WEIGHT	UNIT PRICE	TOTAL PRICE
SETUP		
USUAL		
XXXXX		

Figure 2. Enter Setup Mode Displays

- Press and hold  for two seconds (without beep sound).

- Press .


- Press and hold  for two seconds.

- Press the **CLEAR (+)** or **ZERO (-)** key to select the digit in *TOTAL PRICE* display.
Change display to **0.0d**.

WEIGHT	UNIT PRICE	TOTAL PRICE
SETUP		
SETUP	3C5R	0.00
SETUP	3C5R	0.0d


Figure 3. Enter Mode

- Press .

- Press  to shift the flashing digit to the **?** position in *WEIGHT* display.
Press **CLEAR (+)** key to modify to an **8**.

WEIGHT	UNIT PRICE	TOTAL PRICE
X0.1?4	XXX	0.0d
X0.184	XXX	0.08

Figure 4. Modify Digits

- Press  twice to end setting mode.



Note To avoid unforeseen consequences make sure to change the digits based on the setting instruction.



Note To enable the Auto Clear function, modify **?** to **A** in *WEIGHT* display at step 10.



© Rice Lake Weighing Systems Specifications subject to change without notice.
Rice Lake Weighing Systems is an ISO 9001 registered company.

230 W. Coleman St. • Rice Lake, WI 54868 • USA

U.S. 800-472-6703 • Canada/Mexico 800-321-6703 • International 715-234-9171 • Europe +31 (0)26 472 1319