SOFTWARE UPDATE PROCEDURE

The following instructions will assist in updating the MSI-3460 software for use with the SC-3 PCA.



Note For more information on the MSI-3460, see the Operator's manual (PN 152161).



Manuals can be viewed or downloaded from the Measurement Systems International website at www.msiscales.com.

Equipment Requirements:

- PC with terminal program
- 3460 Interface Cable PN: 503230-0001 (10') or -0002 (5')

Updating Process

1. Connect interface cable to P2, as shown.

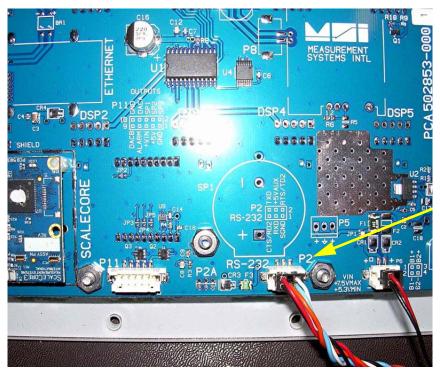


Figure 1. Connecting Interface Cable

2. Power on the scale.



3. Open a terminal program.

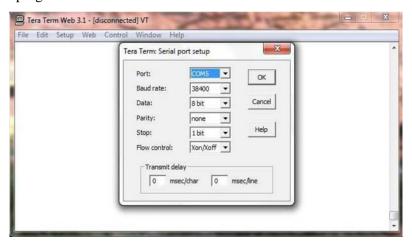


Figure 2. Serial Port Setup

4. Configure to the following:

• Baud Rate: 38400


Data Bits: 8Parity: NoneStop Bits: 1

• Flow Control: XON/XOFF

5. Type: {00FF09=0199}, then press enter. This command will access the boot-loader program within the SCALECORE. "bLOAd" displays on the MSI-3460 and the Scalecore Boot Loader menu will appear on the terminal screen





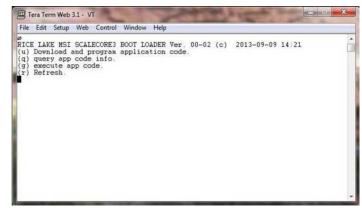

Scalecore Boot Loader Menu

Figure 3. Access Bootloader Within Scalecore

- 6. Type u to download and program the application code. Boot Loader program will prompt to send file.
- 7. Select file, then send. Wait for complete file transfer.

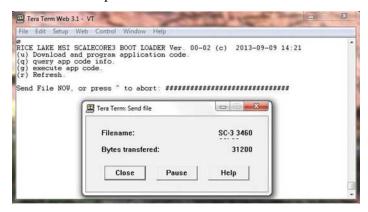


Figure 4. Send File

When complete, Boot Loader Menu will appear on terminal screen.

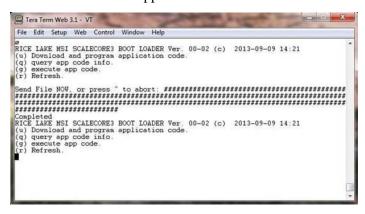


Figure 5. Bootloader Menu

- 8. Verify Application Code Version, type q to query app code info.
 - App Code Version: 03b03

Note Contact MSI for current version.

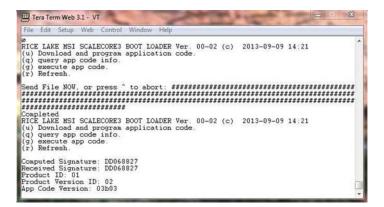


Figure 6. Query App Code Info

9. Type **g** to execute application code. The MSI-3460 display will return to normal weighing mode.



Figure 7. Normal Weighing Mode



A RICE LAKE WEIGHING SYSTEMS COMPANY

14240 Interurban Avenue South Suite 200 ● Seattle, WA 98168-4661 ● USA Phone: 206-433-0199 ● Fax: 206-244-8470

www.msiscales.com

www.ricelake.com www.ricelake.mx www.ricelake.eu www.ricelake.co.in m.ricelake.com