



Remote Scale Base Setup

The following instructions are used for setting up the Uni-9 price computing scale to a remote scale base.


1. Go to ADJUST mode.
2. Press 495344+PLU.
3. Press MACHINE TYPE.
5. Change the *SCALE CONNECT* from 0: NONE to 1: WIRED using the left/right arrows.

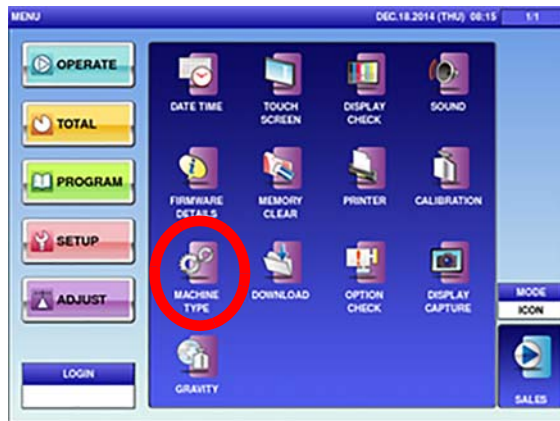


4. Select BAKERY (XL)/REMOTE PRINTER (XL).

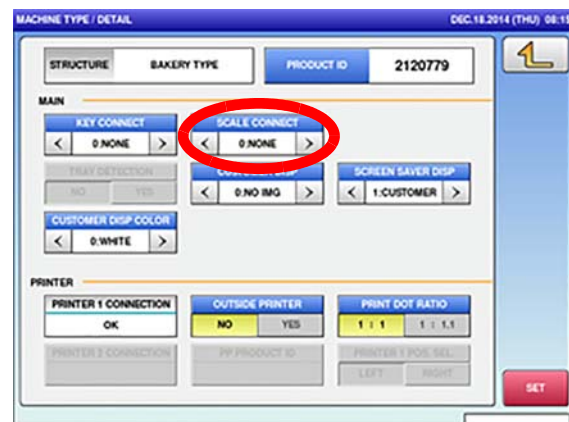


6. Press the SET button.

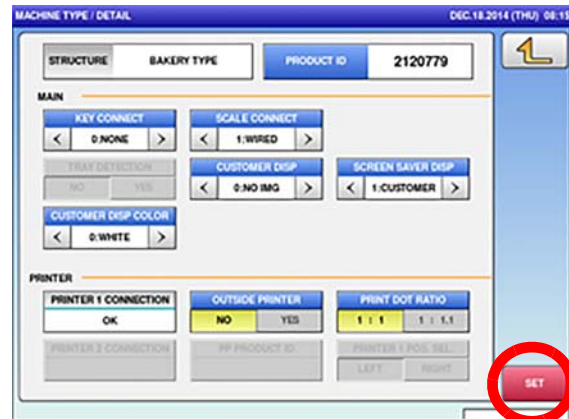


7. Press the EXEC button.

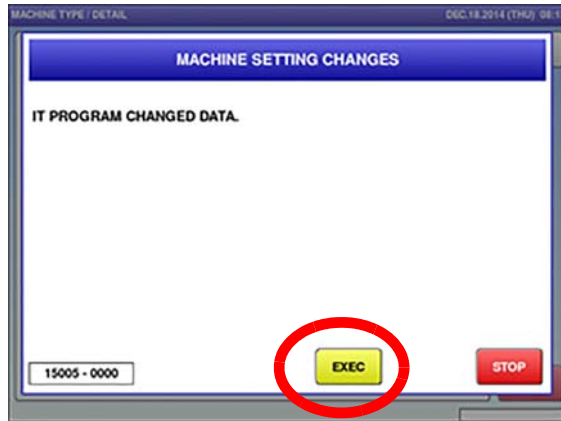


8. Press CALIBRATION.

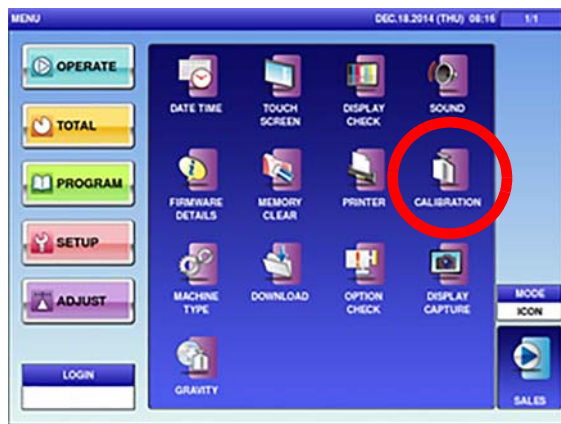

9. Change the capacity to 60lb and perform the calibration.

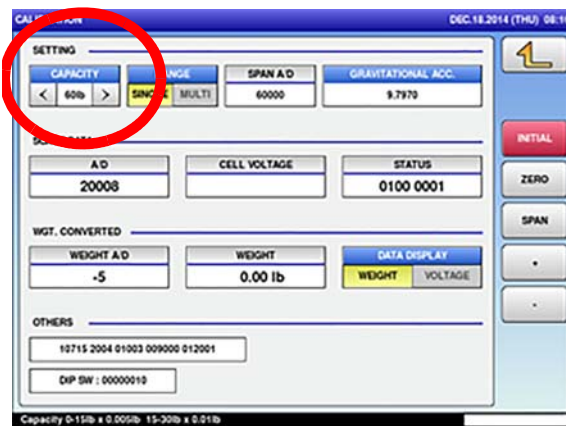

10. Using a non-conductive object, press the span switch on the remote scale base to save the calibration. When pressed, the scale beeps.

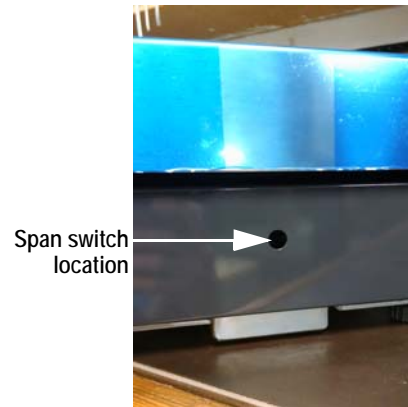

11. Once the unit is calibrated, it reads 0.02lb.



© Rice Lake Weighing Systems Specifications subject to change without notice.
Rice Lake Weighing Systems is an ISO 9001 registered company.

230 W. Coleman St. • Rice Lake, WI 54868 • USA
U.S. 800-472-6703 • Canada/Mexico 800-321-6703 • International 715-234-9171 • Europe +31 (0)26 472 1319