

Synergy Series





User String Feature with the 682

The 682 can be customized via the user string feature to set up different softkeys for user-entered data. The displays can also be customized for ease of use.

RICE LAKE[®]
WEIGHING SYSTEMS

800-472-6703
www.ricelake.com

User String Feature with the 682

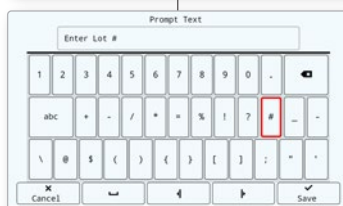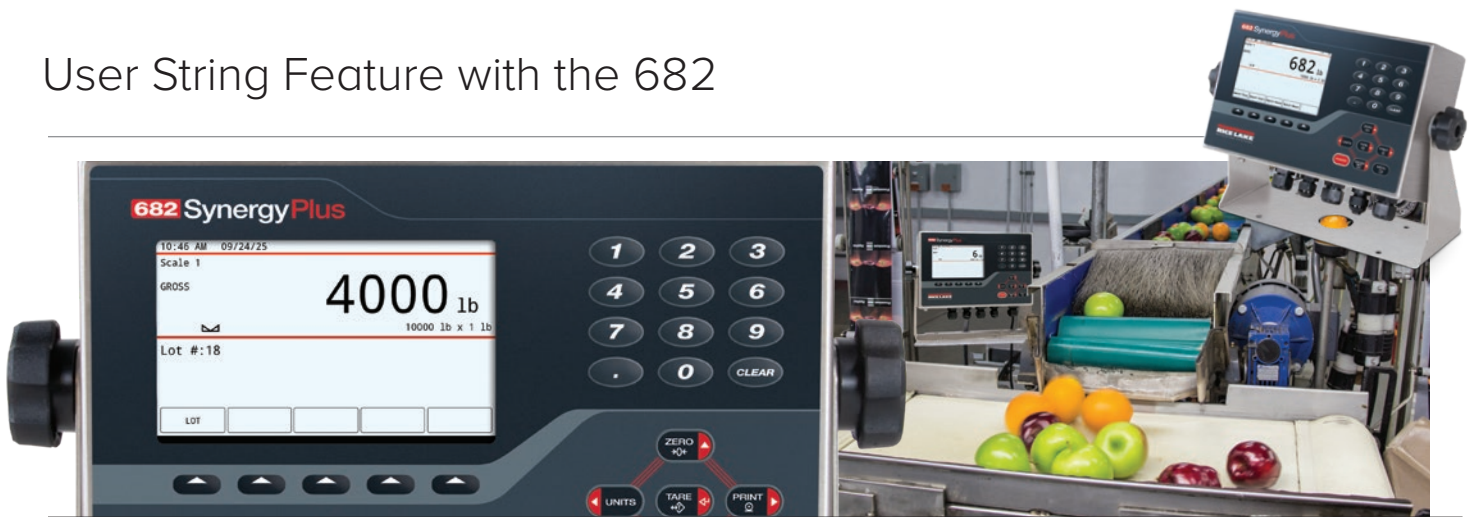

Custom String
Softkey Text

Adjust Text

The softkeys, prompts and display text can be modified to clearly indicate use.

- Softkey text can be customized. Examples: Lot #, batch #, employee ID, product, SKU, bar code number and more.
- Create custom display prompts such as “Enter Lot #”
- For display text, the {} act as a placeholder for the user-entered data. Operators can add text prior to user-entered data, such as “batch number:{}” to provide a message indicating the user-entered data.
- User strings can also be updated via a computer to show messages. A computer operator could send a message, such as “Proceed to Silo 3”, to the indicator to provide scale instructions.

User String Data

Data can be modified and saved in a variety of ways.

- Operators can set a temporary three-second duration for the screen image, or a permanent one until changed.
- User-entered data can be held in a <US1> print token variable until changed or the unit is power cycled.
- The user string <US1> can be added to any print format and queried via a serial command.

