BC-4000E Pole Assembly



Part Number/Price

1	Ref#	Part#	Description	Price
1982 1 Case, UL	1	83777		Consult
19832	_	83781	Platter backstop	Consult
102812	2	102811	Case, UL	Consult
44 102813 Keybard, membrane, contacts only Consult 5 102814 Keyshet, programming keyboard Consult 7 102816 Keyshet, operation insert Consult 8 Consult Nameplate spedification Consult 9 102817 PWB, PS-037, tactile keyboard Consult 10 102818 Ramess, S3, tactile keyboard Consult 11 44406 Rubber, platter support Consult 12 66402 Rubber, platter support Consult 13 44410 Platter support Consult 4 44414 Load cell, C261-25K-S18-25kg-350 Consult 4 44414 Load cell, C261-25K-S18-25kg-350 Consult 5 66379 Bracket, load cell Consult 15 66379 Bracket, load cell Consult 16 16029 PWB, PS-229A, A/D board, with ground wire, for remote base Consult 1 108024 PWB, PS-299A, MD board, with ground wire, for remote base Consult 1	_	119832	Screw, self tap, M4x13, upper cover mount	Consult
5 102815 Sheet, programming keyboard Consult 7 102816 Sheet, clear, with adhesive Consult 8 Consult Sheet, clear, with adhesive Consult 9 102817 PWB, PS-037, factile keyboard Consult 10 102818 Harness, S3, tactile keyboard Consult 12 66402 Rubber, platter support Consult 13 44410 Rubber, platter support Consult 4 44414 Load cell, for RL S/S remote base Consult 4 44414 Load cell, for RL S/S remote base Consult 5 66329 Bracket, load cell Consult 16 16328 Bracket, load cell Consult 16 110802 PWB, PS-229A, AVD board Consult 17 108024 PWB, PS-299A, Moin CPU Doard, with ground wire, for remote base Consult 18 66353 Remote base A/D harmess, internal, for RL S/S Consult 19 102820 Accessory, support, post Consult 10 </td <td>3</td> <td>102812</td> <td>Lens</td> <td>Consult</td>	3	102812	Lens	Consult
66 102814 Keysheet, operation insert Consult 7 102816 Sheet, clear with adhesive Consult 8 Consult Nameplate specification Consult 9 102817 Wilk, PS-037, factile keyboard Consult 11 44406 Rubber, platter support Consult 12 66402 Rubber, platter support Consult 14 44410 Platter support Consult 14 44414 Load cell, C2G1-25K-S18-25kg-350 Consult 4 44414 Load cell, C2G1-25K-S18-25kg-350 Consult 85826 RSB3000 load cell Consult 15 66379 Bracket, load cell Consult 16 110802 PWB, PS-229A, A/D board Consult 114043 PWB, PS-229A, A/D board, with ground wire, for remote base Consult 17 108024 PWB, PS-990, Main CPU board, 2M Consult 18 66379 Brance base A/D hamess, internal, for RL S/S Consult 19126 Battery Consult		102813	Keyboard, membrane, contacts only	Consult
7 102816 Sheet, clear, with adhesive Consult 8 Consult Nameplate specification Consult 9 102817 PWB, PS-037, factile keyboard Consult 10 102818 Harness, S3, factile keyboard Consult 11 44406 Rubber, platter support Consult 12 66402 Rubber, platter support, solid Consult 13 44410 Load cell, for RL S/S remote base Consult 44414 Load cell, for RL S/S remote base Consult 85626 BS8300 load cell Consult 16 66379 Bracket, load cell Consult 16 110802 PWB, PS-229A, A/D board Consult 18 66379 Bracket, load cell Consult 19 19895 Remote base A/D board, with ground wire, for remote base Consult 11 10802 PWB, PS-229A, A/D board Consult 12 10803 Remote base A/D harness, internal, for RSB-3000 Consult 13 1424 Albara	5	102815	11 0 0 1	Consult
8 Consult Nameplate specification Consult 9 102817 WB, PS-037, factile keyboard Consult 10 102818 Harness, S3, tactile keyboard Consult 11 44406 Rubber, platter support Consult 12 66402 Rubber, platter support Consult 13 44410 Platter support Consult 14 44414 Load cell, C261-25K-S18-25kg-350 Consult - 91729 Load cell, G7R L S/S remote base Consult - 91729 Load cell, G7R L S/S remote base Consult - 91829 Load cell, G7R L S/S remote base Consult - 91895 Remote base A/D barress, internal, for RL S/S Consult - 91895 Remote base A/D barress, internal, for RL S/S Consult - 91895 Remote base A/D barress, internal, for RL S/S Consult 10 19126 Battery Consult 10 19127 PWB, PS-990, Main CPU board, 2M Consult 10			2 1	
9 102817 PWB, PS-037, Iactille keyboard Consult 10 102818 Harness, S3, Iactille keyboard Consult 11 44406 Rubber, platter support Consult 12 66402 Rubber, platter support Consult 14 44410 Platter support Consult 14 44411 Load cell, C2G1-25K-S18-25kg-350 Consult - 91729 Load cell, G2G1-25K-S18-25kg-350 Consult - 91729 Load cell, For RL, S7S remote base Consult 15 66379 Bracket, load cell Consult 16 110802 PWB, PS-229A, AD board Consult - 91895 Remote base A/D harness, internal, for RS-3000 Consult - 85830 Remote base A/D harness, internal, for RS-3000 Consult 1 100024 PWB, PS-990, Main CPU board, 2M Consult 1 109126 Battery Consult 1 109126 Battery Consult 1 102820 Accessory,				
10 102818 Harness, S3, tactile keyboard Consult 11 44406 Rubber, platter support Consult 12 66402 Rubber, platter support Consult 13 44410 Platter support Consult 44 44414 Lad cell, C2GT-25K-S18-25kg-350 Consult 91729 Load cell, Cfor RL S/S remote base Consult 15 66379 Bracket, load cell Consult 16 110802 PWB, PS-229A, A/D board Consult 11 14043 PWB, PS-229A, A/D board, with ground wire, for remote base Consult 14 44414 Lad cell, stacked, load cell Consult 14 44403 PWB, PS-229A, A/D board, with ground wire, for remote base Consult 16 110802 PWB, PS-2990, Main CPU board, S Consult 17 108024 PWB, PS-990, Main CPU board, 2M Consult 18 66353 Accessory, support, post Consult 19 102820 Accessory, support, post Consult 20				
11 44406 Rubber, platter support, solid Consult 12 66402 Rubber, platter support, solid Consult 13 44410 Platter support Consult 14 44414 Load cell, C2G1-25K-S18-25kg-350 Consult — 85826 RSB3000 load cell Consult 15 66379 Bracket, load cell Consult 14 14043 PWB, PS-229A, A/D board Consult 14 14043 PWB, PS-229A, A/D board Consult — 91895 Remote base A/D barness, internal, for RL S/S Consult — 91895 Remote base A/D harness, internal, for RSB-3000 Consult 17 108024 PWB, PS-990, Main CPU board, 2M Consult 199653 PWB, PS-990, Main CPU board, 2M Consult 199126 Battery Consult 199127 Accessory, support, post Consult 19 102820 Accessory, support, main Consult 20 80999 Power GND cord, with ferrite filter Consult 21				
12 66402 Rubber, platter support Consult 13 44410 Patter support Consult 44414 Load cell, Coft -L2SK-S18-25kg-350 Consult — 85826 RSB3000 load cell Consult 5 66379 Bracket, load cell Consult 16 110802 PWB, PS-229A, A/D board Consult 14043 PWB, PS-229A, A/D board Consult 14043 PWB, PS-229A, A/D board, with ground wire, for remote base Consult 14043 PWB, PS-299, A/D board Consult 15 66379 Remote base A/D harness, internal, for RL S/S Consult 16 1985 Remote base A/D harness, internal, for RSB-3000 Consult 17 108024 PWB, PS-990, Main CPU board, 2M Consult 18 66353 Accessory, support, post Consult 18 66353 Accessory, support, post Consult 21 66396 Harness, C4, power, includes receptacle Consult 21 66398 Switch Consult				
13 44410 Platter support Consult 14 44414 Load cell, C2G1-25K-S18-25kg-350 Consult — 91729 Load cell, for RL S/S remote base Consult — 85826 RSB3000 load cell Consult 16 110802 PWB, PS-229A, A/D board Consult 114043 PWB, PS-229A, A/D board, with ground wire, for remote base Consult — 91895 Remote base A/D harness, internal, for RL S/S Consult — 85830 Remote base A/D harness, internal, for RSB-3000 Consult 17 108024 PWB, PS-990, Main CPU board, 2M Consult 18 66353 Accessory, support, post Consult 19 102820 Accessory, support, main Consult 20 80999 Harness, C4, power, includes receptacle Consult 21 66398 Switch Consult 22 80991 Power GND cord, with ferrite filter Consult 23 66403 Power GND cord, with ferrite filter Consult 24 102821 Bar, Hex, M <td< td=""><td></td><td></td><td></td><td></td></td<>				
144 44414 Load cell, CoZG1-25K-S18-25kg-350 Consult 91729 Load cell, for RL S/S remote base Consult 58826 RS83000 load cell Consult 15 66379 Bracket, load cell Consult 114043 PWB, PS-229A, A/D board Consult 114043 PWB, PS-229A, A/D board, with ground wire, for remote base Consult - 91895 Remote base A/D harness, internal, for RL S/S Consult - 91895 Remote base A/D harness, internal, for RSB-3000 Consult - 108024 PWB, PS-990, Main CPU board, 2M Consult - 109126 Battery Consult 1 10926 Accessory, support, post Consult 1 102820 Accessory, support, main Consult 2 80969 Harness, C4, power, includes receptacle Consult 2 809699 Harness, C4, power, includes receptacle Consult 2 809699 Harness, C4, power GND cord, with ferrite filter Consult 2 80961 P			11 11 11	
— 91729 Load cell, for RI, S/S remote base Consult 15 66379 Bracket, load cell Consult 16 110802 PWB, PS-229A, A/D board, with ground wire, for remote base Consult — 91895 Remote base A/D harmess, internal, for RL S/S Consult — 85830 Remote base A/D harmess, internal, for RL S/S Consult — 180624 PWB, PS-990, Main CPU board, 2M Consult — 109653 PWB, PS-990, Main CPU board, 2M Consult — 109126 Battery Consult — 109220 Accessory, support, post Consult 19 102820 Accessory, support, main Consult 20 80999 Harness, C4, power, includes receptacle Consult 21 66398 Switch Consult 22 80991 Power GOD cord, with ferrite filter Consult 24 102821 Case, connector, UL Consult 25 102822 Bar, Hex, M Consult 26 <td< td=""><td></td><td></td><td>11</td><td></td></td<>			11	
— 85826 RSB3000 load cell Consult 15 66379 Bracket, load cell Consult 6 110802 PWB, PS-229A, AVD board Consult 114043 PWB, PS-229A, AVD board, with ground wire, for remote base Consult — 91895 Remote base AVD harness, internal, for RL S/S Consult — 85830 Remote base AVD harness, internal, for RSB-3000 Consult 17 108024 PWB, PS-990, Main CPU board, 2M Consult — 109126 Battery Consult — 109126 Battery Consult 19 10220 Accessory, support, post Consult 19 10220 Accessory, support, main Consult 20 80969 Harness, C4, power, includes receptacle Consult 21 66398 Switch Consult 22 80991 Power cord Consult 23 66403 Power GND cord, with ferrite filter Consult 24 102821 Case, connector, UL	14			
15 66379 Bracket, load cell Consult 110802 PWB, PS-229A, A/D board Consult 114043 PWB, PS-229A, A/D board, with ground wire, for remote base Consult - 91885 Remote base A/D harness, internal, for RL S/S Consult - 88830 Remote base A/D harness, internal, for RSB-3000 Consult 17 108024 PWB, PS-990, Main CPU board, 2M Consult - 109126 Battery Consult - 109126 Battery Consult 18 66353 Accessory, support, post Consult 19 102820 Accessory, support, main Consult 20 80969 Harness, C4, power, includes receptacle Consult 21 66338 Switch Consult 22 80991 Power GND cord, with ferrite filter Consult 23 66403 Power GND cord, with ferrite filter Consult 24 102821 Case, connector, UL Consult 25 102822 Ba, Hex, M	_			
110802 PWB, PS-229A, A/D board Consult 111043 PWB, PS-229A, A/D board, with ground wire, for remote base Consult — 91895 Remote base A/D harness, internal, for RL S/S Consult — 85830 Remote base A/D harness, internal, for RSB-3000 Consult 109024 PWB, PS-990, Main CPU board, 2M Consult — 109126 Battery Consult 1 102820 Accessory, support, post Consult 19 102820 Accessory, support, main Consult 20 80969 Harness, C4, power, includes receptacle Consult 21 66398 Switch Consult 22 80991 Power cord Consult 23 66403 Power GND cord, with ferrite filter Consult 24 102821 Case, connector, UL Consult 25 102822 Bar, Hex, MF Consult 26 Consult Consult 27 107707 Power supply,LFS150-SR4.0 Consult 28	15			
114043 PWB, PS-229A, A/D board, with ground wire, for remote base Consult			·	
— 91895 Remote base A/D harness, internal, for RL S/S Consult — 88530 Remote base A/D harness, internal, for RSB-3000 Consult 108024 PWB, PS-990, Main CPU board, 2M Consult — 109126 Battery Consult — 109126 Battery Consult 18 66353 Accessory, support, post Consult 19 102820 Accessory, support, main Consult 20 80969 Harness, C4, power, includes receptacle Consult 21 66398 Switch Consult 23 66403 Power GND cord, with ferrite filter Consult 24 102821 Case, connector, UL Consult 25 102822 Bar, Hex, M Consult 26 Consult Bar, Hex, MF Consult 27 107707 Power supply,LFS150-SR4.0 Consult 28 66398 Fuse, power supply, Fuse 250V, 5A, 5x20 Consult 29 47073 Harness, S2, power, in from switch				
— 85830 Remote base A/D harness, internal, for RSB-3000 Consult 108024 PWB, PS-990, Main CPU board, 2M Consult 109126 Battery Consult 109127 Battery Consult 109128 Accessory, support, post Consult 19 102820 Accessory, support, main Consult 20 80969 Harness, C4, power, includes receptacle Consult 21 66398 Switch Consult 22 80991 Power cord Consult 23 66403 Power GND cord, with ferrite filter Consult 24 102821 Case, connector, UL Consult 25 102822 Bar, Hex, M Consult 26 Consult Bar, Hex, MF Consult 27 107707 Power supply,LFS150-SR4.0 Consult 28 66396 Harness, C3, power, in from switch Consult 29 47073 Harness, C2, power, out to CPU Consult 30 104167 Base <td>_</td> <td></td> <td></td> <td></td>	_			
109653 PWB, PS-990, Main CPU board, 4M Consult	_			Consult
— 109126 Battery Consult 18 66353 Accessory, support, post Consult 20 80969 Harness, C4, power, includes receptacle Consult 21 66398 Switch Consult 22 80991 Power cord Consult 23 66403 Power GND cord, with ferrite filter Consult 24 102821 Case, connector, UL Consult 25 102822 Bar, Hex, M Consult 26 Consult Bar, Hex, MF Consult 27 107707 Power supply,LFS150-SR4.0 Consult 28 66396 Harness, C3, power, in from switch Consult 29 47073 Harness, S2, power, out to CPU Consult 30 104167 Base Consult 31 79432 Foot, level Consult 32 66383 Hinge Consult 34 66382 Sticker, label roll loading Consult 35 104169	17	108024	PWB, PS-990, Main CPU board, 2M	Consult
— 109126 Battery Consult 18 66353 Accessory, support, post Consult 20 80969 Harness, C4, power, includes receptacle Consult 21 66398 Switch Consult 22 80991 Power cord Consult 23 66403 Power GND cord, with ferrite filter Consult 24 102821 Case, connector, UL Consult 25 102822 Bar, Hex, M Consult 26 Consult Bar, Hex, MF Consult 27 107707 Power supply,LFS150-SR4.0 Consult 28 66396 Harness, C3, power, in from switch Consult 29 47073 Harness, S2, power, out to CPU Consult 30 104167 Base Consult 31 79432 Foot, level Consult 32 66383 Hinge Consult 34 66382 Sticker, label roll loading Consult 35 104169		109653	PWB, PS-990, Main CPU board, 4M	Consult
18 66353 Accessory, support, post Consult 19 102820 Accessory, support, main Consult 20 80969 Harness, C4, power, includes receptacle Consult 21 66398 Switch Consult 22 80991 Power cord Consult 23 66403 Power GND cord, with ferrite filter Consult 24 102821 Case, connector, UL Consult 25 102822 Bar, Hex, M Consult 26 Consult Bar, Hex, MF Consult 27 107707 Power supply, LFS150-SR4.0 Consult 28 66396 Harness, C3, power, in from switch Consult 29 47073 Harness, C3, power, in from switch Consult 30 104167 Base Consult 31 79432 Foot, level Consult 33 104168 Cover, side, UL Consult 34 66382 Sticker, label roll loading Consult 35 </td <td>_</td> <td>109126</td> <td></td> <td>Consult</td>	_	109126		Consult
19 102820 Accessory, support, main Consult 20 80969 Harness, C4, power, includes receptacle Consult 21 66398 Switch Consult 22 80991 Power cord Consult 23 66403 Power GND cord, with ferrite filter Consult 24 102821 Case, connector, UL Consult 25 102822 Bar, Hex, M Consult 26 Consult Bar, Hex, MF Consult 27 107707 Power supply, LFS150-SR4.0 Consult 28 66396 Harness, C3, power, in from switch Consult 29 47073 Harness, S2, power, out to CPU Consult 30 104167 Base Consult 31 79432 Foot, level Consult 32 66383 Hinge Consult 34 66382 Sticker, label roll loading Consult 35 104168 Cover, side, UL Consult 36 104170<	18	66353		Consult
20 80969 Harness, C4, power, includes receptacle Consult 21 66398 Switch Consult 22 80991 Power cord Consult 23 66403 Power GND cord, with ferrite filter Consult 24 102821 Case, connector, UL Consult 25 102822 Bar, Hex, M Consult 26 Consult Bar, Hex, MF Consult 27 107707 Power supply, Fuse 250V, 5A, 5x20 Consult 28 66396 Harness, C3, power, in from switch Consult 29 47073 Harness, S2, power, out to CPU Consult 30 104167 Base Consult 31 79432 Foot, level Consult 32 66383 Hinge Consult 33 104167 Base Consult 34 66382 Sticker, label roll loading Consult 35 104169 Cover, front, UL Consult 4 2719 <t< td=""><td></td><td></td><td></td><td></td></t<>				
21 66398 Switch Consult 22 80991 Power cord Consult 23 66403 Power GND cord, with ferrite filter Consult 24 102821 Case, connector, UL Consult 25 102822 Bar, Hex, M Consult 26 Consult Bar, Hex, MF Consult 27 107707 Power supply,LFS150-SR4.0 Consult 28 66396 Harness, C3, power, in from switch Consult 29 47073 Harness, C3, power, out to CPU Consult 30 104167 Base Consult 31 79432 Foot, level Consult 32 66383 Hinge Consult 33 104168 Cover, side, UL Consult 34 66382 Sticker, label roll loading Consult 35 104169 Cover, front, UL Consult 42719 Screw, M4x8, front cover mount Consult 36 104170 Harness, S2, display<			7: 11: 1	
22 80991 Power cord Consult 23 66403 Power GND cord, with ferrite filter Consult 24 102821 Case, connector, UL Consult 25 102822 Bar, Hex, M Consult 26 Consult Bar, Hex, MF Consult 27 107707 Power supply,LFS150-SR4.0 Consult 27 77889 Fuse, power supply, Fuse 250V, 5A, 5x20 Consult 28 66396 Harness, C3, power, in from switch Consult 29 47773 Harness, S2, power, out to CPU Consult 30 104167 Base Consult 31 79432 Foot, level Consult 32 66383 Hinge Consult 34 66382 Sticker, label roll loading Consult 35 104168 Cover, front, UL Consult 42719 Screw, M4x8, front cover mount Consult 36 104170 Harness, TCP/IP, UL Consult 38 104268 </td <td></td> <td></td> <td></td> <td></td>				
23 66403 Power GND cord, with ferrite filter Consult 24 102821 Case, connector, UL Consult 25 102822 Bar, Hex, M Consult 26 Consult Bar, Hex, MF Consult 27 107707 Power supply, LFS150-SR4.0 Consult 28 66396 Harness, C3, power, in from switch Consult 29 47073 Harness, S2, power, out to CPU Consult 30 104167 Base Consult 31 79432 Foot, level Consult 32 66383 Hinge Consult 33 104168 Cover, side, UL Consult 34 66382 Sticker, label roll loading Consult 35 104169 Cover, front, UL Consult 42719 Screw, M4x8, front cover mount Consult 36 104170 Harness, TCP/IP, UL Consult 37 104119 Bracket module (metal) Consult 38 104268				
24 102821 Case, connector, UL Consult 25 102822 Bar, Hex, M Consult 26 Consult Bar, Hex, MF Consult 27 107707 Power supply, FS150-SR4.0 Consult — 77889 Fuse, power supply, Fuse 250V, 5A, 5x20 Consult 28 66396 Harness, C3, power, in from switch Consult 29 47073 Harness, S2, power, out to CPU Consult 30 104167 Base Consult 31 79432 Foot, level Consult 32 66383 Hinge Consult 33 104168 Cover, side, UL Consult 34 66382 Sticker, label roll loading Consult 35 104169 Cover, front, UL Consult 42719 Screw, M4x8, front cover mount Consult 36 104170 Harness, TCP/IP, UL Consult 37 104171 Bracket module (metal) Consult 38 104268				
25 102822 Bar, Hex, M Consult 26 Consult Bar, Hex, MF Consult 27 107707 Power supply, FS150-SR4.0 Consult — 77889 Fuse, power supply, Fuse 250V, 5A, 5x20 Consult 28 66396 Harness, C3, power, in from switch Consult 29 47073 Harness, S2, power, out to CPU Consult 30 104167 Base Consult 31 79432 Foot, level Consult 32 66383 Hinge Consult 34 66382 Sticker, label roll loading Consult 35 104168 Cover, front, UL Consult 42719 Screw, M4x8, front cover mount Consult 36 104170 Harness, TCP/IP, UL Consult 4 101393 Jumper, RJ45, for wireless (connect to CB3000) Consult 37 104171 Bracket module (metal) Consult 38 104268 Harness, S2, display Consult 40 </td <td></td> <td>1</td> <td>·</td> <td></td>		1	·	
26 Consult Bar, Hex, MF Consult 27 107707 Power supply, LFS150-SR4.0 Consult — 77889 Fuse, power supply, Fuse 250V, 5A, 5x20 Consult 28 66396 Harness, C3, power, in from switch Consult 29 47073 Harness, S2, power, out to CPU Consult 30 104167 Base Consult 31 79432 Foot, level Consult 32 66383 Hinge Consult 34 66382 Sticker, label roll loading Consult 35 104168 Cover, front, UL Consult 42719 Screw, M4x8, front cover mount Consult 36 104170 Harness, TCP/IP, UL Consult 4 101393 Jumper, RJ45, for wireless (connect to CB3000) Consult 37 104171 Bracket module (metal) Consult 38 104268 Harness, S2, display Consult 40 104294 Display case, front, UL Consult				
27 107707 Power supply,LFS150-SR4.0 Consult — 77889 Fuse, power supply, Fuse 250V, 5A, 5x20 Consult 28 66396 Harness, C3, power, in from switch Consult 29 47073 Harness, S2, power, out to CPU Consult 30 104167 Base Consult 31 79432 Foot, level Consult 32 66383 Hinge Consult 33 104168 Cover, side, UL Consult 34 66382 Sticker, label roll loading Consult 35 104169 Cover, front, UL Consult 42719 Screw, M4x8, front cover mount Consult 36 104170 Harness, TCP/IP, UL Consult 4 101393 Jumper, RJ45, for wireless (connect to CB3000) Consult 37 104171 Bracket module (metal) Consult 38 104268 Harness, S2, display Consult 40 104270 Display case, front, UL Consult				
— 77889 Fuse, power supply, Fuse 250V, 5A, 5x20 Consult 28 66396 Harness, C3, power, in from switch Consult 29 47073 Harness, S2, power, out to CPU Consult 30 104167 Base Consult 31 79432 Foot, level Consult 32 66383 Hinge Consult 33 104168 Cover, side, UL Consult 34 66382 Sticker, label roll loading Consult 35 104169 Cover, front, UL Consult 42719 Screw, M4x8, front cover mount Consult 36 104170 Harness, TCP/IP, UL Consult 4 101393 Jumper, RJ45, for wireless (connect to CB3000) Consult 37 104171 Bracket module (metal) Consult 38 104268 Harness, S2, display Consult 40 104270 Display case, front, UL Consult 41 104175 Cap, screw cover Consult <td< td=""><td></td><td></td><td></td><td></td></td<>				
28 66396 Harness, C3, power, in from switch Consult 29 47073 Harness, S2, power, out to CPU Consult 30 104167 Base Consult 31 79432 Foot, level Consult 32 66383 Hinge Consult 33 104168 Cover, side, UL Consult 34 66382 Sticker, label roll loading Consult 35 104169 Cover, front, UL Consult 42719 Screw, M4x8, front cover mount Consult 36 104170 Harness, TCP/IP, UL Consult 4 101393 Jumper, RJ45, for wireless (connect to CB3000) Consult 37 104171 Bracket module (metal) Consult 38 104268 Harness, S2, display Consult 40 104270 Display panel, BC4000Ei Consult 41 104270 Display case, front, UL Consult 42 104250 Push rivet Consult 43 <td< td=""><td></td><td>_</td><td>11.7</td><td></td></td<>		_	11.7	
29 47073 Harness, S2, power, out to CPU Consult 30 104167 Base Consult 31 79432 Foot, level Consult 32 66383 Hinge Consult 33 104168 Cover, side, UL Consult 34 66382 Sticker, label roll loading Consult 35 104169 Cover, front, UL Consult 42719 Screw, M4x8, front cover mount Consult 36 104170 Harness, TCP/IP, UL Consult 4 101393 Jumper, RJ45, for wireless (connect to CB3000) Consult 37 104171 Bracket module (metal) Consult 38 104268 Harness, S2, display Consult 40 104294 Display panel, BC4000Ei Consult 40 104270 Display case, front, UL Consult 41 104175 Cap, screw cover Consult 42 104250 Push rivet Consult 43 104271 PWB, PS-029, display board, LED Consult 44 104272<	28			
30 104167 Base Consult 31 79432 Foot, level Consult 32 66383 Hinge Consult 33 104168 Cover, side, UL Consult 34 66382 Sticker, label roll loading Consult 35 104169 Cover, front, UL Consult — 42719 Screw, M4x8, front cover mount Consult 36 104170 Harness, TCP/IP, UL Consult — 101393 Jumper, RJ45, for wireless (connect to CB3000) Consult 37 104171 Bracket module (metal) Consult 38 104268 Harness, S2, display Consult 40 104294 Display panel, BC4000Ei Consult 40 104270 Display case, front, UL Consult 41 104175 Cap, screw cover Consult 42 104250 Push rivet Consult 43 104271 PWB, PS-029, display board, LED Consult 44				
31 79432 Foot, level Consult 32 66383 Hinge Consult 33 104168 Cover, side, UL Consult 34 66382 Sticker, label roll loading Consult 35 104169 Cover, front, UL Consult — 42719 Screw, M4x8, front cover mount Consult 36 104170 Harness, TCP/IP, UL Consult — 101393 Jumper, RJ45, for wireless (connect to CB3000) Consult 37 104171 Bracket module (metal) Consult 38 104268 Harness, S2, display Consult 40 104294 Display panel, BC4000Ei Consult 40 104270 Display case, front, UL Consult 41 104175 Cap, screw cover Consult 42 104250 Push rivet Consult 43 104271 PWB, PS-029, display board, LED Consult 44 104272 PWB, PS-038, display driver board Consult <td></td> <td></td> <td></td> <td></td>				
32 66383 Hinge Consult 33 104168 Cover, side, UL Consult 34 66382 Sticker, label roll loading Consult 35 104169 Cover, front, UL Consult — 42719 Screw, M4x8, front cover mount Consult 36 104170 Harness, TCP/IP, UL Consult — 101393 Jumper, RJ45, for wireless (connect to CB3000) Consult 37 104171 Bracket module (metal) Consult 38 104268 Harness, S2, display Consult — 104294 Display panel, BC4000Ei Consult 40 104270 Display case, front, UL Consult 41 104175 Cap, screw cover Consult 42 104250 Push rivet Consult 43 104271 PWB, PS-029, display board, LED Consult 44 104272 PWB, PS-038, display driver board Consult		-		
33 104168 Cover, side, UL Consult 34 66382 Sticker, label roll loading Consult 35 104169 Cover, front, UL Consult 42719 Screw, M4x8, front cover mount Consult 36 104170 Harness, TCP/IP, UL Consult — 101393 Jumper, RJ45, for wireless (connect to CB3000) Consult 37 104171 Bracket module (metal) Consult 38 104268 Harness, S2, display Consult 40 104294 Display panel, BC4000Ei Consult 40 104270 Display case, front, UL Consult 41 104175 Cap, screw cover Consult 42 104250 Push rivet Consult 43 104271 PWB, PS-029, display board, LED Consult 44 104272 PWB, PS-038, display driver board Consult			2.9, 2.2	
34 66382 Sticker, label roll loading Consult 35 104169 Cover, front, UL Consult — 42719 Screw, M4x8, front cover mount Consult 36 104170 Harness, TCP/IP, UL Consult — 101393 Jumper, RJ45, for wireless (connect to CB3000) Consult 37 104171 Bracket module (metal) Consult 38 104268 Harness, S2, display Consult — 104294 Display panel, BC4000Ei Consult 40 104270 Display case, front, UL Consult 41 104175 Cap, screw cover Consult 42 104250 Push rivet Consult 43 104271 PWB, PS-029, display board, LED Consult 44 104272 PWB, PS-038, display driver board Consult				
35 104169 Cover, front, UL Consult — 42719 Screw, M4x8, front cover mount Consult 36 104170 Harness, TCP/IP, UL Consult — 101393 Jumper, RJ45, for wireless (connect to CB3000) Consult 37 104171 Bracket module (metal) Consult 38 104268 Harness, S2, display Consult — 104294 Display panel, BC4000Ei Consult 40 104270 Display case, front, UL Consult 41 104175 Cap, screw cover Consult 42 104250 Push rivet Consult 43 104271 PWB, PS-029, display board, LED Consult 44 104272 PWB, PS-038, display driver board Consult				
— 42719 Screw, M4x8, front cover mount Consult 36 104170 Harness, TCP/IP, UL Consult — 101393 Jumper, RJ45, for wireless (connect to CB3000) Consult 37 104171 Bracket module (metal) Consult 38 104268 Harness, S2, display Consult — 104294 Display panel, BC4000Ei Consult 40 104270 Display case, front, UL Consult 41 104175 Cap, screw cover Consult 42 104250 Push rivet Consult 43 104271 PWB, PS-029, display board, LED Consult 44 104272 PWB, PS-038, display driver board Consult				
36 104170 Harness, TCP/IP, UL Consult — 101393 Jumper, RJ45, for wireless (connect to CB3000) Consult 37 104171 Bracket module (metal) Consult 38 104268 Harness, S2, display Consult — 104294 Display panel, BC4000Ei Consult 40 104270 Display case, front, UL Consult 41 104175 Cap, screw cover Consult 42 104250 Push rivet Consult 43 104271 PWB, PS-029, display board, LED Consult 44 104272 PWB, PS-038, display driver board Consult	33			
— 101393 Jumper, RJ45, for wireless (connect to CB3000) Consult 37 104171 Bracket module (metal) Consult 38 104268 Harness, S2, display Consult — 104294 Display panel, BC4000Ei Consult 40 104270 Display case, front, UL Consult 41 104175 Cap, screw cover Consult 42 104250 Push rivet Consult 43 104271 PWB, PS-029, display board, LED Consult 44 104272 PWB, PS-038, display driver board Consult	26			
37 104171 Bracket module (metal) Consult 38 104268 Harness, S2, display Consult 40 104294 Display panel, BC4000Ei Consult 40 104270 Display case, front, UL Consult 41 104175 Cap, screw cover Consult 42 104250 Push rivet Consult 43 104271 PWB, PS-029, display board, LED Consult 44 104272 PWB, PS-038, display driver board Consult	30		, ,	
38 104268 Harness, S2, display Consult — 104294 Display panel, BC4000Ei Consult 40 104270 Display case, front, UL Consult 41 104175 Cap, screw cover Consult 42 104250 Push rivet Consult 43 104271 PWB, PS-029, display board, LED Consult 44 104272 PWB, PS-038, display driver board Consult	27			
— 104294 Display panel, BC4000Ei Consult 40 104270 Display case, front, UL Consult 41 104175 Cap, screw cover Consult 42 104250 Push rivet Consult 43 104271 PWB, PS-029, display board, LED Consult 44 104272 PWB, PS-038, display driver board Consult				
40 104270 Display case, front, UL Consult 41 104175 Cap, screw cover Consult 42 104250 Push rivet Consult 43 104271 PWB, PS-029, display board, LED Consult 44 104272 PWB, PS-038, display driver board Consult	38			
41 104175 Cap, screw cover Consult 42 104250 Push rivet Consult 43 104271 PWB, PS-029, display board, LED Consult 44 104272 PWB, PS-038, display driver board Consult	40			
42 104250 Push rivet Consult 43 104271 PWB, PS-029, display board, LED Consult 44 104272 PWB, PS-038, display driver board Consult				
43 104271 PWB, PS-029, display board, LED Consult 44 104272 PWB, PS-038, display driver board Consult			• • • • • • • • • • • • • • • • • • • •	
44 104272 PWB, PS-038, display driver board Consult				
, , , , , , , , , , , , , , , , , , , ,				
			, , , , ,	Consult

(Diagram BC-4000E-A)



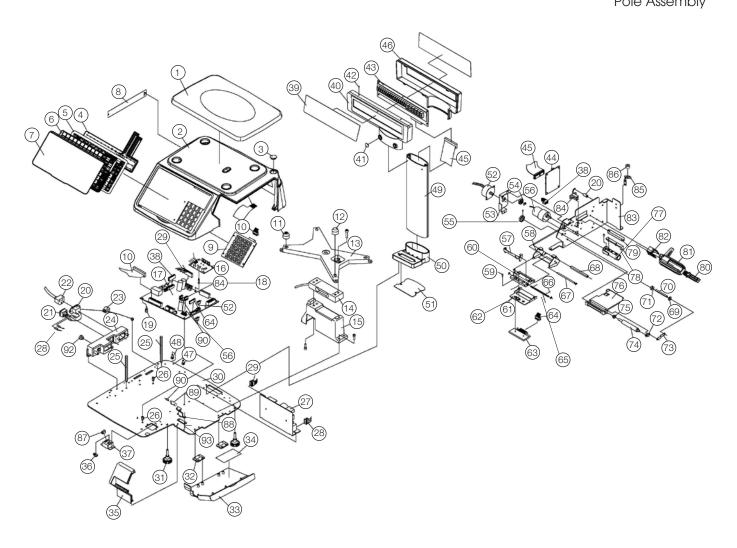


Diagram BC-4000E-A

BC-4000E Pole Assembly



Part Number/Price

Ref#	Part#	Description	Price
45	104273	Harness, S2, display	Consult
46	104274	Display case, rear, UL	Consult
47	45128	Seal, screw, M4	Consult
48	66394	Screw, seal	Consult
49	104257	Pole	Consult
50	104258	Base, pole	Consult
51	104260	Pole base cover	Consult
52	66357	Motor, stepping, print roller drive	Consult
53	66358	Bracket, motor	Consult
54	66359	Gear, spur, dual	Consult
55	66360	Gear, spur, single	Consult
56	110971	Motor, label paper rewind	Consult
57	66362	Bracket push	Consult
58	66363	Frame head	Consult
59	45145	Step screw pan	Consult
60	66364	Bracket lock	Consult
61	66365	Bracket head	Consult
62	45203	Spring coil	Consult
63	119169	Thermal head, BHE4256SU / CHX56-8359, 1100 ohm	Consult
	100747	Tear bar, for continuous label	Consult
	116073	Screw, button head, M3x4, thermal head mount	Consult
64	104267	Harness, S2, thermal head	Consult
65	45222	Shaft	Consult
66	45206	Tension spring	Consult
67	45221	Shaft	Consult
68	45188	Screw bow	Consult
69	45201	Guide, label	Consult
70	45223	Screw bow	Consult
71	66367	Guide label	Consult
72	66368	Bush right	Consult
73	80954	Bracket, support	Consult
74	108192	Roller, rubber	Consult
75	66370	Bush, left	Consult
76	66371	Table, label	Consult
77/78	105437	Label take-up kit, reel and lever (without screws)	Consult
_	42714	Screw, M4x8, pan head tap (two required)	Consult
_	66375	Screw, M3x6, set	Consult
79	66374	Label press	Consult
80	66376	Lever, guide label	Consult
81	66377	Holder, label	Consult
82	66378	Holder, guide label	Consult
83	66352	Frame printer	Consult
84	66354	Label sensor assembly	Consult
85	104261	Level support	Consult
86	44425	Level Unit	Consult
87	104262	Connector, EL-3H (unused)	Consult
88	104263	Bracket, peel sensor	Consult
89	80953	Peel sensor	Consult
	119831	Screw, M3x16, sensor mount	Consult
00			Consult
90	104264	Harness, peel sensor	
92	44474	Plastic screw M8	Consult
93	Consult	Spacer, bracket, peel sensor	Consult

(Diagram BC-4000E-A)



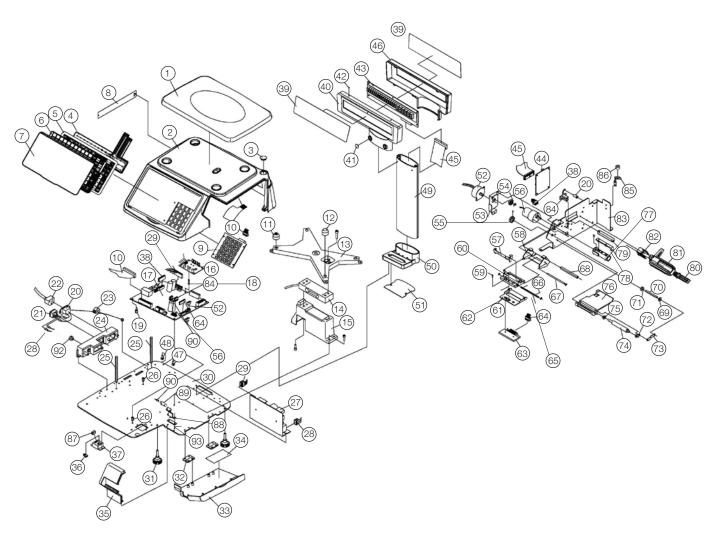


Diagram BC-4000E-A