

Serial Adapter Quick Start Guide

The Intelletto SK100 serial adapter directly connects a PC or Mac to any serial device such as scales, balances, RFID or barcode readers, etc. Once connected, the output is displayed on the screen. It requires no driver installation and identifies as an additional keyboard. Power is drawn from the USB port, requiring no external power supply.



Manuals are available from Rice Lake Weighing Systems at www.ricelake.com/manuals

Warranty information is available at www.ricelake.com/warranties

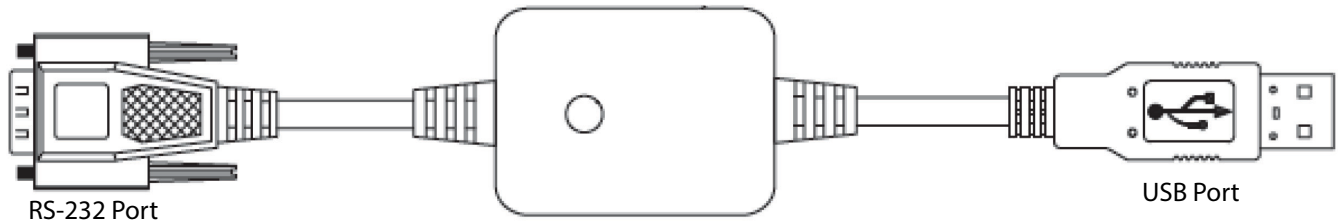


Figure 1. Intelletto SK100 Serial Adapter

Installation

Use the following procedure to access configuration mode:

1. Plug the USB port into the laptop USB outlet.
2. Plug the RS-232 port into the indicator.



NOTE: For further instruction on RS-232 port connection, see the indicator's technical manual.

After successful connection, data displays on the computer (see Figure 2).

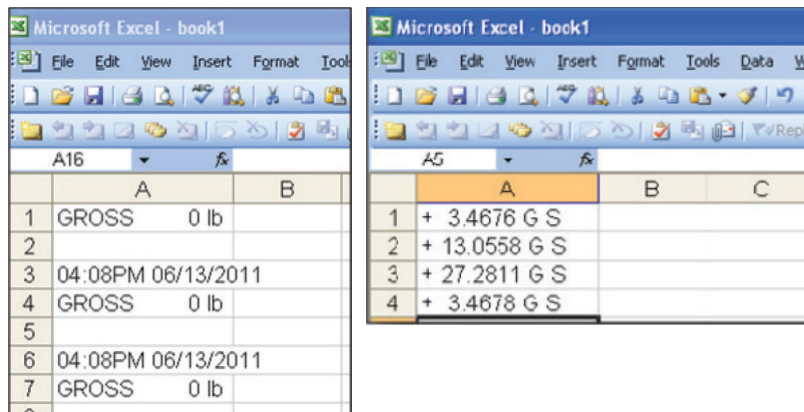


Figure 2. Data Displayed

Specifications

| | |
|--------------------|---|
| Power: | USB power, no external power supply |
| Baud Rate: | 9600 |
| Color: | Black |
| Cable Length: | 74 in (1,880 mm) |
| WPAN Cable Length: | 16 in (406 mm) |
| Host: | PC and MAC compliant |
| Connection: | DB9 male connector |
| Pin Out: | Pin 2: RX Pin 3: TX Pin 5: Ground USB-A |



© Rice Lake Weighing Systems Content subject to change without notice.

230 W. Coleman St. • Rice Lake, WI 54868 • USA USA: 800-472-6703 • International: +1-715-234-9171