

RL WEB DISPLAY


Remote Scale Monitoring Software

Provide basic access to the scale indicator through an internet browser. Perform functions like ZERO and send Stop/Go commands from an indicator connected to a remote display.



The home page shows each configured scale display and Zero button, including Stop/Go if a LaserLight is connected.

The amount of scales and naming depends on configuration parameters—scales are displayed in configuration order.

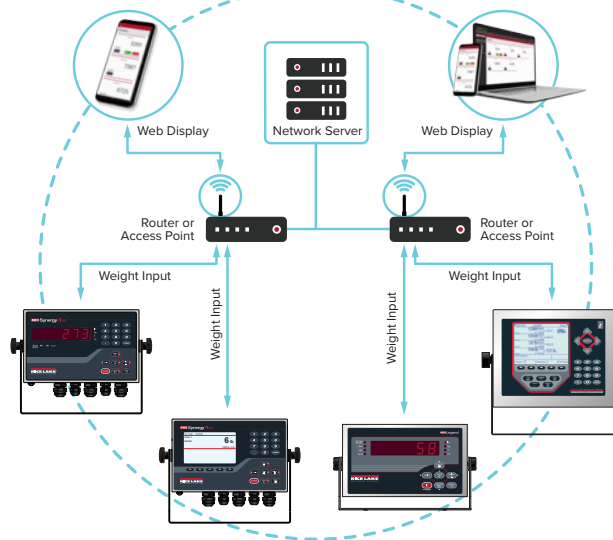

Similar to viewing a scale on a remote display, RL Web Display is a software application that replicates the weight display for one or more indicators.

Multiple users can remotely view configured scales with a licensed installation of RL Web Display software.

REST API to integrate scale data into software and send queries to capture information from individual scales.

Compatible Instrumentation

- 1280 Enterprise™ Series
- 920i® Series *
- 880/880 Plus Performance™ Series
- 820i™ Series *
- 720i™ Series *
- VIRTUJ2® PC-based HMI for iQUBE2®
- 682 Synergy Series
- 680 Synergy Series
- SCT-2200 Advanced Series
- 480 Legend™ Series *
- 420 Plus *
- IQ Plus® 355 *
- IQ Plus® 710 *
- LaserLight2™ * and LaserLight3™
- Avery Weigh-Tronix® E1105
- Avery Weigh-Tronix® W1127
- Mettler Toledo® 8530
- Cardinal® 738

* Indicator must be connected to a TCP/IP network. Serial to TCP/IP converter may be required. (See manufacturers specifications for details)

RICE LAKE
WEIGHING SYSTEMS

800-472-6703

www.ricelake.com/rlwebdisplay

Fully functional for five minutes in demo mode.

