

MVS

Truck Scale Weigh Module Kit

Installation Guide




RICE LAKE[®]
WEIGHING SYSTEMS
To be the best by every measure[®]

49940

Contents

| | |
|---|-----------|
| 1. Introduction | 1 |
| 2. Mechanical Installation | 2 |
| 2.1 General Installation Guidelines | 2 |
| 2.2 Maintaining Scale Height and Center | 4 |
| 2.3 Mount and Load Procedures | 4 |
| Installing the Components | 4 |
| Leveling the Base and Securing the Girder Chair | 4 |
| Re-leveling and Securing the Base | 5 |
| Replacing the Load Cell | 5 |
| 4. Junction Box Connections, Adjustments & Calibration | 6 |
| 3. Load Cell Wiring | 6 |
| 5. Troubleshooting | 7 |
| 6. Maintenance and Replacement Parts | 8 |
| 6.1 Maintenance | 8 |
| 6.2 Replacement Parts | 8 |
| 7. Mount Dimensions | 9 |
| 8. MVS Limited Warranty | 10 |

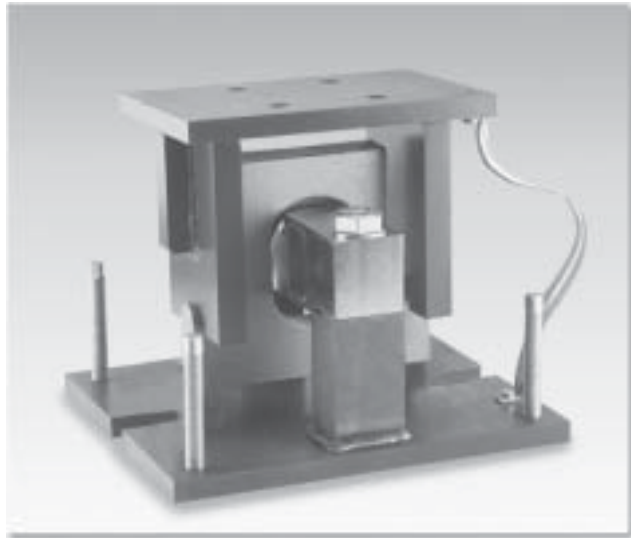


1. Introduction

The MVS load cell mount is used for medium to heavy capacity truck, horizontal vessel, and general purpose weighing applications. The MVS is a fabricated steel mount designed for use with an RL75058 or similar load cell. In most applications, the need for safety check rods, expansion assemblies, and other peripheral hardware is eliminated by the “unilink” suspension design. These design elements provide self-checking and improved weight distribution.

2. Mechanical Installation

2.1 General Installation Guidelines

- Install a system ground in the pit close to the junction box. Use at least 1/2" x 8' copper clad ground rod. Connect the indicator, junction box, scale deck I-beam, load cell grounding straps, and lightning protection devices to the system ground. Connect all other devices, such as the printer, to the same AC power supply as the indicator.
- If the pit fills up with water, proper drainage must be provided so that the weighing assembly is not standing in water. Also, drip loops should be provided on any conduit or cables going to the junction box or load cell.
- If safety check rods are necessary, consult your supervising engineer for proper placement and stability. If bumper bolts are necessary, install them between the scale platform and the walls of the pit. Leave about a 1/8" clearance, or as applicable.
- The mount must be positioned in the direction of travel. Also the load on each mount assembly should be equal to each other.
- The mounting surface for the base and loading plate must be level and parallel so that side loads and bending moments are minimized. The mount assemblies must be plumb and level within $\pm 0.2^\circ$.
- Because the load cell could be damaged during installation, do not use excessive force or slam parts on the load cell. Also, when any welding is required on the mount, remove the load cell from the mount so it is not damaged by welding currents or excessive heat.

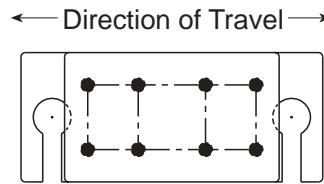

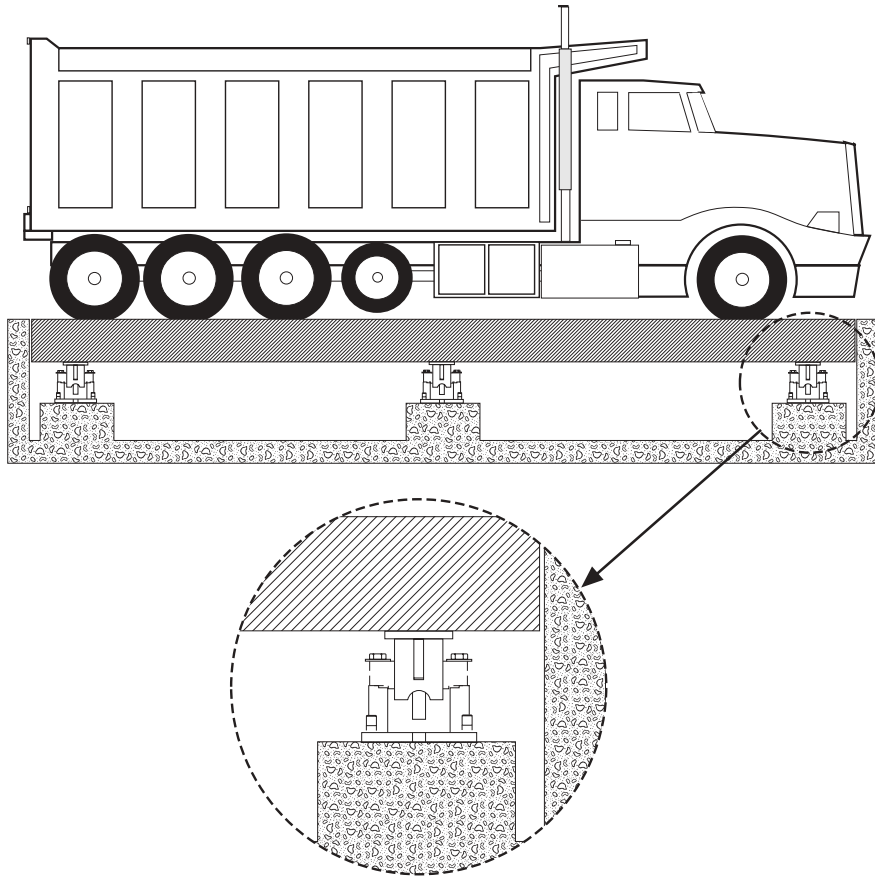


Fig. 2-1: Typical configuration of foundation, mount, and scale deck I-beam

2.2 Maintaining Scale Height and Center

Whether you are replacing existing scales or installing new load cell mounts, you will need to maintain the final height of your scale system.

1. On the concrete pier foundations, install blocking to hold up the scale deck I-beam and platform to the required height for normal truck scale operation. Place wedges between the platform and the pit's edges to center the platform.
2. Remove the existing scales and/or install the new mounts one at a time to continue to maintain the proper height. Installation procedures follow this section.

2.3 Mount and Load Procedures

Installing the Components

Caution

When placing parts on the load cell, be careful not to drop or slam parts on the load cell. Damage to the load cell will make the scale inoperable.

1. Start with a flat, rigid foundation (concrete pier). Position the base stand onto the foundation. Align the base stand in the direction of travel (Fig. 2-1, page 3).
2. Place the load link on top of the load cell and the girder chair on top of the load link.
3. Place the load cell and load link assembly onto the two stands of the base stand and screw in the load cell mounting bolts (finger tight). The loose bolts allow the MVS freer movement for better weighing accuracy.
4. Adjust the load link so it is vertical and centered side to side (in a balanced condition). If the load link is not vertical and centered side to side, adjust the base stand.

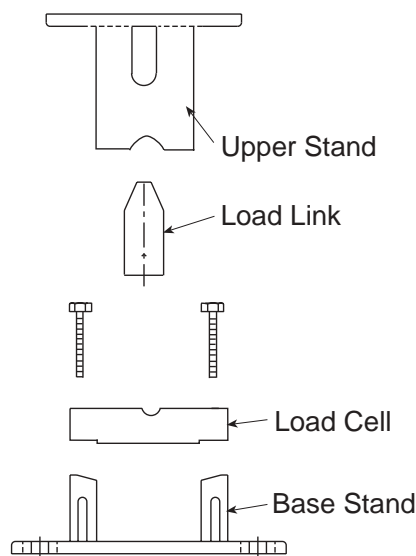


Fig. 2-2: Component assembly

Leveling the Base and Securing the Girder Chair

Leveling is **the single most important part of the installation** for achieving high-accuracy weighing.

1. Check to see whether the girder chair is centered longitudinally with the scale deck I-beam, and adjust the mount if necessary. Place shims between the top of the girder chair and the bottom of the scale deck I-beam, because the scale deck I-beam is never even. The shims should cover the entire surface to prevent bending.
2. Using a high-quality bubble level, level the base stand within 0.2° of horizontal to achieve a scale accuracy of 0.1% or better. The base stand should be parallel with the girder chair, and the link plumb.
3. Mark the girder chair hole locations on the scale deck I-beam (see appendix).
4. Remove the load cell mount while noting the placement and height of the shims.
5. Use a cutting torch to cut the holes into the scale deck I-beam.
6. Replace the mount and the shims. Bolt the girder chair to the scale deck I-beam. The MVS will adjust slightly with the I-beam when the bolts are loosely fitted. If needed, use jam nuts to lock the girder chair bolts in place. Girder chair bolts are not supplied.

Re-leveling and Securing the Base


1. Re-level the mount. If necessary, move the base stand around. A perfectly level system will minimize side loads.
2. Remove the blocking for the particular mount, so that the platform and scale deck I-beam are resting solely on the mount. Re-level the base stand as necessary.
3. Install all the other mounts in the system in the above manner before bolting the base stands. After all the mounts are in place, remove all other blocking, and remove the platform wedges making sure the platform is still centered in the pit. If not, then re-wedge and adjust the mounts as necessary. When you are sure that the platform is at the final height and has the proper clearance, then proceed to anchor the base stands.
4. Drill holes in the concrete foundation. Use concrete stud anchors, or their equivalent, to bolt the base to the foundation. Make a final check to see that everything is in place and level.

Replacing the Load Cell

1. Jack up the girder chair assembly and scale deck I-beam away from the load cell.
2. Unscrew the load cell mounting bolts, remove the load cell, insert the new load cell, and tighten (finger tight) the load cell mounting bolts.
3. Lower the girder chair assembly and scale deck I-beam *gently* onto the load cell.

3. Load Cell Wiring

1. Route the load cell cables so they will not be damaged or cut. Cable should not be routed near heat sources greater than 400° F. **Do not shorten any load cell cable.** The load cell is temperature compensated with the supplied length of cable. Cutting the cable will affect temperature compensation. Coil and protect excess cable so it will not be mechanically damaged or sit in water.
2. Provide a drip loop in all cables so that water or other liquids will not run directly down the cables onto either the load cells or the junction box.
3. If conduit protection is necessary against mechanical or rodent damage to the load cell cables, use flexible conduit and conduit adapters at the load cells.
4. Connect cables for load cells to the summing board in the junction box according to the guide shown below and the labels on the terminal strips of the junction box. To verify the wiring scheme, see the certification shipped with each load cell.
5. For better performance, use positive and negative remote sense lines if the wiring running from the junction box to the indicator is longer than 25 feet.

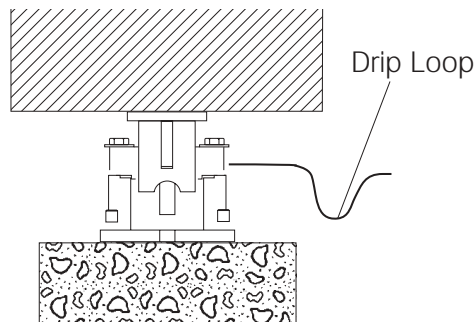

| LOAD CELL WIRE COLOR | FUNCTION |
|----------------------|----------|
| Red | +EXC |
| Black | - EXC |
| Green | +SIG |
| White | - SIG |
| Gray or Bare | SHIELD |

Figure 3-1: Load Cell Wiring

4. Junction Box Connections, Adjustments & Calibration

1. Refer to the Junction Box manual for trimming details.

5. Troubleshooting

If the system powers up and gives some type of stable digital readout that varies with the load on the system, any system problems are probably caused by factors other than the load cells. The load cells are often blamed for a malfunctioning system, but the majority of the time, the problem lies elsewhere. Look for mechanical causes for your problem first.

If the system can be calibrated but doesn't return to zero, loses calibration, or demonstrates non-linearity or non-repeatability, see the following chart for possible causes and do the following checks.

| Symptom | Possible Cause |
|-------------------|--|
| No return to zero | Mechanical binding or debris in seals or under load cells; may have lost system calibration |
| Non-linearity | Thermal expansion or deflection under load causing binding or side load |
| Non-repeatability | Loose load cell mount; drifting caused by moisture, load cell overload or shock damage; mechanical binding |
| Lost calibration | Out of level or plumb; moisture problem; mechanical binding |
| Drifting readout | Moisture in junction box, cables, or load cell; mechanical binding |

1. Check load cell mount for debris restricting load cell movement or debris between scale and structure.
2. Check that tank/vessel and mounts are plumb, level, and square at the critical areas.
3. Check all piping and conduit for connections that restrict vessel movement.
4. If check rods are used, loosen all connections to finger tight only for testing.
5. Check load cell cables for physical or water damage.
6. Check all electrical connections, especially in the junction box.

If the problem still is not found:

7. Check for possible indicator malfunction by using a load cell simulator to input a known good signal into the indicator.
8. Disconnect each load cell's signal leads at the junction box and check individual load cell outputs with a multimeter. Then check input/output impedances for comparison with load cell manufacturer's specifications.


If after all these checks the problem still cannot be isolated, reconnect all but one load cell. Replace the load cell with a load cell simulator. Alternate so that each load cell is individually disconnected and replaced with a simulator. If there is a problem with a particular load cell, the symptom should disappear when that load cell is disconnected and replaced with the simulator.

6. Maintenance and Replacement Parts

6.1 Maintenance


1. The MVS Mount can be wiped clean with a cloth to keep the parts moving freely. Inspect the mount routinely for damage, excessive wear and corrosion. Replace parts whenever necessary.
2. Use a heavy grease on the three pivot points of the load link.

6.2 Replacement Parts

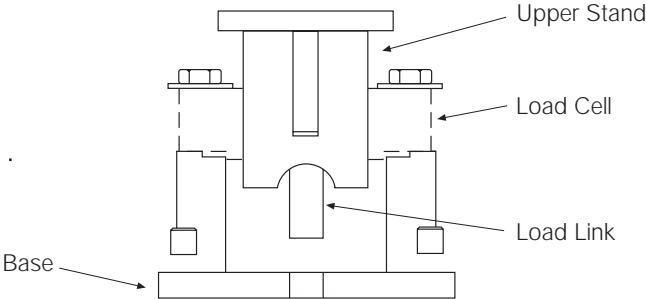

| Description | Quantity | Part Number |
|--|----------|-------------|
| MVS load cell mount (whole unit) | 1 | 46441 |
| Base | 1 | 45682 |
| Upper stand | 1 | 46440 |
| Load link | 1 | 50101 |
| Leveling bolt | 4 | 44382 |
| Load cell bolt | 2 | 37888 |
| Plain washer | 2 | 15184 |
| Ground strap | 1 | 17779 |
| Machine screw (1/4 . 28 x 1/2) | 2 | 14886 |
| Lock washer | 2 | 15147 |

7. Mount Dimensions

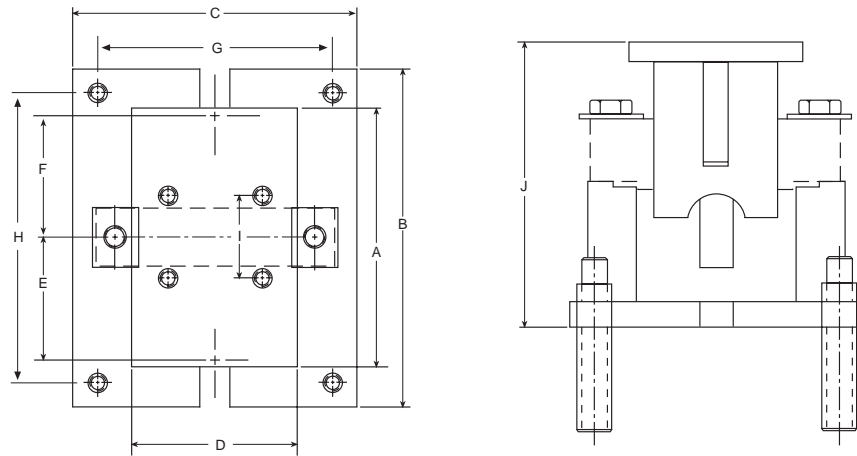

| | Dimension | |
|---|-----------|-------------|
| | inches | millimeters |
| A | 11.00 | 279.4 |
| B | 14.25 | 362.0 |
| C | 12.00 | 304.8 |
| D | 7.00 | 177.8 |
| E | 5.50 | 139.7 |
| F | 5.50 | 139.7 |
| G | 10.00 | 254.0 |
| H | 12.25 | 387.4 |
| I | 3.50 | 88.9 |
| J | 11.53 | 292.9 |

Rated capacity: 50,000–75,000 lb (22,600–34,000 kg)

8. MVS Limited Warranty

Rice Lake Weighing Systems (RLWS) warrants that all RLWS brand load cells properly installed by a Distributor or Original Equipment Manufacturer (OEM) will operate per written specifications. All load cell products are warranted against defects in materials and workmanship for two (2) years. Products marked as “waterproof” are warranted against defects in materials and workmanship relating to moisture ingress.

RLWS warrants that the equipment sold hereunder will conform to the current written specifications authorized by RLWS. RLWS warrants the equipment against faulty workmanship and defective materials. If any equipment fails to conform to these warranties, RLWS will, at its option, repair or replace such goods returned within the warranty period subject to the following conditions:

- Upon discovery by Buyer of such nonconformity, RLWS will be given prompt written notice with a detailed explanation of the alleged deficiencies.
- Examination of such equipment by RLWS confirms that the nonconformity actually exists, and was not caused by accident, misuse, neglect, alteration, improper installation, improper repair or improper testing; RLWS shall be the sole judge of all alleged non-conformities.
- Such equipment has not been modified, altered, or changed by any person other than RLWS or its duly authorized repair agents.
- RLWS will have a reasonable time to repair or replace the defective equipment. Buyer is responsible for shipping charges both ways.
- In no event will RLWS be responsible for travel time or on-location repairs, including assembly or disassembly of equipment, nor will RLWS be liable for the cost of any repairs made by others.

THESE WARRANTIES EXCLUDE ALL OTHER WARRANTIES, EXPRESSED OR IMPLIED, INCLUDING WITHOUT LIMITATION WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. NEITHER RLWS NOR DISTRIBUTOR WILL, IN ANY EVENT, BE LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES.

RLWS AND BUYER AGREE THAT RLWS’S SOLE AND EXCLUSIVE LIABILITY HEREUNDER IS LIMITED TO REPAIR OR REPLACEMENT OF SUCH GOODS. IN ACCEPTING THIS WARRANTY, THE BUYER WAIVES ANY AND ALL OTHER CLAIMS TO WARRANTY.

SHOULD THE SELLER BE OTHER THAN RLWS, THE BUYER AGREES TO LOOK ONLY TO THE SELLER FOR WARRANTY CLAIMS.

No terms, conditions, understanding, or agreements purporting to modify the terms of this warranty shall have any legal effect unless made in writing and signed by a corporate officer of RLWS and the Buyer.

©2005 Rice Lake Weighing Systems, Inc. Rice Lake, WI USA. All Rights Reserved.

**RICE LAKE WEIGHING SYSTEMS
230 WEST COLEMAN STREET • RICE LAKE, WISCONSIN 54868 • USA**



230 W. Coleman St. • Rice Lake, WI 54868 • USA
U.S. 800-472-6703 • Canada/Mexico 800-321-6703
International 715-234-9171

www.ricelake.com
[mobile: m.ricelake.com](http://m.ricelake.com)

© 2010 Rice Lake Weighing Systems

PN 49940 1/2012