

## CLS-M Series iQube2® Forklift Junction Box

# Software Update – Versions 2.08 & 2.09

**Product:** CLS-M Series iQube2 Forklift Junction Box – PN 164071 and 167340 (red junction box)

**Cause:** Pitch and roll angle stability

**Solution:** Update firmware to Version 2.09 to stabilize pitch and roll displayed angle values and data stream output

Firmware download and instructions: [www.ricelake.com/en-us/clsm](http://www.ricelake.com/en-us/clsm)

During annual calibrations and repairs, update the CLS-M Series iQube2 forklift junction box using the latest version of Revolution and a USB A to Micro-A cable (Rice Lake PN 152434).



Figure 1. Firmware Update Cable Connection

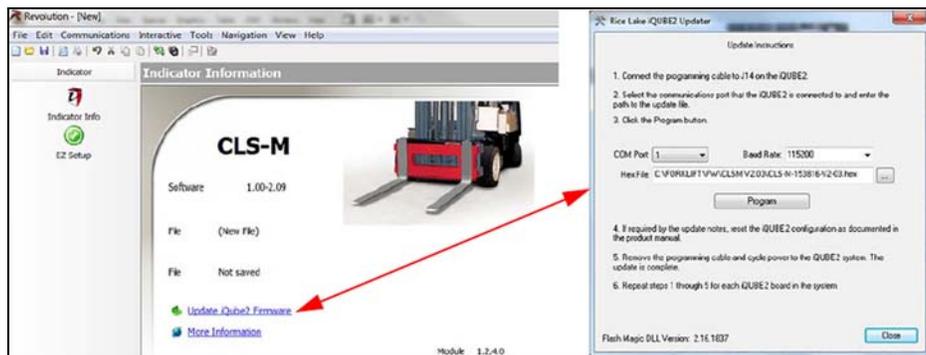


Figure 2. Firmware Update Revolution Screen

Version 2.08 firmware settles the displayed pitch and roll values and provides a filtered data stream output used by Virtui software and the CLS 920 indicator.

Version 2.09 firmware expanded the addressing used in the eeProm memory subsystem.



Manuals can be viewed or downloaded from the Rice Lake Weighing Systems website at [www.ricelake.com/manuals](http://www.ricelake.com/manuals)



© Rice Lake Weighing Systems Specifications subject to change without notice.  
Rice Lake Weighing Systems is an ISO 9001 registered company.

230 W. Coleman St. • Rice Lake, WI 54868 • USA  
U.S. 800-472-6703 • Canada/Mexico 800-321-6703 • International 715-234-9171 • Europe +31 (0)26 472 1319