

WLAN Option Installation

The WLAN (Wireless Local Area Network) Option (Kit 206271) can be installed inside the 920i, 820i and 720i indicators into any available option slot. The WLAN Option can be factory installed upon request when ordering or can be purchased separately and installed on site. The WLAN Option can be used for real-time data transmission between the indicator and other devices and software over a WLAN. Configuration of the WLAN Option is required before it can be used on a WLAN.



Manuals are available from Rice Lake Weighing Systems at www.ricelake.com/manuals

Warranty information is available at www.ricelake.com/warranties

The WLAN Option features a Lantronix® xPico 200 Series Wi-Fi module. Visit www.lantronix.com to view the xPico 200 Series User Guide for detailed instructions on the Wi-Fi module.

1 : Parts Breakdown

The WLAN Option comes in a kit containing the necessary items used for installation of the card.

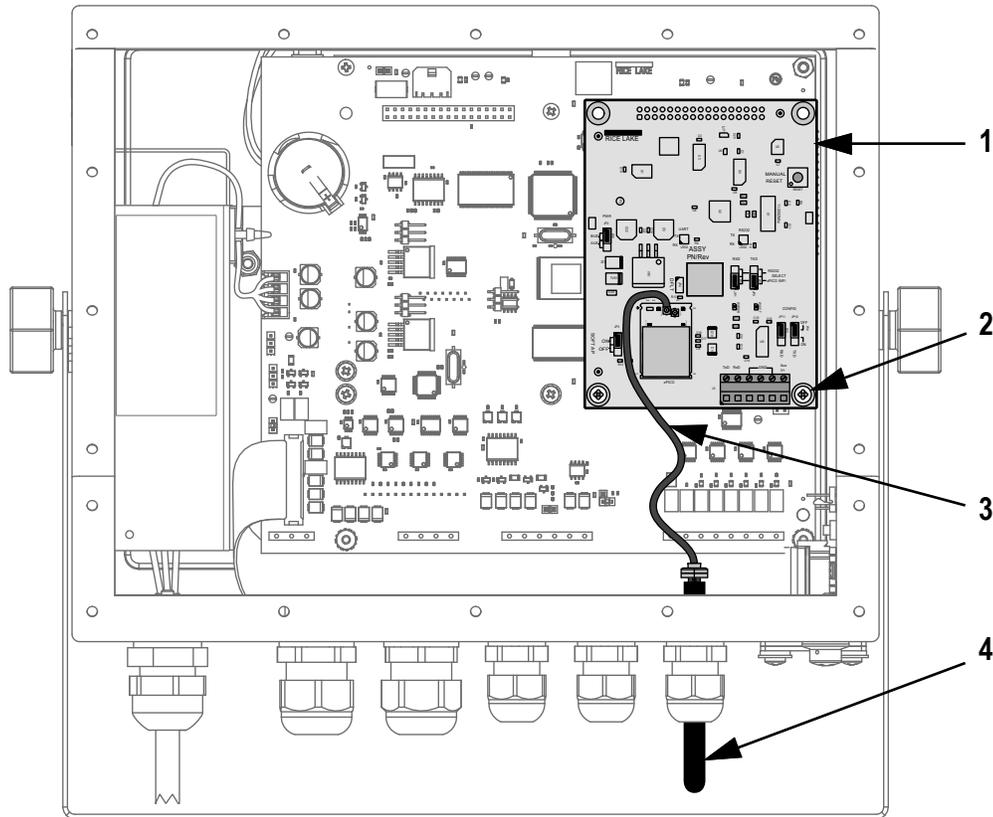


Figure 1. WLAN Option Parts Breakdown (Inside 920i Enclosure)

Item No.	Part No.	Description	Qty
1	205754	Card, Dual Wireless/RS232 xPico Device Server & RS232 Serial Interface	1
2	14822	Screw, 4-40 NC x 1/4 Phillips Pan Head with Internal Tooth Lock Washer	2
3	112228	Cable, RF UFL to RSMA, 6 Inch, Wi-Fi	1
4	98357	Antenna, 2.4 GHz 802.11B/G Lantronix Wireless Device Server Antenna	1

Table 1. WLAN Option Parts List

2 : WLAN Option Installation

The indicator automatically recognizes all installed option cards when the unit is powered on. No hardware-specific configuration is required to identify an installed option card to the system. The WLAN Option appears as a dual serial card, however, only the first serial port can be connected to the Wi-Fi module.

For Example: If option is installed into Option Slot 1, it appears as serial ports 5 and 6, however, only port 5 is available for use with the Wi-Fi module. The second port, port 6 in this example, can be configured for use as an RS232 port through the J3 connector (see [Available Serial Connection on page 5](#)).



WARNING: Electric Shock Hazard – Option card is not hot swappable.

The 920i, 820i and 720i do not have a on/off switch. Always disconnect power before opening an enclosure.



CAUTION: A grounding wrist strap must be worn to protect components from electrostatic discharge (ESD) when working inside an enclosure.

Use this procedure to install the WLAN Option card and antenna.

1. Disconnect power to the indicator and open enclosure according to the indicator's manual.
2. Carefully align the J1 connector, on the reserve side of the WLAN Option, with an available option slot connector.
3. Press down on the option card board until it is seated into the option slot connector.
4. Use the two screws provided in the option kit to secure the other end of the option card to the threaded standoffs.
5. Slide the antenna through the largest available cord grip.



NOTE: The antenna joint should be exposed and positioned to follow the travel of the indicator's tilt direction. It is recommended to expose as much of the antenna as possible to help with signal strength.

6. Connect the RP-SMA side of the antenna cable to the antenna.
7. Connect the u-FI end of the antenna cable to the Antenna 1 connection on the Wi-Fi module ([Figure 2](#)).

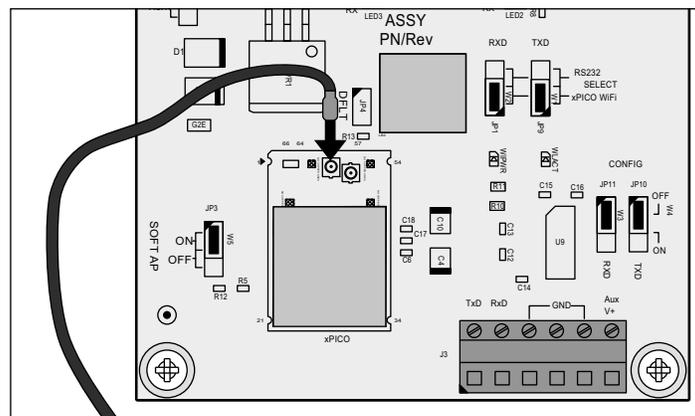


Figure 2. Antenna Connection Location



NOTE: The Antenna 1 connection is located on the centerline of the Wi-Fi module.

8. Tighten the cord grip around the antenna and torque the cord grip nut (inside enclosure) to 33 in-lb (3.7 N-m) and torque the cord grip dome nut (around cable) to 22 in-lb (2.5 N-m).

3 : Option Jumpers

Refer to [Figure 3](#) and [Table 2](#) for the jumper locations and descriptions for the WLAN Option board.

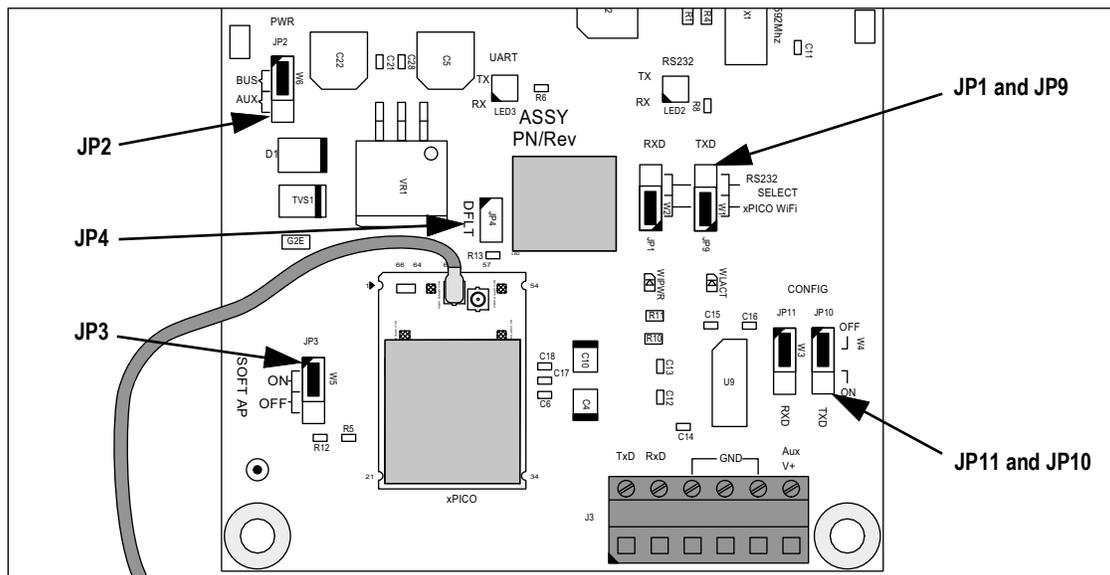


Figure 3. Jumper Locations on the WLAN Option Board

Jumper	Description
JP1 and JP9	<p>RXD/TXD Select Jumpers (RS232/xPICO Wi-Fi) – These jumpers select if RS232 is available through the second port of the option board. For most applications both the JP1 and JP9 jumpers should be in the xPICO Wi-Fi position.</p> <p>NOTE: The second port is NOT actually connected to the Wi-Fi module in the xPICO Wi-Fi position, it is simply not used.</p> <p>When the jumpers are in the RS232 position, the second port on the board is routed to the TXD/RXD connection on the J3 connector to be used as a serial port. See Available Serial Connection on page 5 for more information.</p> <p>NOTE: The jumpers must always be set in the same position. If JP1 and JP9 are in the RS232 position, then JP10 and JP11 jumpers must be in the OFF position. The JP1 and JP9 must NEVER be in the RS232 position at the same time JP10 and JP11 are in the ON position.</p>
JP2	<p>Power Jumper (BUS/AUX) – Defines where option board gets power from. If installed in an indicator option slot, the jumper must be in the BUS position to pull power from the indicator. In the rare situation where the board is mounted externally (not on the "Bus"), then the jumper needs to be in the AUX position with 6-12 VDC applied to the AUX V+ and GND Pins of the J3 connector.</p>
JP3	<p>Soft AP Jumper (ON/OFF) – This jumper can be used to Enable or Disable the Soft AP (Access Point) feature of the Wi-Fi module. See Soft AP (Access Point) on page 4 for more details on the function of the Soft AP.</p> <p>NOTE: This is an advanced feature and the jumper is not enabled by default. Contact Rice Lake if there is a need to disable the Soft AP.</p>
JP4	<p>Default Jumper – This jumper connects to the Default pin of the Wi-Fi module. This jumper can reset the module to factory OEM defaults if the user cannot do so through the Web Manager. This jumper must remain OFF for normal operation. See Wi-Fi Module Default Procedure on page 4 to reset the module to factory defaults.</p>
JP10 and JP11	<p>RXD/TXD Config Jumpers (ON/OFF) – These jumpers are used to select the connection to the Wi-Fi module.</p> <ul style="list-style-type: none"> – For normal operation: Set both JP10 and JP11 to the OFF position. This connects the Wi-Fi module to the first port on the card. – For alternative operation: Set both JP10 and JP11 to the ON position. This connects the Wi-Fi module to the J3 RS232 port. This can be used to route another serial port to the Wi-Fi connection to allow serial data communications to a port other than the two available though the bus. This connection scheme can also be used to configure the Wi-Fi module, but this is a more advanced feature not discussed in this document. Refer to the xPico 200 Series User Guide at www.lantronix.com for more information. <p>NOTE: The jumpers must always be set in the same position. If JP1 and JP9 are in the RS232 position, then JP10 and JP11 jumpers must be in the OFF position. The JP1 and JP9 must NEVER be in the RS232 position at the same time JP10 and JP11 are in the ON position.</p>

Table 2. Jumper Descriptions

4 : Reset Button

The Reset Button performs a reset and reboots the Wi-Fi module.

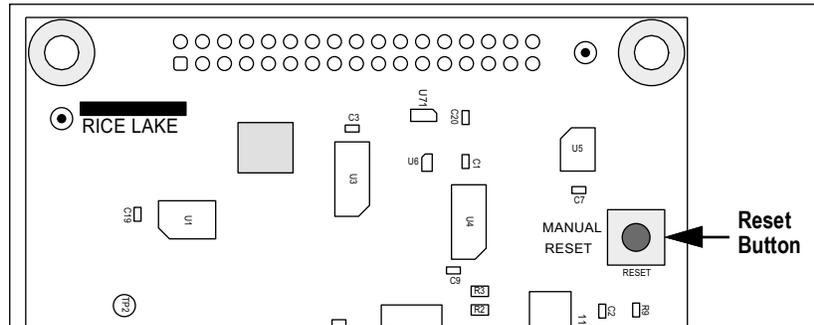


Figure 4. Reset Button Location

5 : FCC ID Label Installation

The Wi-Fi kit includes a label that lists FCC product compliance. If the Wi-Fi module is installed, apply the included FCC ID label to the outside of the LaserLight3 enclosure.

1. Determine the best location for the label that will not inhibit operation (typically the back of the device).



IMPORTANT: The label must be installed on the exterior of the device.

2. Clean the mounting surface with mild detergent and a soft cloth.
3. Dry the surface.
4. Peel off the protective backing and apply the label to the desired area.
5. Apply even pressure to label for 15 seconds to ensure it properly adheres to the surface.

6 : Wi-Fi Module Default Procedure

The JP4 DFLT jumper can be used to reset the configuration of the Wi-Fi module to factory OEM defaults.

1. With the board up and running, apply a shorting shunt to the DFLT pins for at least six seconds. See [Option Jumpers on page 3](#) for the jumper's location.
2. The WiPWR LED starts to flash. See [Wi-Fi Setup on page 6](#) for the LED's location.
3. Remove the shorting shunt from the DFLT pins. The Wi-Fi module is now defaulted.



NOTE: Defaulting the Wi-Fi module does not reset the Wi-Fi connections, but enables a disabled Soft AP to allow access to the configuration. This jumper, along with the reset switch, can also allow the module to boot into command line mode. This is an advanced function not discussed in this document. Refer to the *xPico 200 Series User Guide* at www.lantronix.com for more information.

7 : Soft AP (Access Point)

The recommended method to configure the WLAN Option to connect to a location's network is to use the built-in Web Manager. The preferred method to access the built-in Web Manager, before the WLAN Option is on the location's network, is to use the built-in Soft AP and do the configuration needed to connect to the network (see [Wi-Fi Setup on page 6](#)).



NOTE: The card can be configured using RS232 through the J3 connector, but by default, the module is not set up to do this, and would need to be booted into the command line mode to do so. This is an advanced function not discussed in this document. Refer to the *xPico 200 Series User Guide* at www.lantronix.com for more information.

Soft AP as the WLAN Connection

In applications that don't have a local network to connect to or if the network is not in range, the Soft AP connection can also be used to talk to an indicator using the WLAN Option by connecting to IP 192.168.0.1, port 10001.

10 : Wireless Configuration

Configuration of the wireless settings is done through the WLAN Option's built-in Web Manager. If already connected to a network, a web browser on that network can connect to the Web Manager by simply navigating to the WLAN Option's IP Address.

If not already connected to a network, or configuration through the network is not desired/available, then the Web Manager may be accessed through the WLAN Option's Soft AP. By default, the option's Soft AP is available any time the card is powered up.

Soft AP (Access Point) Details

- Name: **RLWS_XXXXXX**
- Password: **PASSWORD**
- Configuration Page: **http://192.168.0.1**



NOTE: The Soft AP only shows up as a 5 GHz network. The connecting device must be capable of using the 5 GHz band to connect to the Soft AP.

11 : Wi-Fi Setup

The following procedure is for setting up the WLAN Option's Wi-Fi network using the WLAN Option's built-in Web Manager.

1. Power on the indicator and wait for the WiPWR LED to light solid. See [Figure 6](#) for the LED's location.


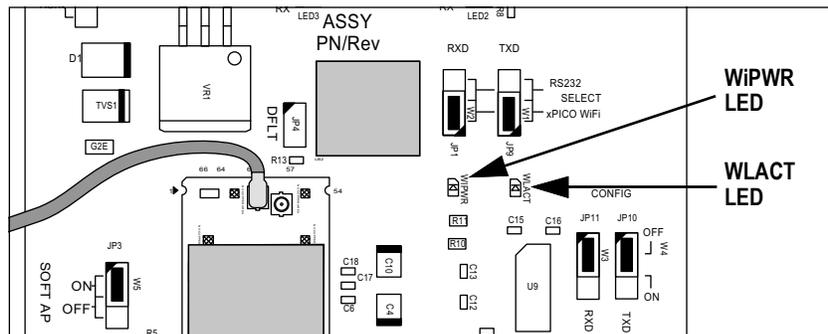


Figure 6. Wi-Fi LED Locations

2. Scan for available Wi-Fi networks using a computer or phone and connect to the Soft AP. It might take a few attempts before the Soft AP appears on the computer or phone.
 - Soft AP Name: **RLWS_XXXXXX**
 - Soft AP Password: **PASSWORD**



IMPORTANT: It is recommended to change default passwords to limit access and for security.

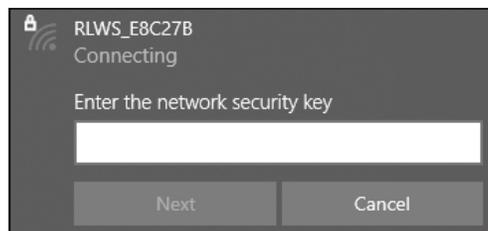

NOTE: The X's in the name represent the last 6 digits of the Wi-Fi MAC address. The serial number on the Wi-Fi module's label is almost the same, other than the last digit being one number/character less than the Wi-Fi MAC address.

For example, if the module's serial number is "0080A3E8C27A", then the SSID would be "RLWS_E8C27B". The MAC address is a Hexadecimal value, so the letter A follows the number 9, and this continues to F before incrementing the next most significant digit and returning to 0.

- Once connected to the Soft AP, use a web browser and enter **192.168.0.1** as the URL address and press **Enter**.



NOTE: Once connected to a network, a web browser on that network can connect to the Web Manager by simply navigating to the WLAN Option's IP Address (available on the Status page of the Web Manager).

- Enter the default login credentials for the Web Manager.
 - Username: **admin**
 - Password: **PASSWORD**



IMPORTANT: It is recommended to change default passwords to limit access and for security.

- Press **Sign in**. The Web Manager loads in the browser and the **Status** page appears.
- Click **QuickConnect** at the top of the left nav.

- A list of wireless networks appear. Click the network name intended to connect the WLAN Option's Wi-Fi network to.



NOTE: If the necessary network does not show up, just click the Scan button again. It may take a few tries to show the network. If the network is hidden, enter the network name in the box provided.

Network Name	BSSID	Ch	RSSI	Security Suite
ABC Wifi 5G	3C:7C:3F:63:F2:84	36	-34	WPA2-CCMP
ABC Wifi	3C:7C:3F:63:F2:81	4	-36	WPA2-CCMP
ABC Wifi 5G	3C:7C:3F:63:EC:34	36	-64	WPA2-CCMP



NOTE: The Web Manager provides notes and information related to the current page in the far right column. Descriptions for options and settings are also provide when hovering over the item in question.

8. The wireless network information page appears. Enter the network password (if applicable).



NOTE: Contact location's IT administrator to obtain network credentials as needed based on the security that is in place.

QuickConnect | **WLAN Profile "ABC_Wifi_5G"** | admin [Logout]

Use the Apply button to try out settings on the WLAN without saving them to Flash. If the settings do not work, when you reboot the device, it will still have the original settings. Use the Submit button to update the WLAN settings and save them to Flash.

Connect To	
Network Name (SSID):	ABC_Wifi_5G
BSSID:	3C:7C:3F:63:F2:84
Security Suite:	WPA2-CCMP
Signal Strength:	-34

Security	
WPAx IEEE 80211r:	<input type="radio"/> Enabled <input checked="" type="radio"/> Disabled
Key Type:	<input checked="" type="radio"/> Passphrase <input type="radio"/> Hex
Password:	<input type="text"/>

Advanced

Apply Submit

9. Click **Submit** to apply and save the settings. A message displays at the top of the page to show if the new network's Profile saved successfully. It does not necessarily mean it is connected to the network.



NOTE: The Apply button only applies the settings for the current session, but does NOT save them.

10. To verify that the WLAN Option is connected to the location's network, click **Status** near the top of the left nav.

QuickConnect | **WLAN Profile "ABC_Wifi"** | admin [Logout]

Use the Apply button to try out settings on the WLAN without saving them to Flash. If the settings do not work, when you reboot the device, it will still have the original settings. Use the Submit button to update the WLAN settings and save them to Flash.

Changed WLAN Profile New_Profile Instance to "ABC_Wifi".
 Changed WLAN Profile New_Profile Basic Network Name to "ABC_Wifi".
 Changed WLAN Profile New_Profile Security Suite to "WPA2".
 Changed WLAN Profile New_Profile Security WPAx Passphrase to "<Configured>".
 The changes have been saved permanently.

11. The **Status** page shows all of the network connections on the device under **Network Settings**.

Radio	Network Settings	
Tunnel	Interface ap0	
User	MAC Address:	02:80:A3:E8:C2:7B
WLAN Profiles	State:	Up
	SSID:	xPico240_E8C27A
	Security Suite:	WPA2
	IP Address:	192.168.0.1/24
	Interface eth0	
	MAC Address:	00:80:A3:E8:C2:7A
	State:	Down
	Interface wlan0	
	MAC Address:	00:80:A3:E8:C2:7B
	Connection State:	Connected
	Active WLAN Profile:	ABC_Wifi
	Hostname:	
	IP Address:	192.168.50.24/24
	Default Gateway:	192.168.50.1

- If Connected: **Interface wlan0** is listed with **Connection State** showing **Connected** and the **IP Address** populated. The WLACT LED on the card also lights when connected to a network (Figure 6 on page 6).



NOTE: The "/24" at the end of the IP Address indicates the number of bits set for the network subnet mask and is not part of the IP Address itself. There are 32 bits in a subnet mask and "/24" indicates the subnet mask is 255.255.255.0.

- If Not Connected: Click **WLAN Profiles** at the bottom of the left nav to change the network settings and try again.

12. Connecting to the Wi-Fi module's server with a remote client is now possible.



NOTE: By default, the Wi-Fi module is configured as an RS232 to WLAN tunnel for serial communication.

In the indicator's configuration, the port's Baud Rate, Bits, and Parity settings must match the Wi-Fi module's settings. The Wi-Fi module's default settings are 9600 (Baud Rate), 8 (Data Bits), and None (Parity). Other indicator settings, such as the port's Function, Echo, and Response can be changed as needed.

See [Serial Port Settings](#) to change the Wi-Fi module's default settings using the Web Manager.

13. Using a Terminal Emulation program, such as Putty, as a remote client connection to the Wi-Fi module's server over Telnet is possible using the IP Address that was noted in [Step 11 on page 8](#) and the Local Port number, which by default is 10001.

Basic options for your PuTTY session

Specify the destination you want to connect to

Host Name (or IP address) Port

Connection type:

Raw Telnet Rlogin SSH Serial

Figure 7. Putty Example



NOTE: If the card's IP address changed and there is no longer access to the card through the location's wireless network, connect to the Soft AP and use the Web Manager to learn the new IP Address.

If the Web Manager cannot be reached through the location's wireless network or the Soft AP, the card needs to be defaulted. See [Wi-Fi Module Default Procedure on page 4](#).



NOTE: For more information on all the features of this card, visit www.lantronix.com to view the xPico 200 Series User Guide.


12 : Serial Port Settings

The following procedure is for changing the Wi-Fi module's settings to match the product's serial port settings using the Web Manager. The Wi-Fi module's settings of Baud Rate, Data Bits, and Parity must match the product's serial port settings.




NOTE: For example, the port's baud rate for the iQUBE² is set at 115200 by default, so the Wi-Fi module setting for baud rate must be changed to match when using the WLAN Option in a 920i with an iQUBE².

1. Refer to [Steps 1-5 in Wi-Fi Setup on page 6](#) to sign in to the Web Manager.
2. Click **Line** in the left nav.

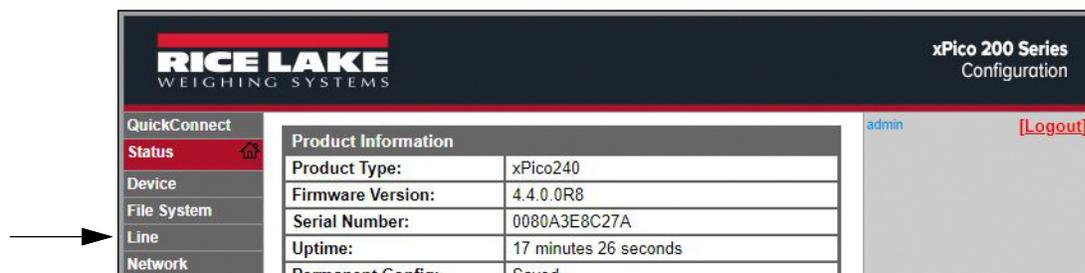

3. Click **Configuration** towards the top of the **Line 1 Status** page.

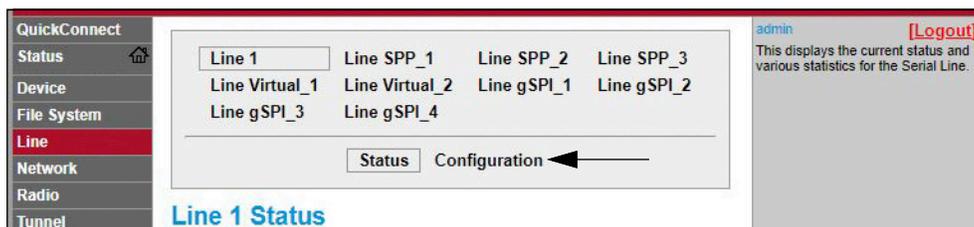

- Use drop-down options to change **Line 1 Configuration** settings as needed to match the product's serial port settings.

Configuration		Status
Name:	<input type="text"/>	
Interface:	RS232	
State:	<input checked="" type="radio"/> Enabled <input type="radio"/> Disabled	Enabled
Protocol:	Tunnel	Tunnel
Baud Rate:	115200 bits per second	9600 bits per second
Parity:	None	None
Data Bits:	8	8
Stop Bits:	1	1
Flow Control:	None	None

- Click **Submit** at the bottom of the page to apply and save the settings. A message displays at the top of the page to confirm the changes have been saved permanently.

13 : Server Configuration

The Wi-Fi module is configured to be a server by default, with the ability to accept the connection of a client to it.

- A **Server** is waiting to **Accept** a connection from a Client.
- A **Client** is looking to **Connect** to a remote Server (host).



NOTE: Even though a device can be set up for both, typically it is only set up as one or the other.

The following procedure shows where the Wi-Fi module's server settings are found using the Web Manager.



NOTE: Making changes to the Tunnel 1 Accept Configuration settings may impact the Wi-Fi module's connection to the location's network, established in [Wi-Fi Setup on page 6](#).

- Refer to [Steps 1-5 in Wi-Fi Setup on page 6](#) to sign in to the Web Manager.
- Click **Tunnel** in the left nav.

Product Information	
Product Type:	xPico240
Firmware Version:	4.4.0.0R8
Serial Number:	0080A3E8C27A
Uptime:	17 minutes 26 seconds
Permanent Config:	Saved

- Click **Accept** towards the top of the **Tunnel 1 Status** page.

Tunnel 1	Tunnel SPP_1	Tunnel SPP_2	Tunnel SPP_3
Tunnel Virtual_1	Tunnel Virtual_2	Tunnel gSPI_1	Tunnel gSPI_2
Tunnel gSPI_3	Tunnel gSPI_4		

Line Packing

- Change the **Mode** and **Local Port** settings if needed.

Tunnel 1 Accept Configuration

Mode:	Always
Local Port:	10001
Multiple Connections:	<input type="radio"/> Enabled <input checked="" type="radio"/> Disabled
Protocol:	TCP
Flush Line:	<input type="radio"/> Enabled <input checked="" type="radio"/> Disabled
Block Line:	<input type="radio"/> Enabled <input checked="" type="radio"/> Disabled
Block Network:	<input type="radio"/> Enabled <input checked="" type="radio"/> Disabled
Password:	

- Click **Submit** at the bottom of the page to apply and save the settings. A message displays at the top of the page to confirm the changes have been saved permanently.

14 : Client Configuration

The Wi-Fi module is configured to be a server by default, with the ability to accept the connection of a client to it.

- A **Server** is waiting to **Accept** a connection from a Client.
- A **Client** is looking to **Connect** to a remote Server (host).

The following procedure is for configuring the Wi-Fi module as a client, using the Web Manager, to be able to connect the Wi-Fi module to an available server connection.

- Refer to [Steps 1-5 in Wi-Fi Setup on page 6](#) to sign in to the Web Manager.
- Click **Tunnel** in the left nav.

RISE LAKE WEIGHING SYSTEMS xPico 200 Series Configuration

admin [Logout]

QuickConnect

Status

Device

File System

Line

Network

Radio

Tunnel

User

Product Information

Product Type:	xPico240
Firmware Version:	4.4.0.0R8
Serial Number:	0080A3E8C27A
Uptime:	17 minutes 26 seconds
Permanent Config:	Saved

Network Settings

Interface ap0

MAC Address: 02-80-A3-E8-C2-7B

- Click **Connect** towards the top of the **Tunnel 1 Status** page.

Tunnel 1 Status

Tunnel 1	Tunnel SPP_1	Tunnel SPP_2	Tunnel SPP_3
Tunnel Virtual_1	Tunnel Virtual_2	Tunnel gSPI_1	Tunnel gSPI_2
Tunnel gSPI_3	Tunnel gSPI_4		

Status Line Packing

Accept Connect **Reconnect**

admin [Logout]

This displays all the Tunnel Status both as an Aggregate and broken down by active Accept and Connect tunnels.

- Use the drop-down to change the **Mode** setting, and then click **[Edit]** to display available **Host 1** settings.



NOTE: The Web Manager provides notes and information related to the current page in the far right column. Descriptions for options and settings are also provide when hovering over the item in question.

Tunnel	Accept	Connect	Disconnect
User			
WLAN Profiles	Tunnel 1 Connect Configuration		
Mode:	Disable		
Host 1:	<None>		[Edit]
Connections:	Sequential		
Reconnect Time:	15 seconds		

Mode may be "Disable", "Always", "Any Character", "Start Character" or "Modem Control Asserted".
 A Connect Tunnel can be started in a number of ways, according to its Mode:
 "Disabled": never started.
 "Always": always started.
 "Any Character": started when any character is read on the Serial Line.
 "Start Character": started when the Start Character is read on the Serial Line.

- Set the **Address** and **Port** as needed to connect to the intended available server connection.

Tunnel	Accept	Connect	Disconnect
User			
WLAN Profiles	Tunnel 1 Connect Configuration		
Mode:	Any Character		
Host 1 [Summary]			
Address:	XXX.XXX.XXX.XXX		
Port:	XXXX		
Protocol:	TCP		
Initial Send:			
Local Port:	<Random>		

- Click **Submit** at the bottom of the page to apply and save the settings. A message displays at the top of the page to confirm the changes have been saved permanently.



NOTE: While the Wi-Fi module's server is still available, it is necessary to adjust the server and client mode settings to allow both to function in unison. Even though a device can be set up for both, typically it is only set up as one or the other. Refer to the xPico 200 Series User Guide at www.lantronix.com for more information.

15 : Timeout Configuration


The Wi-Fi module has an optional Disconnect feature that can be configured to break a connection after a set amount of time. This feature applies to both server and client connections.

The following procedure shows where the Wi-Fi module's timeout setting is found using the Web Manager.


- Refer to [Steps 1-5 in Wi-Fi Setup on page 6](#) to sign in to the Web Manager.
- Click **Tunnel** in the left nav.

RICE LAKE WEIGHING SYSTEMS		xPico 200 Series Configuration	
QuickConnect			admin [Logout]
Status	Product Information		
Device	Product Type:	xPico240	
File System	Firmware Version:	4.4.0.0R8	
Line	Serial Number:	0080A3E8C27A	
Network	Uptime:	17 minutes 26 seconds	
Radio	Permanent Config:	Saved	
Tunnel	Network Settings		
User	Interface ap0		
	MAC Address:	02-80-A3-E8-C2-7B	

- Click **Disconnect** towards the top of the **Tunnel 1 Status** page.

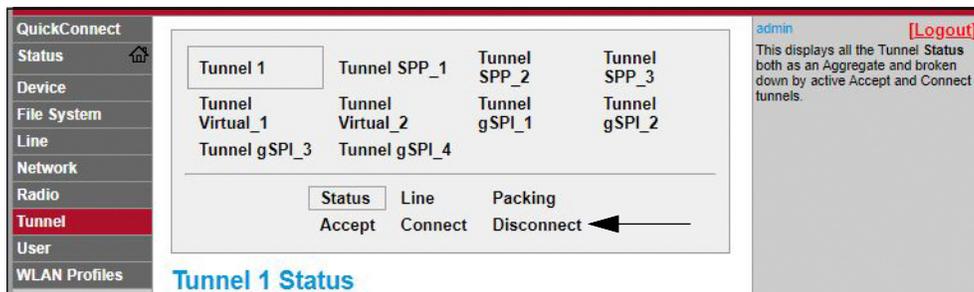

- Enter the desired value in milliseconds for the **Timeout** setting. A value entry of 0 disables the Disconnect feature.

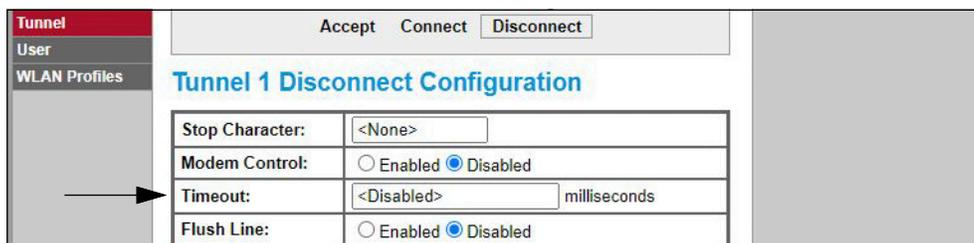

- Click **Submit** at the bottom of the page to apply and save the settings. A message displays at the top of the page to confirm the changes have been saved permanently.

16 : Wi-Fi Module Specifications

The WLAN Option features a Lantronix® xPico 200 Series Wi-Fi module. Visit www.lantronix.com to view the latest list of technical specifications on the Wi-Fi module.

Wireless Specifications

- IEEE 802.11 a/b/g up to 54 Mbps; 802.11 n (1×1) up to 150 Mbps
- 20 and 40 MHz channel width with optional SGI
- Dual Band 2.4 GHz and 5 GHz, Channels 1-13, UNII-1, 2a, 2e and 3
- Supports IEEE 802.11 d/h/i
- 802.11r fast roaming

Data Communication

- TruPort® Serial Technology— TCP and UDP Server Mode, TCP and UDP Client Mode, Multi-host Connect; TLS Client and Server
- TruPort® Socket— Multi-host Client and Server Modes, HTTP(S), Sockets, TLS
- Authenticated SMTP Support— Send email directly from device

Security and Authentication

- TruPort® Security Software
 - Secure Boot, Secure Firmware-Over-the-Air (FOTA) Updates
 - Secure Key Storage, Encrypted Configuration
 - Secure Connections with SSL/TLS, HTTPS
 - Software Controlled Network Service Ports Enable/Disable
 - Role Based Access Control
- AES/CCMP and TKIP encryption, WPA/WPA2 Personal
- WPA2 Enterprise (EAP-TLS, EAP-TTLS, EAP-PEAP, EAP-FAST)
- SSLv3/TLS 1.2 with PKI and X.509 Certificates (up to 4096-bit Keys)
- AES Algorithm, 256-bit, 192-bit, 128-bit

Wi-Fi Module Specifications Continued

Management Interfaces

- Lantronix ConsoleFlow™ Cloud Software Platform, REST, MQTT
- Lantronix Discovery Protocol (77FE)
- Serial Port, Internal Web Server (HTTP/HTTPS)
- XML Configuration and XML Status (CLI, API)
- Secure Firmware Upgrade via HTTPS, ConsoleFlow™

Protocol Support

- DHCP Client, Server (Soft AP), HTTP Server/Client
- IPv4, TCP/IP, UDP/IP, ARP, ICMP, Auto-IP, DNS
- SNMP v1/v2
- IPv6

Wireless Features

- Concurrent Soft AP + STA (Client), Client, Soft AP
- Up to 5 simultaneous client connections to Soft AP interface
- Up to 4 in Concurrent Mode
- Connect to multiple WLAN networks, WLAN QuickConnect

Certifications & Compliance

- Type Approvals: USA (FCC Part 15), Canada (IC RSS), EU (RED), Japan (MIC), China (SRRC), AU/NZS
- Safety: IEC 62368 EN 62368, EN 62311, UL 60950
- RoHS, REACH
- FCC ID: R68XPICO200
- CMIIT ID: 2017AJ6663(M)



© Rice Lake Weighing Systems Content subject to change without notice.

230 W. Coleman St. • Rice Lake, WI 54868 • USA USA: 800-472-6703 • International: +1-715-234-9171